

Dear Pet Lover,

Thank you for choosing GuineaLoft™ Model-ET (Large)!

Need Help? Missing or Broken Parts? Email us:

**GUINEALOFT@GMAIL.COM**

Scan the QR Code to find How to Install video.




### REMEMBER TO PEEL



Use a scraper.




Scratch up an edge.

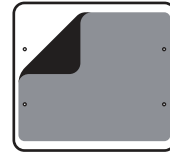


Peel off the unclear protection film.


### PACKING LIST

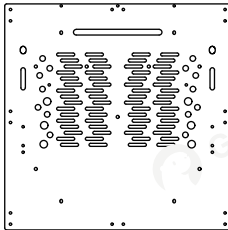


Side Panel x 1

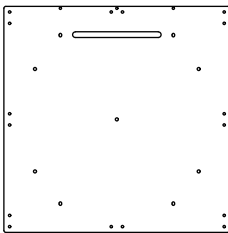


Clear Front/Back Panels x 3

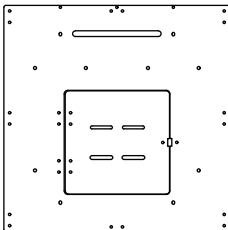


Door Panel Set x 1

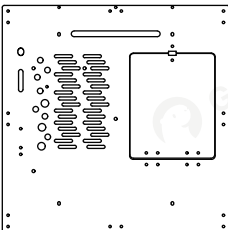

Side Door Panel x 1

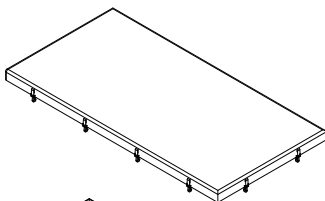

Translucent Gauze Cover x 1

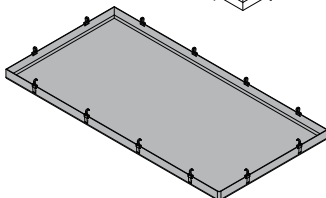

Canvas Bottom x 1



M5 6mm Screws x 68




M6 12mm Screws x 8



M6 12mm Gaskets x 8




M6 16mm Beam Joint Screws x 4

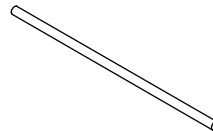


Multi-purpose Beams x 8




L2 Brackets x 12



L4 Brackets x 4




F4 Brackets x 2



H4 Hinges x 4




Thumb Screw x 2




F2 Brackets x 4

## HOW TO INSTALL

1

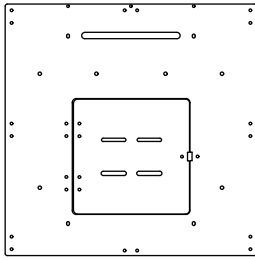

x 1




x 2



x 8


M5 6mm Screws

Handle Side Up

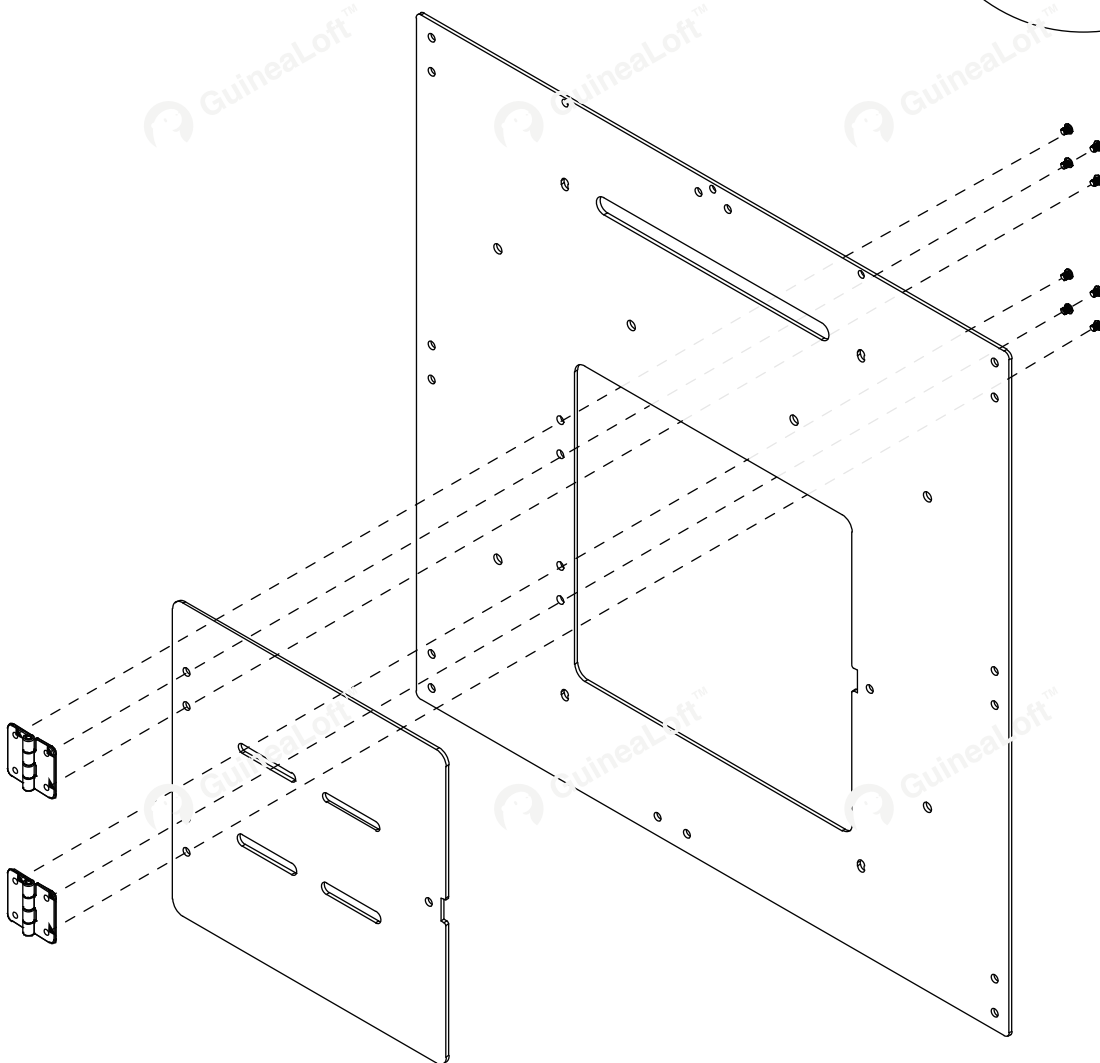


## HOW TO INSTALL

2







M5 6mm Screws

Handle Side Up


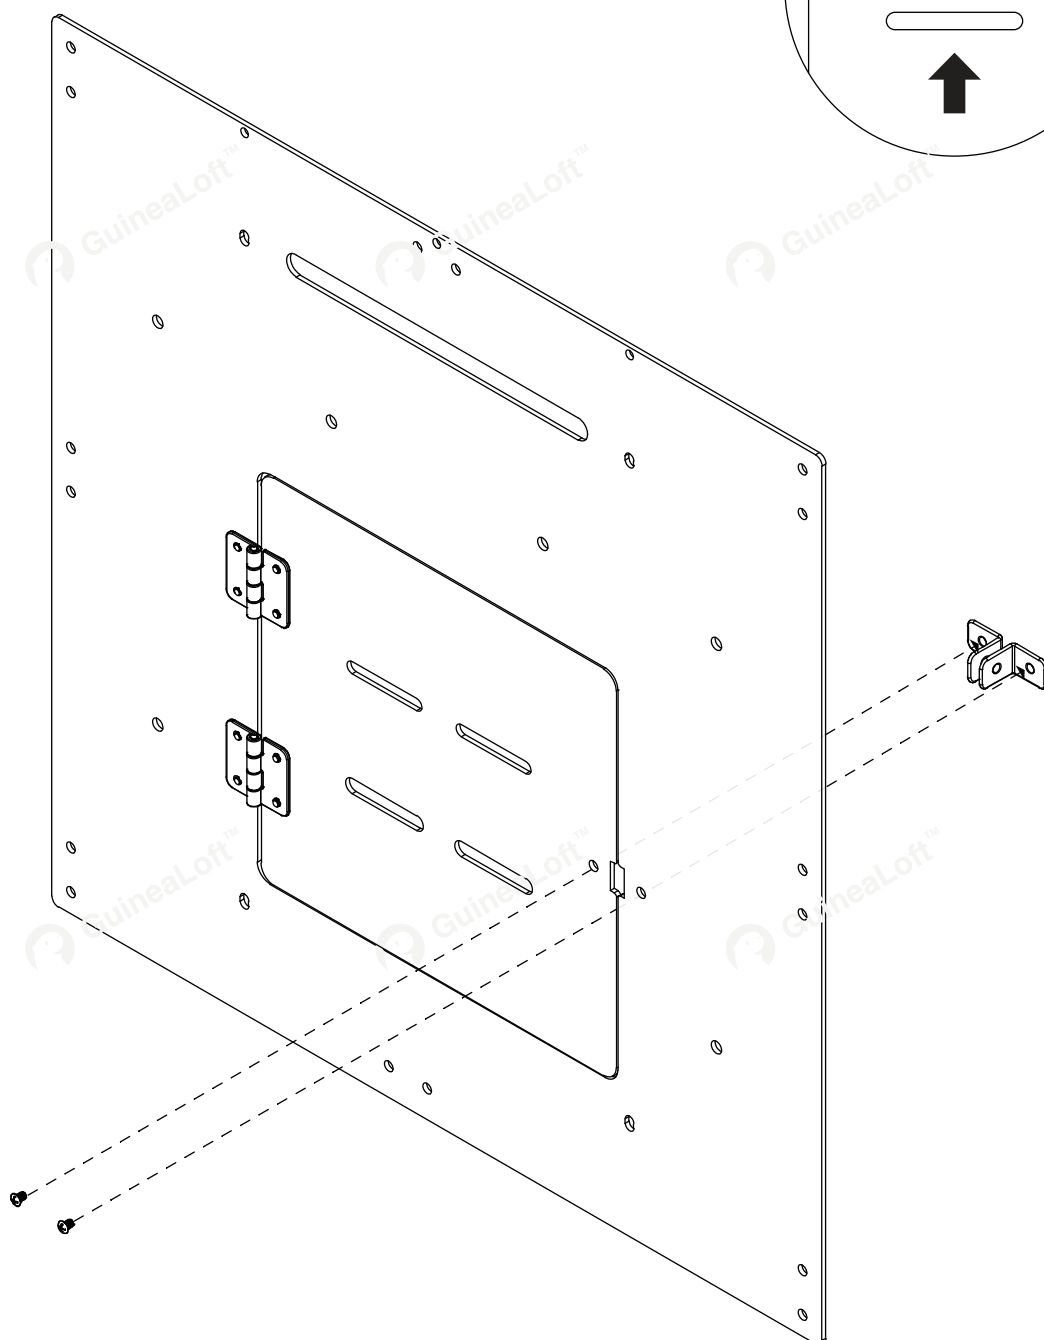


## HOW TO INSTALL

3





M5 6mm Screws

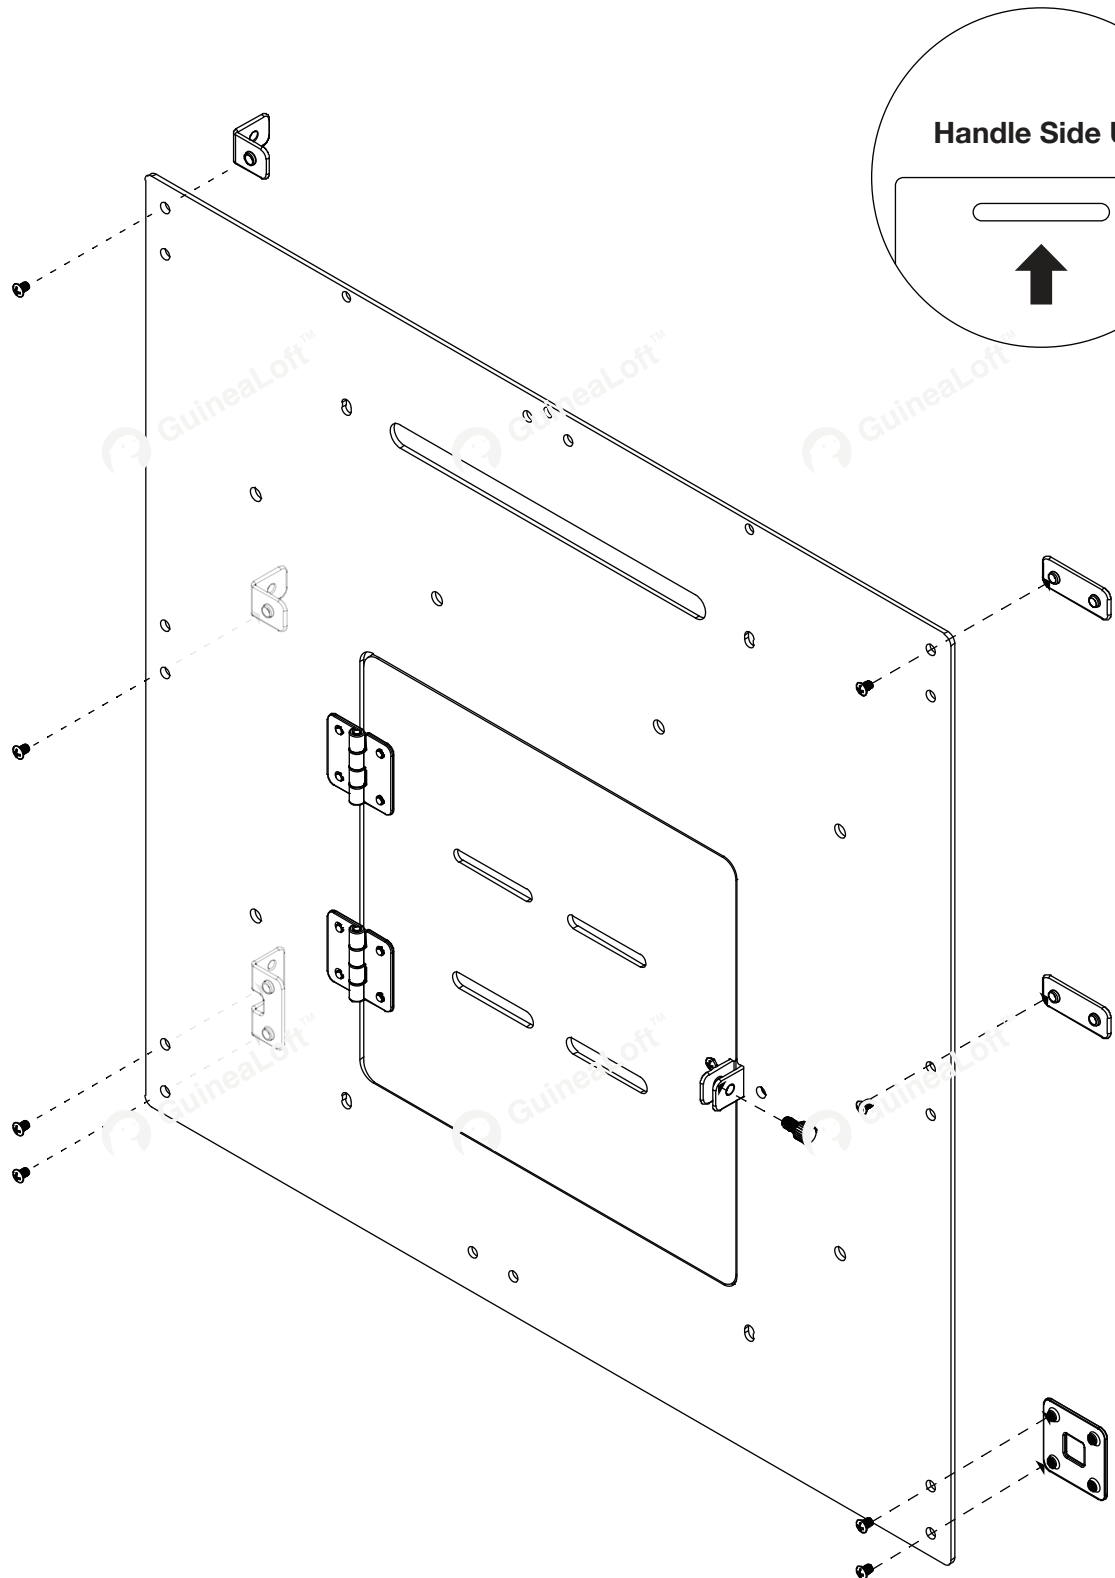


## HOW TO INSTALL


4

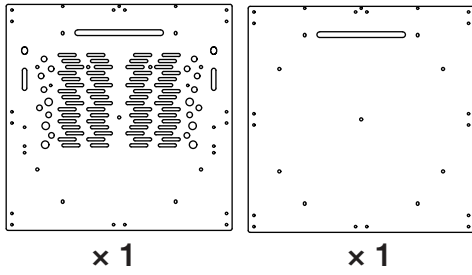

x1



x1



x2





x16




x2

M5 6mm Screws

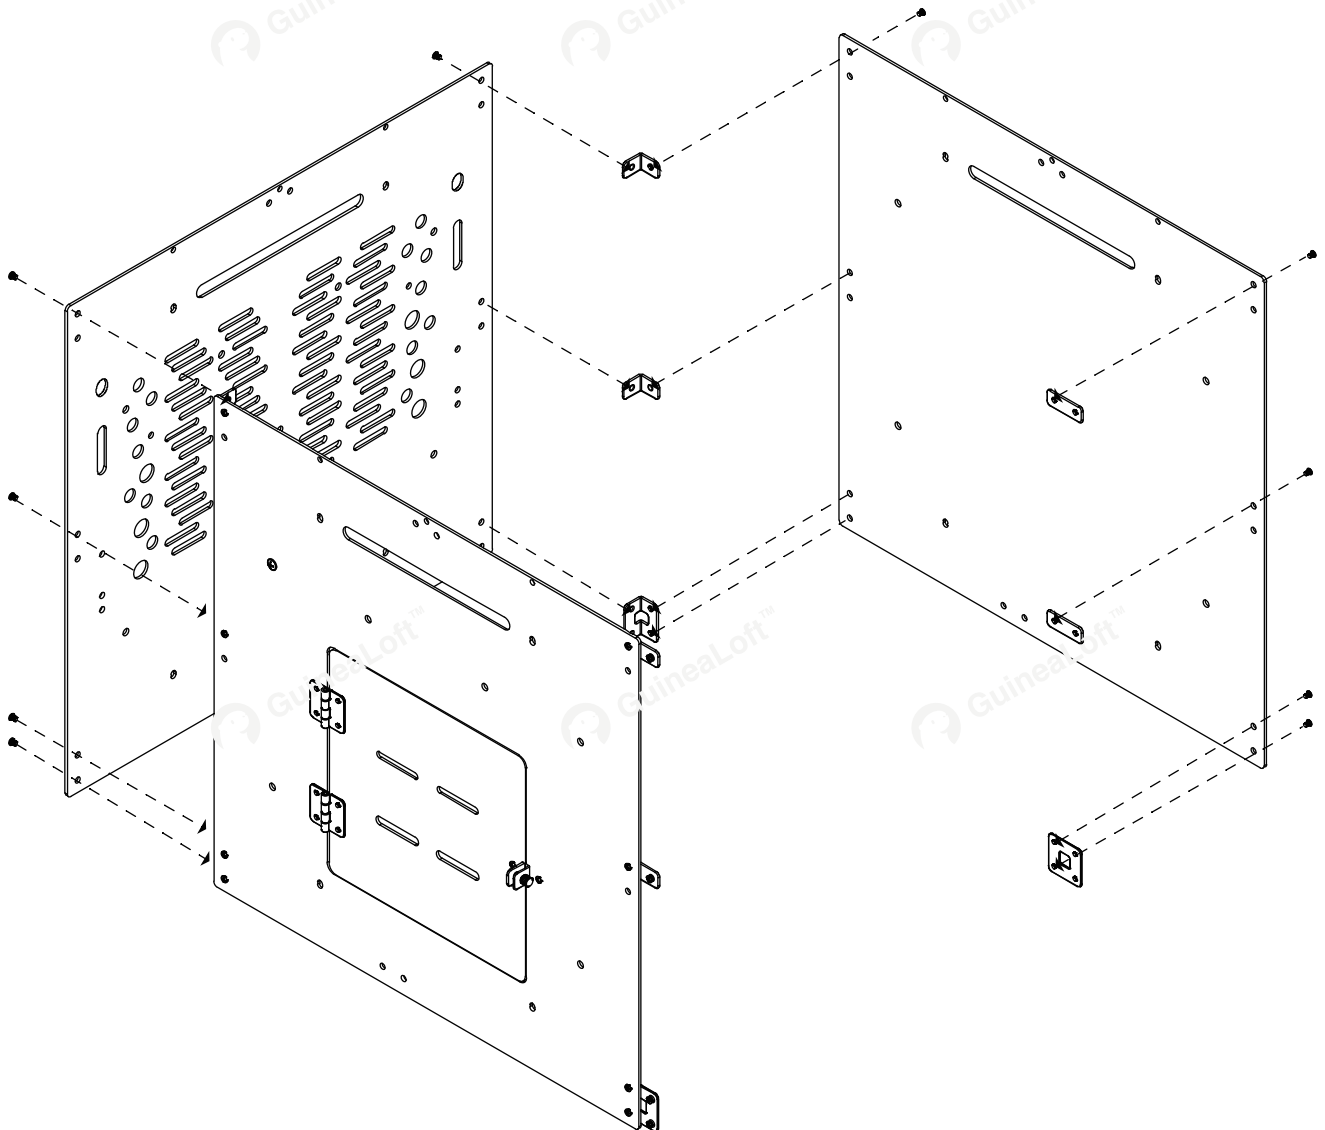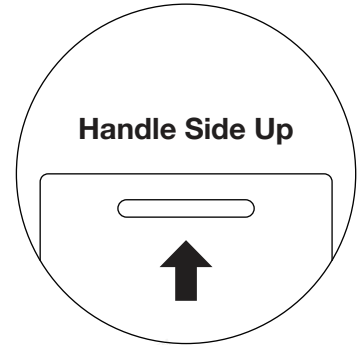


## HOW TO INSTALL

5

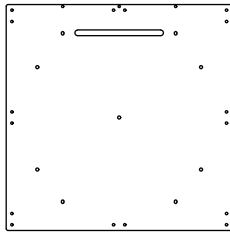

x 1



x 1




x 2



x 8


M5 6mm Screws

Handle Side Up

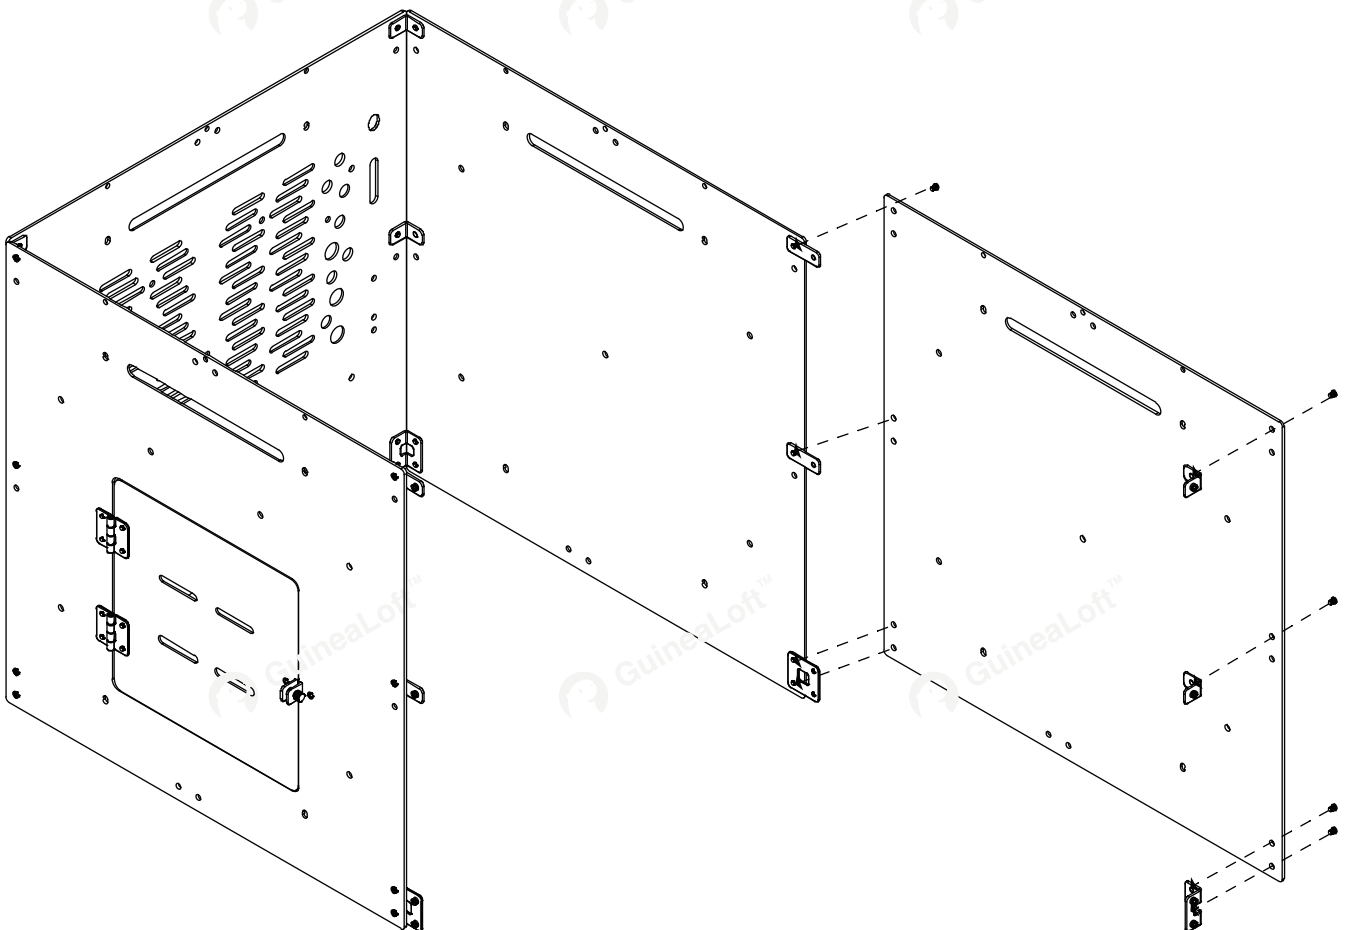


## HOW TO INSTALL

6

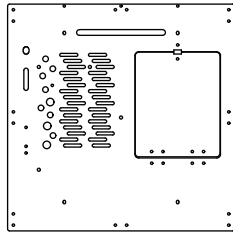

x 1




x 2



x 8


M5 6mm Screws

Handle Side Up

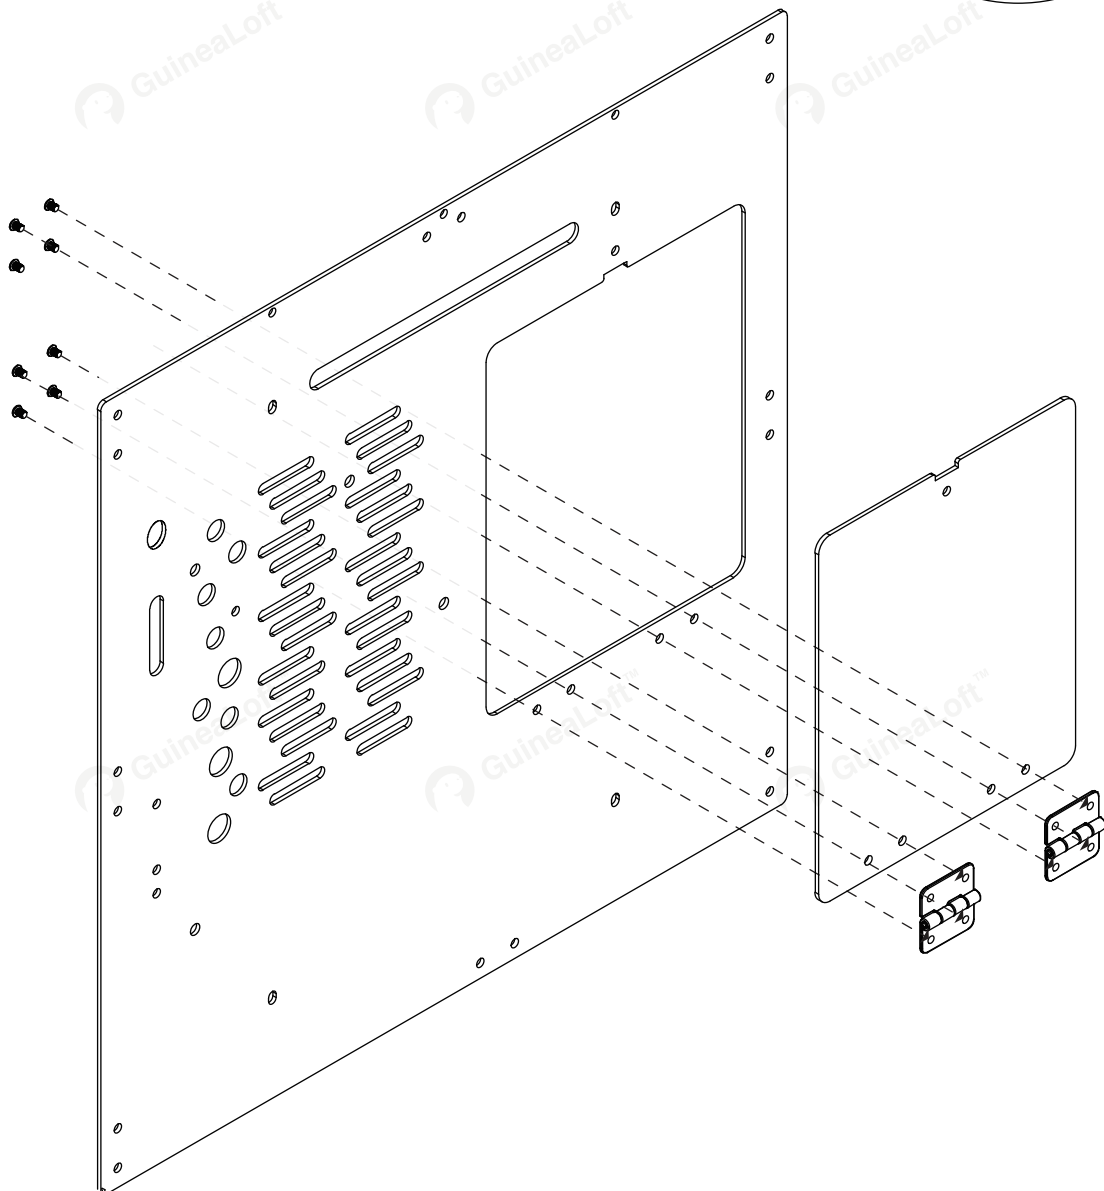


## HOW TO INSTALL

7



M5 6mm Screws


Handle Side Up

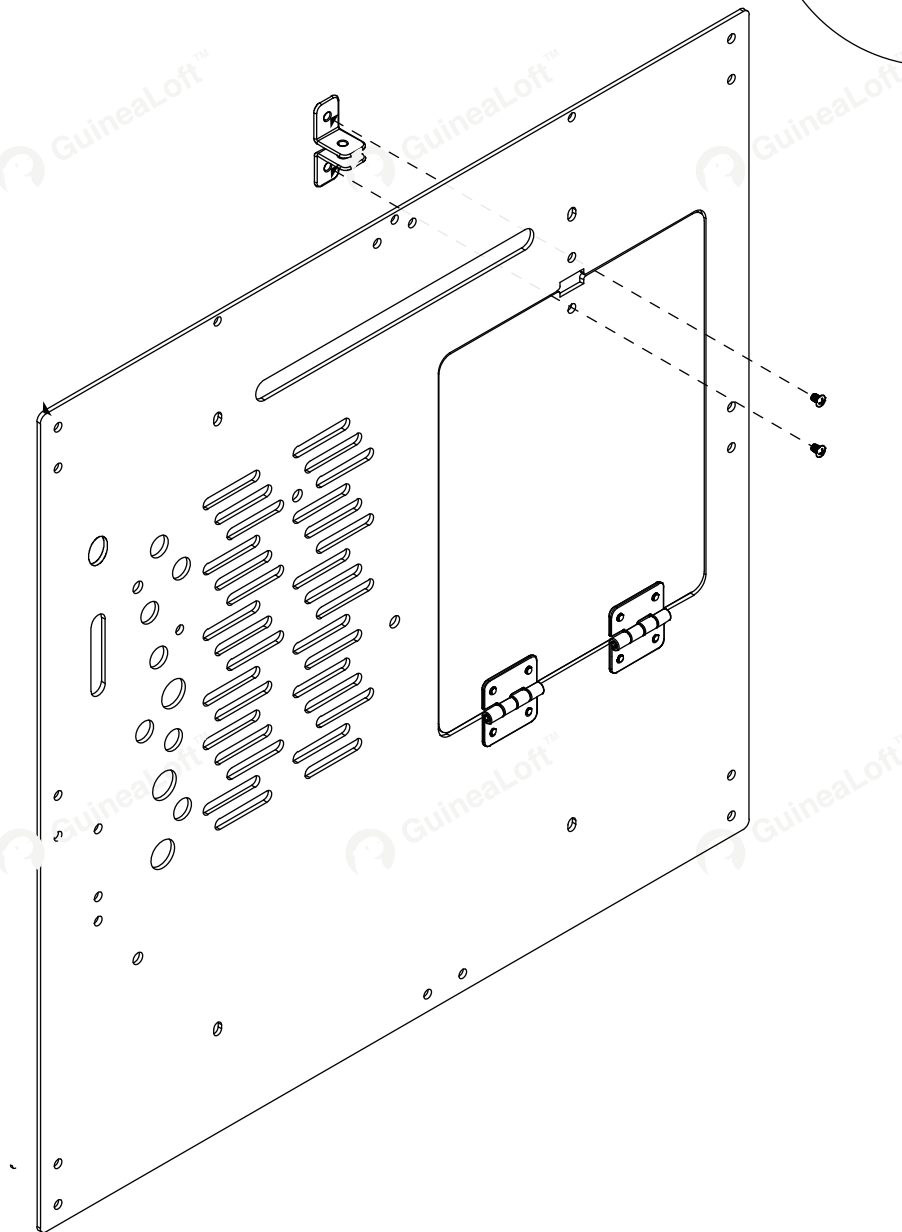




## HOW TO INSTALL


8

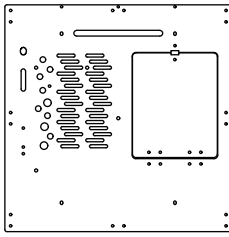

x 1

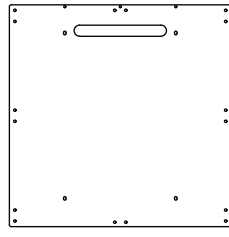

x 1



x 1



x 16



M5 6mm Screws



x 4




x 1

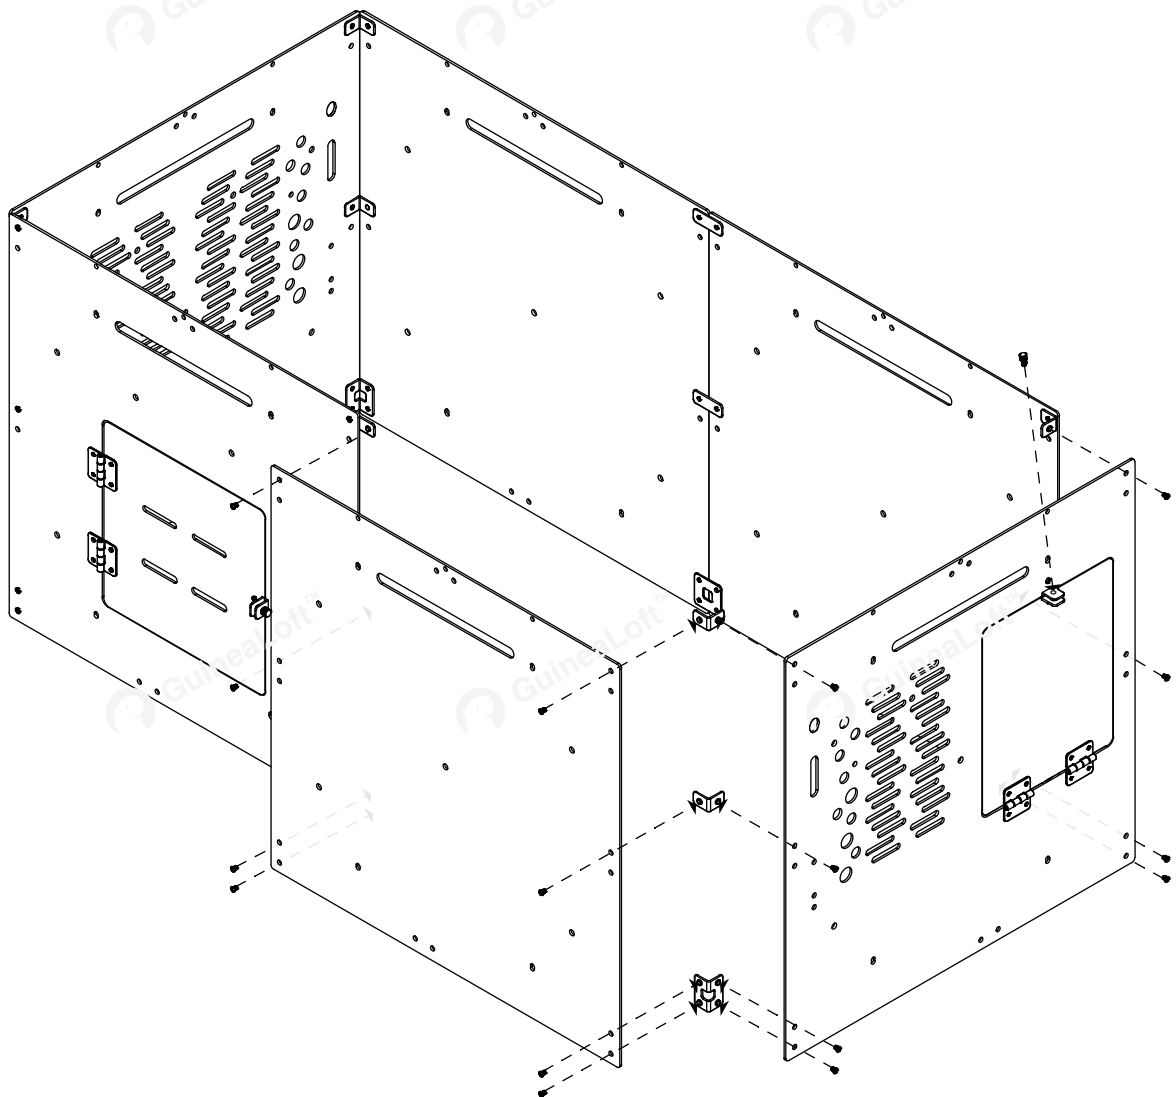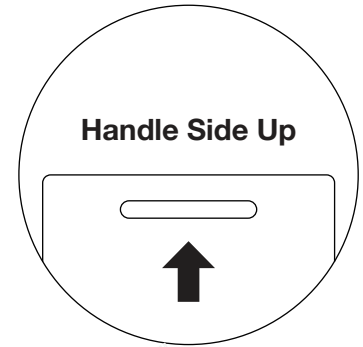

## HOW TO INSTALL

9

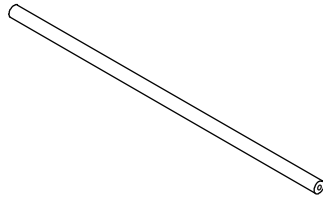

x 8



x 4




x 8




x 8

M6 12mm Screws

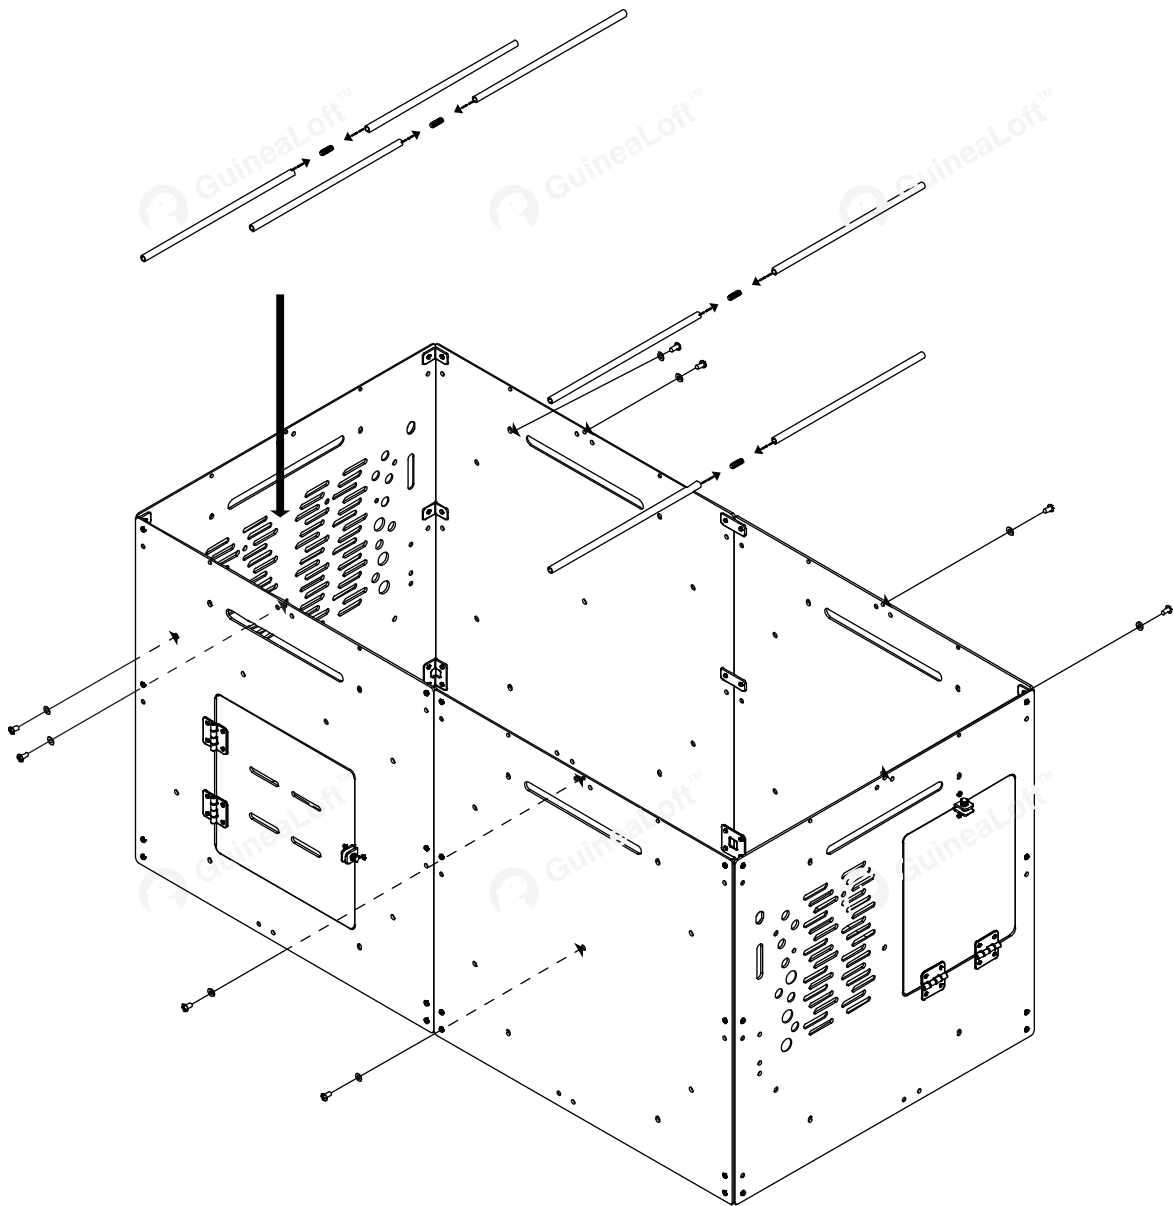


## HOW TO INSTALL

10

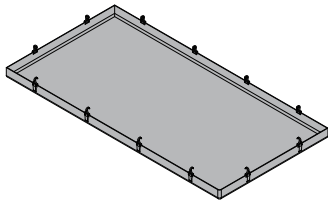



x 1

Canvas Bottom

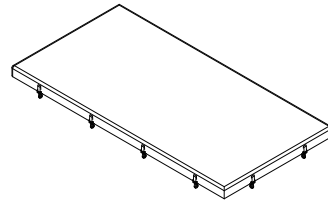


x 1

Translucent Gauze Cover

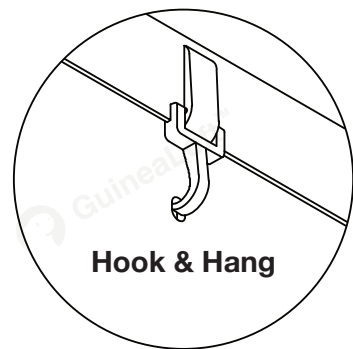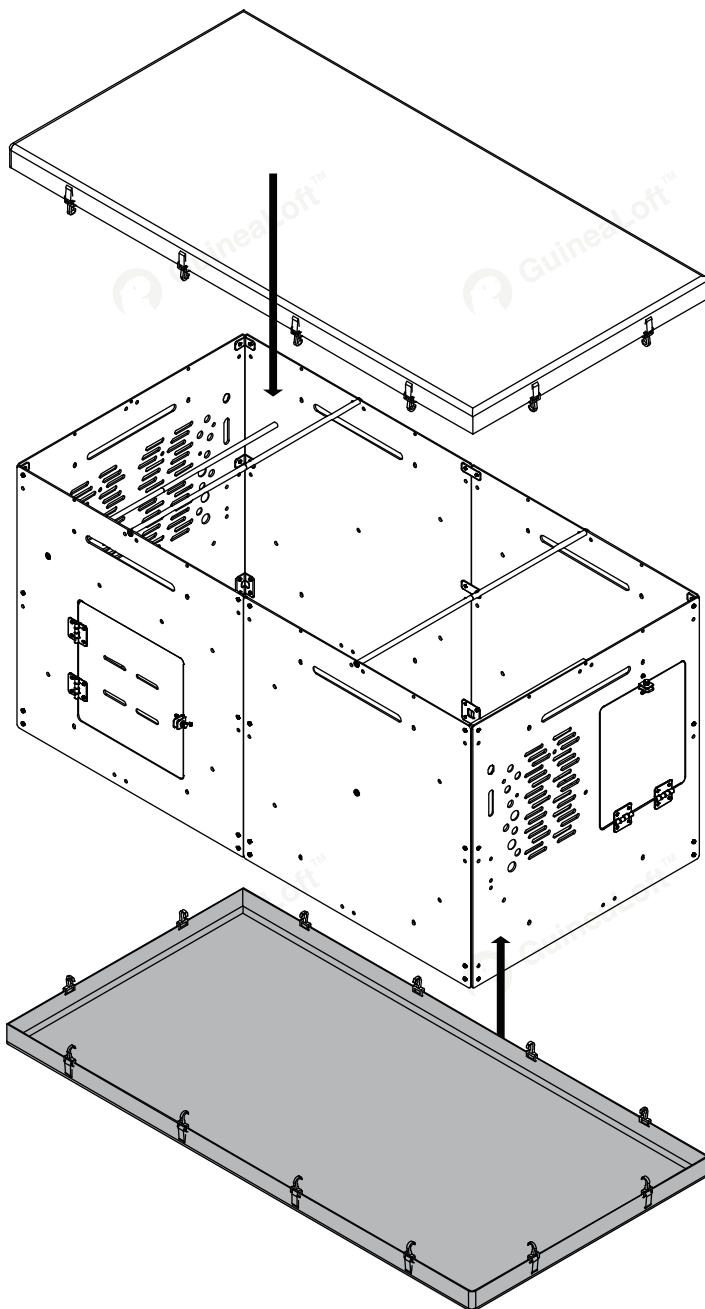

Hook & Hang

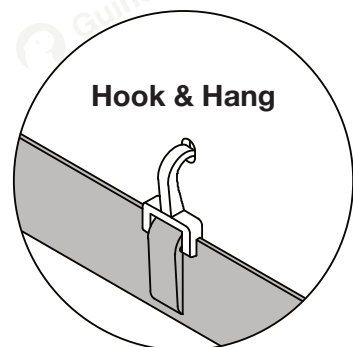

Hook & Hang