**USER GUIDE** 






## **UV50 BEACH SHADE TENT**

**KDBCHSHTNTA** 


### COMPONENTS

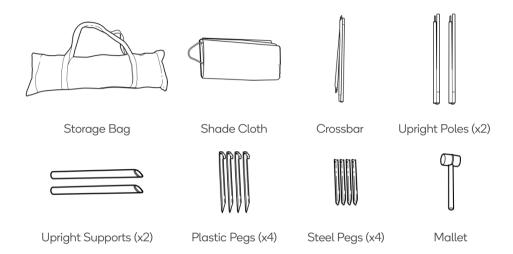

### **ASSEMBLY**

#### Step 1:

Open the storage bag and remove the shade cloth and all the accessories.

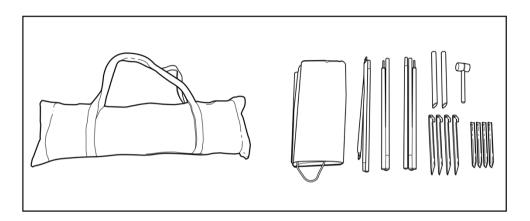

#### Step 2: (Figure 1)

- Unfold the crossbar and use the eyelets as a guide for how wide the upright supports need to be spaced apart.
- Insert the two upright supports into the sand.

**Note:** Ensure the supports are buried firmly enough to keep the upright poles in place.

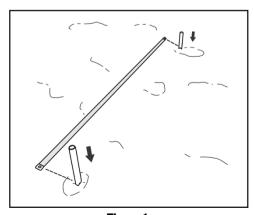


Figure 1

#### Step 3: (Figure 2)

- Insert the two upright poles into the upright supports.
- Attach the crossbar to the top of the two upright poles.

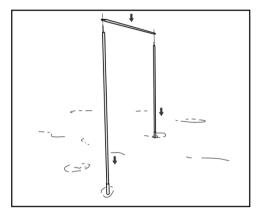


Figure 2


#### Step 4:

Place the shade cloth over the crossbar and insert the spigots on the top of upright
poles into the eyelets on the shade cloth.

**Note:** The shade cloth can be setup in either an "L" or an "A" shape depending on which eyelets the spigots are inserted into (Figures 3 & 4).

• Using either the plastic or steel pegs, stretch out and secure the guy ropes to the sand.

**Note:** If the sand is particularly soft, use the supplied mallet to bury the pegs deeper into the sand until the shade cloth is secure.

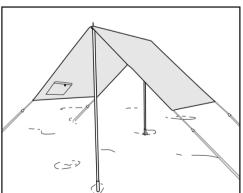

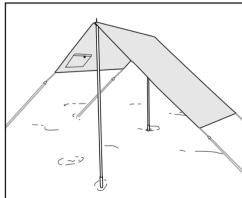


Figure 3 Figure 4

# NOTES



#### **Need more information?**

We hope that this user guide has given you the assistance needed for a simple set-up. For the most up-to-date guide for your product, as well as any additional assistance you may require, head online to **help.kogan.com** 

