

OK SERIES PLATE FILLER INSTALLATION GUIDE

OK FUP BOM		
Item	Qty	Part Description
1	1	Plate Filler (FUP)
2	6	M8x16 Hex Screw
3	6	M8 Threaded Insert

Plate Filler (FUP) Assembly

Tools Required: 13mm Extended Socket, Driver or Screwdriver

1. From the inside of each subpanel (PNA), insert three M8x16 hex screws (Item 2) through the corresponding circular cutouts on the panel side.
2. From the outside, thread an M8 insert (Item 3) onto each screw, with the flange facing outward.
 - Ensure each insert seats flush against the panel surface.
 - See Figure 2 & Detail A for visual guidance.
3. Align the plate filler (Item 1) with the threaded inserts using the slots on the filler.
 - Orient the semi-circular edge of the plate filler slots at the top.
4. Slide the plate filler downward to engage and lock it into place on the inserts (see Figure 3).

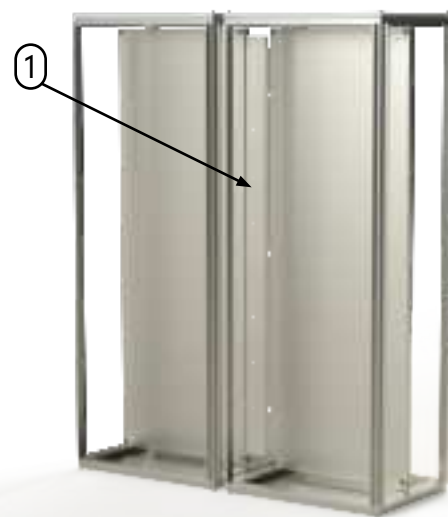



Figure 1



Figure 2



Figure 3

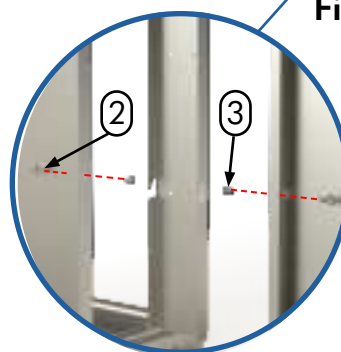

Detail A



Your Enclosure Source®