


DOUBLE DIN INSTALLATION

MOUNTING THE RADIO:

1. Mount the aftermarket radios to the factory metal mounting brackets using the factory hardware (see Illustration).
2. Secure the radio mounting assembly to the dash using screws used to secure the factory radio.

CAUTION:
REAR SUPPORT AVAILABLE
SEPARATELY. REAR SUPPORTING
THE RADIO ADDS TO THE
INSTALLATIONS STRUCTURAL
INTEGRITY.

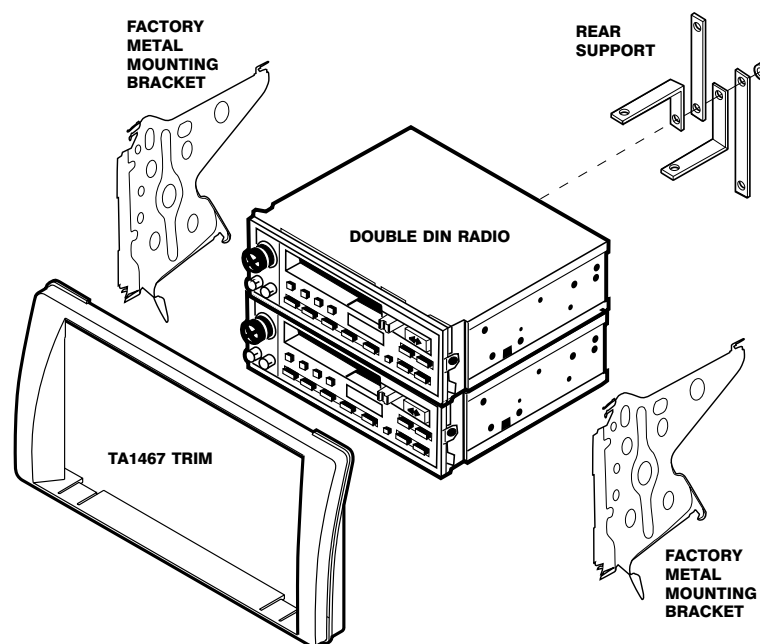


RADIO REMOVAL:

1. Carefully pry out climate controls using panel removal tool. Disconnect and remove.
2. Carefully pull radio bezel.
3. Extract (4) 10mm bolts securing radio bracket, disconnect and remove radio..

SCOSCHE®

TA1467

IN-DASH INSTALLATION KIT FOR 2002-UP TOYOTA CAMRY VEHICLES

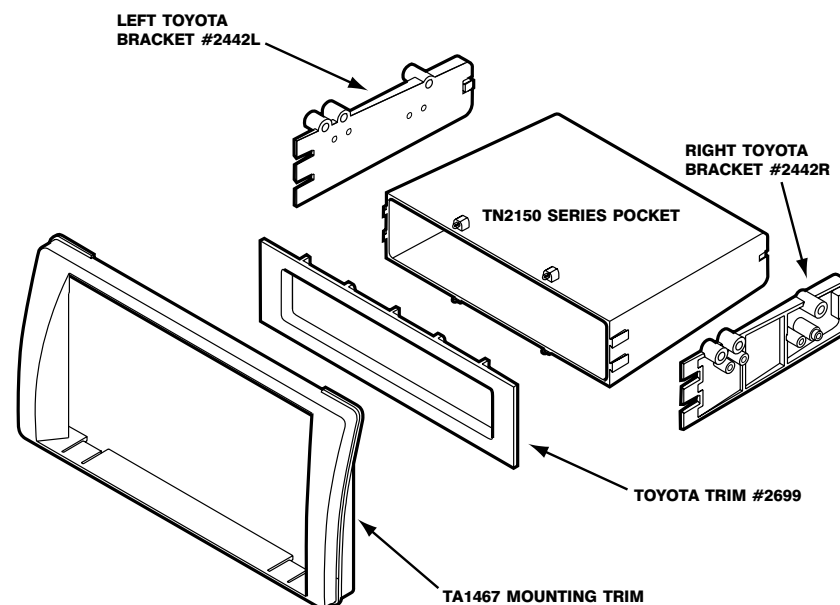

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (TA1467) in 2002-UP Toyota Camry Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche TA1467 Kit. This kit was manufactured with the highest of quality standards.

CAUTION:

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.


NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

POCKET ASSEMBLY


ATTACHING THE TRIM RING:

Press the pocket into place on the back of the trim ring and use the screws to secure, see Illustration.

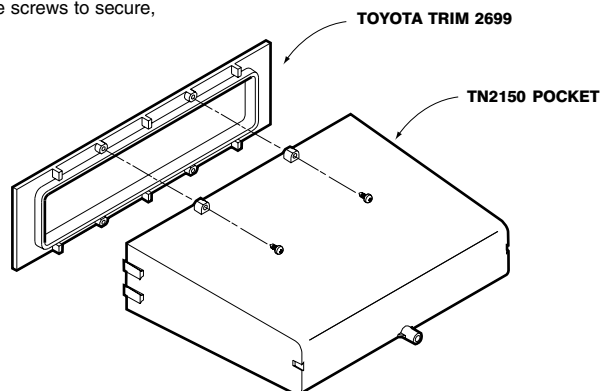

ATTACHING THE BRACKETS:

Insert the left bracket with the corresponding locators on the left side of the pocket and do the same with the right bracket (see Illustration).

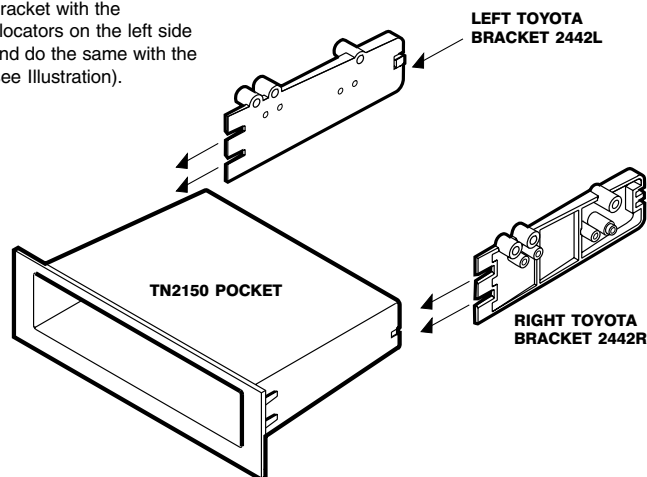


STEREO INSTALLATION

MOUNTING THE RADIO:

1. Mount the aftermarket radio and pocket to the factory metal mounting brackets using the factory hardware (see Illustration).
2. Secure the radio mounting assembly to the dash using screws used to secure the factory radio.

CAUTION:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE RADIO ADDS TO THE INSTALLATIONS STRUCTURAL INTEGRITY.

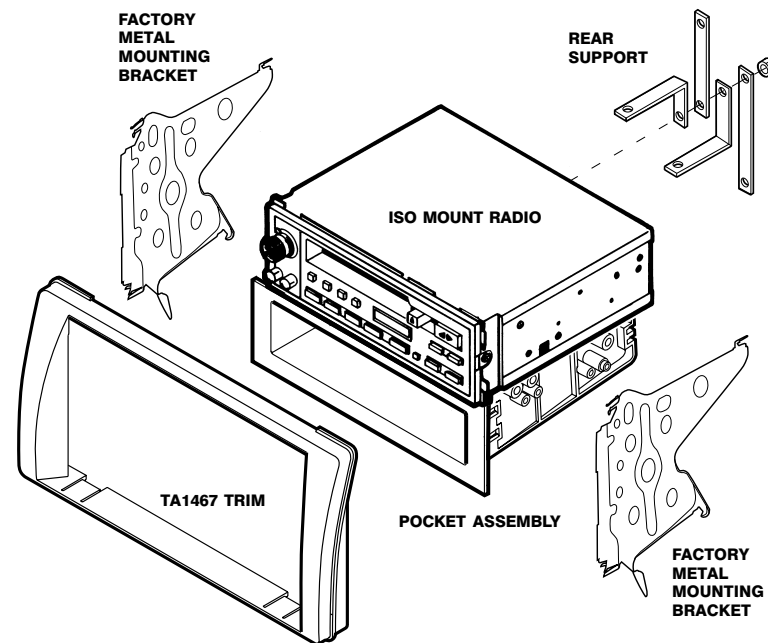

RADIO REMOVAL:

1. Carefully pry out climate controls using panel removal tool. Disconnect and remove.
2. Carefully pull radio bezel.
3. Extract (4) 10mm bolts securing radio bracket, disconnect and remove radio..