


# ASSEMBLY INSTRUCTIONS

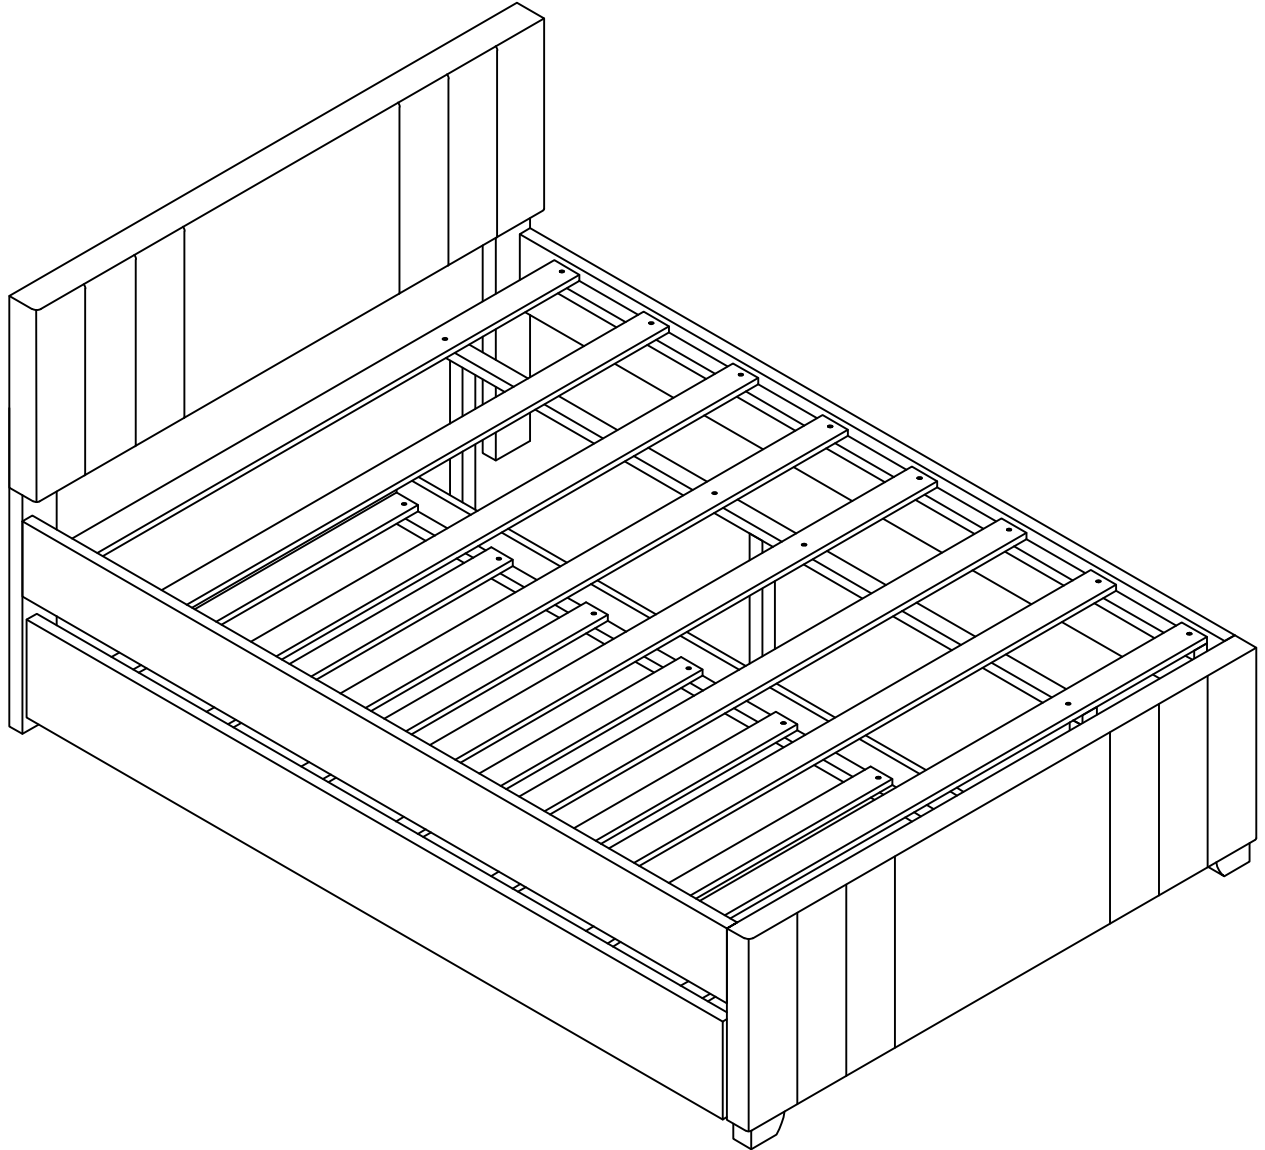

## **IMPORTANT NOTE**

**\*\*PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO**








**AVOID THE PARTS FROM BEING SCRATCHED**

**\*\* BEFORE YOU BEGIN , KINDY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP**








**\*\*DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP**
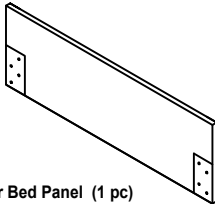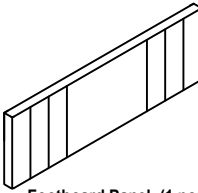
# ASSEMBLY INSTRUCTIONS

## PART LIST BOX 1

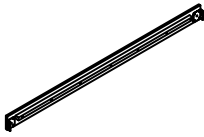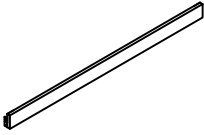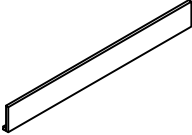








<div>1</div>  <p>Lower Bed Panel (1 pc)</p>	<div>2</div>  <p>Footboard Panel (1 pcs)</p>	
<div>3</div>  <p>Left Metal Plate (1 pc)</p>	<div>4</div>  <p>Right Metal Plate (1 pc)</p>	<div>5</div>  <p>Leg (2 pcs)</p>
<div>6</div>  <p>Roll Slat (8 pcs) 1365*60*15</p>	<div>7</div>  <p>( m59x42mmx66mm) Wheels (4 pcs)</p>	

## PART LIST BOX 2

<div data-bbox="92 1149 129 1182">8</div>  <p>Left Lower Rail (1 pc)</p>	<div data-bbox="568 1149 604 1182">9</div>  <p>Right Lower Rail (1pc)</p>	<div data-bbox="1037 1149 1074 1182">10</div>  <p>Front Panel Trundle (1 pc)</p>
<div data-bbox="92 1373 129 1406">11</div>  <p>Back Panel Trundle ( 1 pc)</p>	<div data-bbox="568 1373 604 1406">12</div>  <p>Roll Slat (8 pcs) 985*60*15</p>	<div data-bbox="1037 1373 1074 1406">13</div>  <p>Center Rail (1 pc)</p>
<div data-bbox="92 1592 129 1626">14</div>  <p>Bed Slat-Support With Leveler ( 3 pcs)</p>		


# ASSEMBLY INSTRUCTIONS





## HARDWARE LIST

<b>A</b>  (Ø 5/16 "X25mm) <b>Short Bolt (8pcs)</b>	<b>B</b>  (Ø 5/16 "X38mm) <b>Long Bolt (8 pcs)</b>	<b>C</b>  (Ø 5/16 "X45mm) <b>Long Bolt (2 pcs)</b>
<b>D</b>  (Ø 5/16 "-RBW) <b>Flat Washer (18 pcs)</b>	<b>E</b>  (Ø 5/16 "-RBW) <b>Spring Washer (18 pcs)</b>	<b>F</b>  (M4x75mm x32mm) <b>Allen Wrench (1 pc)</b>
<b>G</b>  ( m4x20mm-RBW) <b>Flat Head Screw (40 pcs)</b>	<b>H</b>  ( 38mmx38mmx25mmx2mm) <b>Square Patch (4 pcs)</b>	<b>I</b>  ( m4x30mm-RBW) <b>Flat Head Screw (36 pcs)</b>

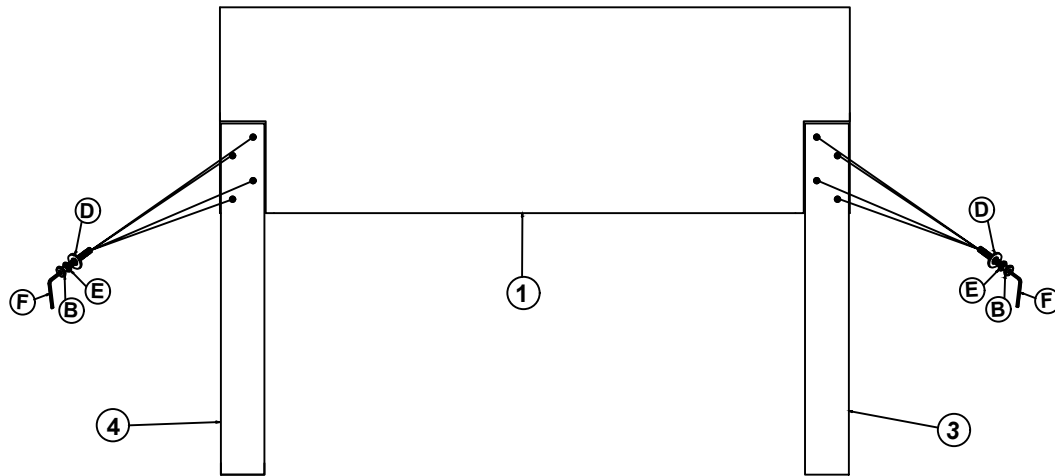
# ASSEMBLY INSTRUCTIONS





## STEP 1

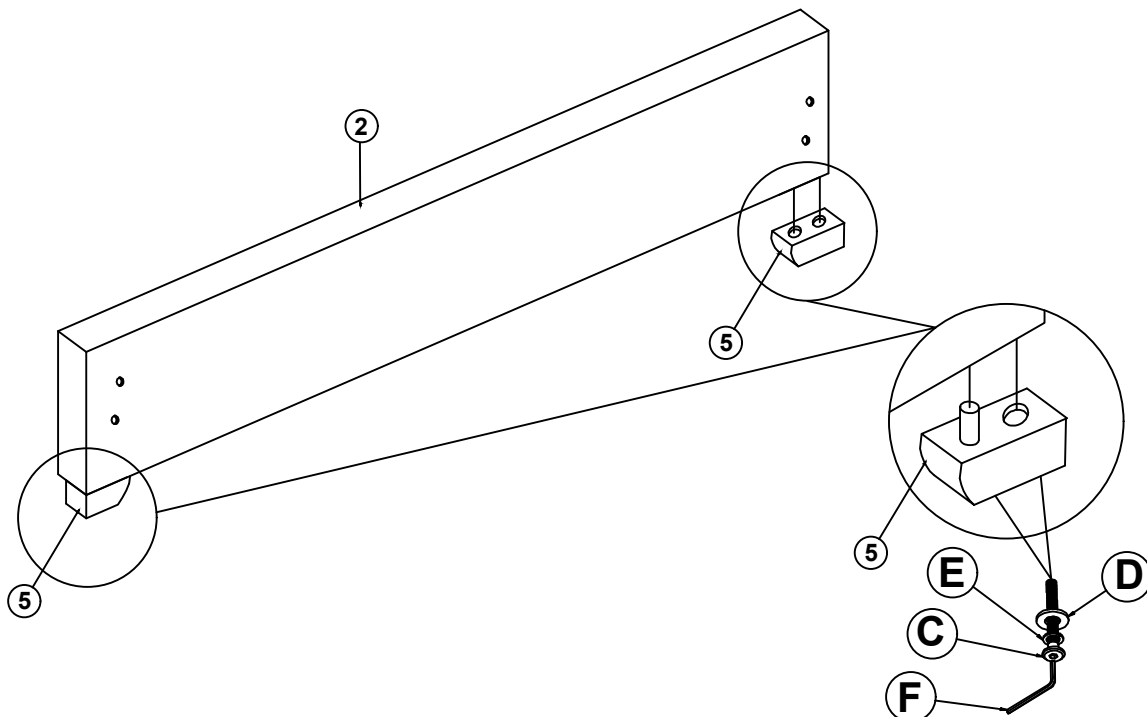

B	<b>Bolt</b> (Ø 5/16 "X38mm)		8pcs	D	<b>Flat Washer</b> (Ø 5/16 "-RBW )		8pcs
E	<b>Spring Washer</b> (Ø 5/16 "-RBW )		8pcs	F	<b>Allen Wrench</b> (M5x75mm x32mm)		1pc


## STEP 2







C	<b>Bolt</b> (Ø 5/16 "X55mm)		2pcs	D	<b>Flat Washer</b> (Ø 5/16 "-RBW )		2pcs
E	<b>Spring Washer</b> (Ø 5/16 "-RBW )		2pcs	F	<b>Allen Wrench</b> (M5x75mm x32mm)		1pc

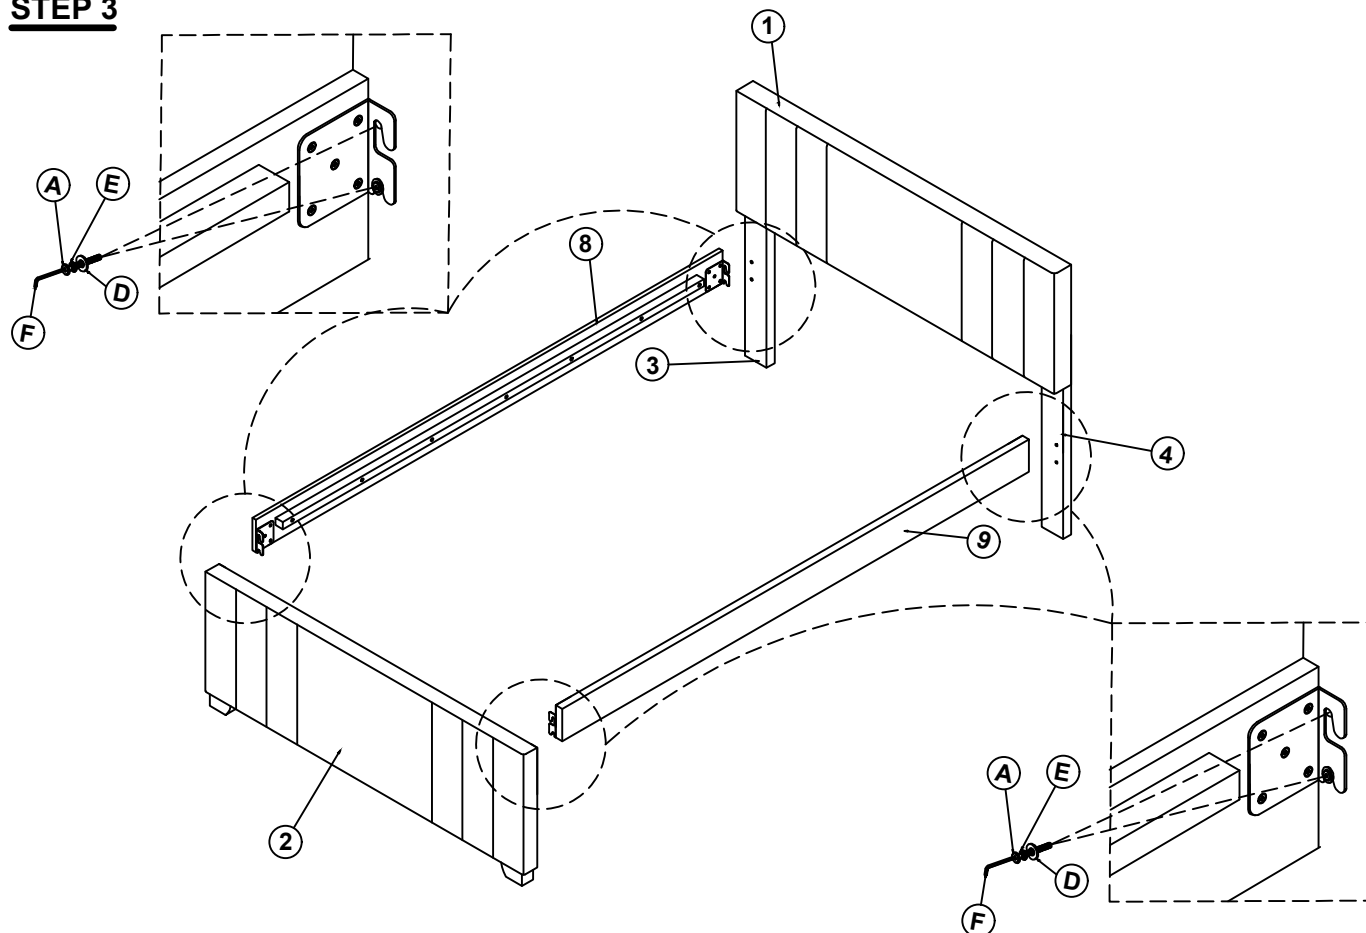
# ASSEMBLY INSTRUCTIONS

## STEP 3





A	<b>Bolt</b> (Ø 5/16 "X25mm)		8pcs	D	<b>Flat Washer</b> (Ø 5/16 "-RBW )		8pcs
E	<b>Spring Washer</b> (Ø 5/16 "-RBW )		8pcs	F	<b>Allen Wrench</b> (M5x75mm x32mm)		1pc

## STEP 4

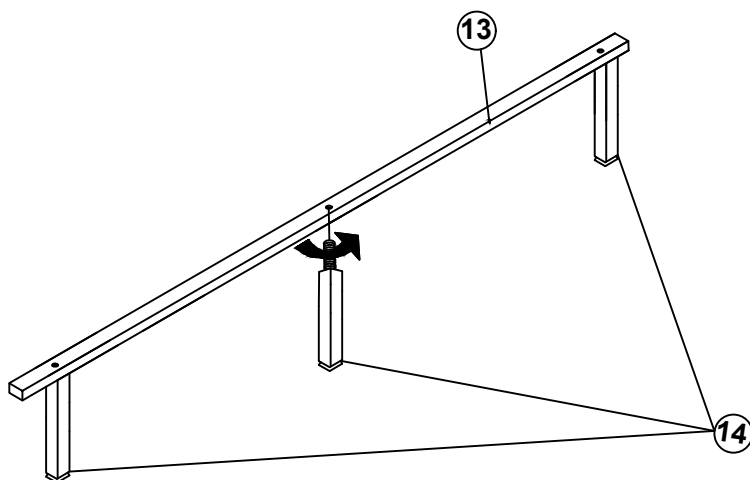


# ASSEMBLY INSTRUCTIONS


## STEP 5

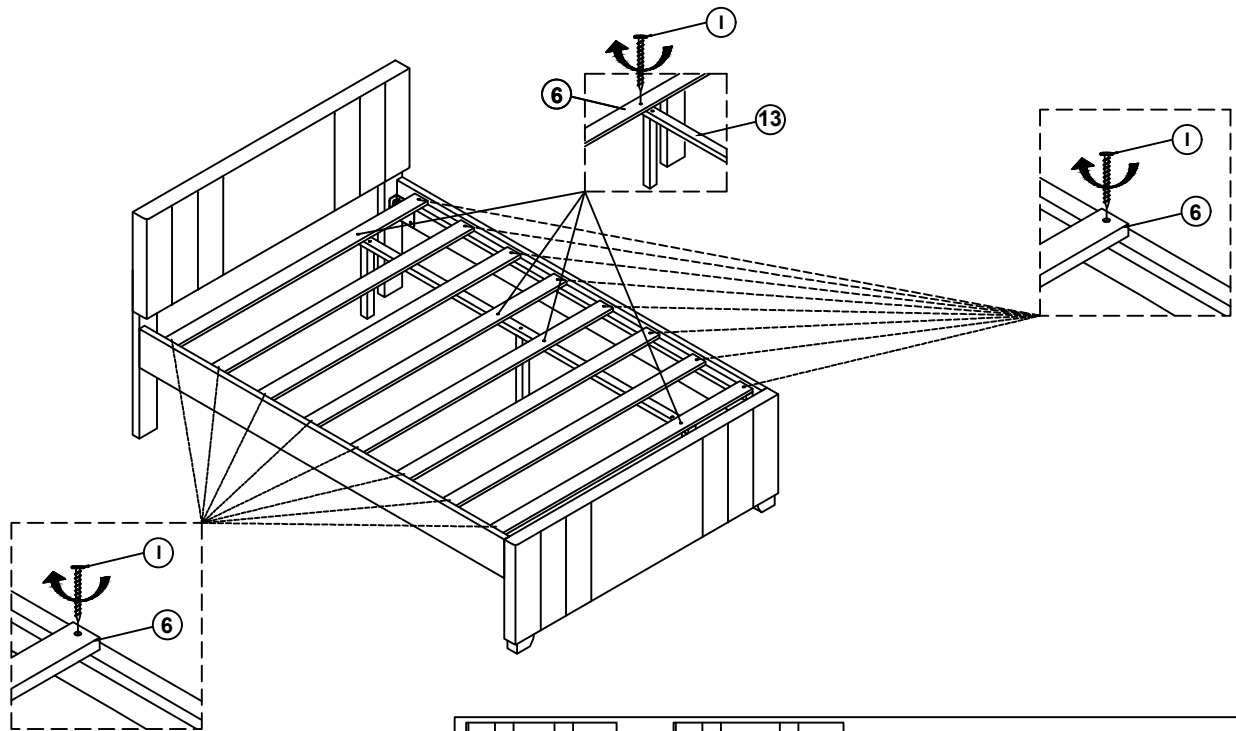




**NOTE:** Do not lock the screws of the trundle slats to the utermost edge the trundle slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

I	Flat Head Screw (m4x30mm-RBW)		20pcs
---	----------------------------------	---	-------

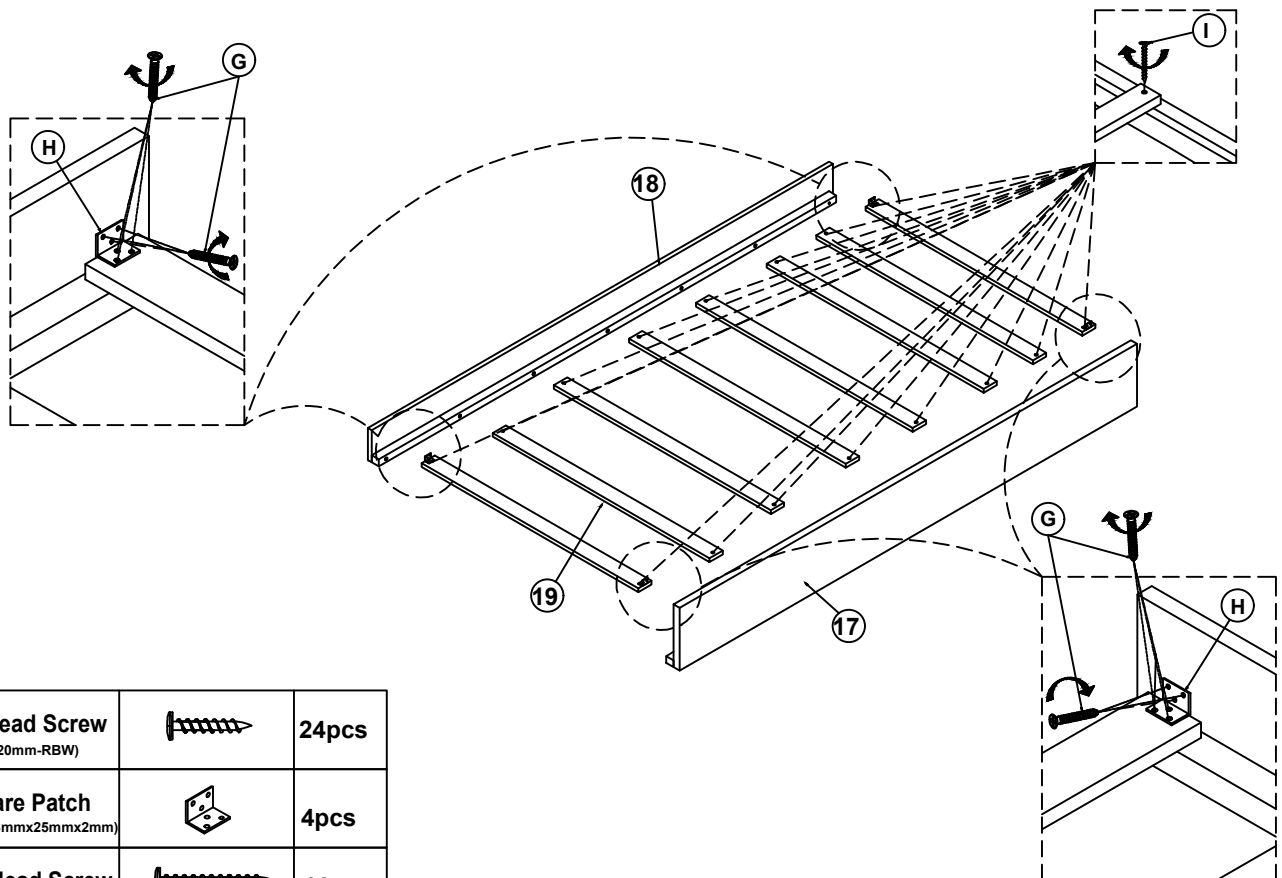
## STEP 6





G	Flat Head Screw (m4x20mm-RBW)		24pcs
H	Square Patch (38mmx38mmx25mmx2mm)		4pcs
I	Flat Head Screw (m4x30mm-RBW)		16pcs

# ASSEMBLY INSTRUCTIONS

## STEP 7

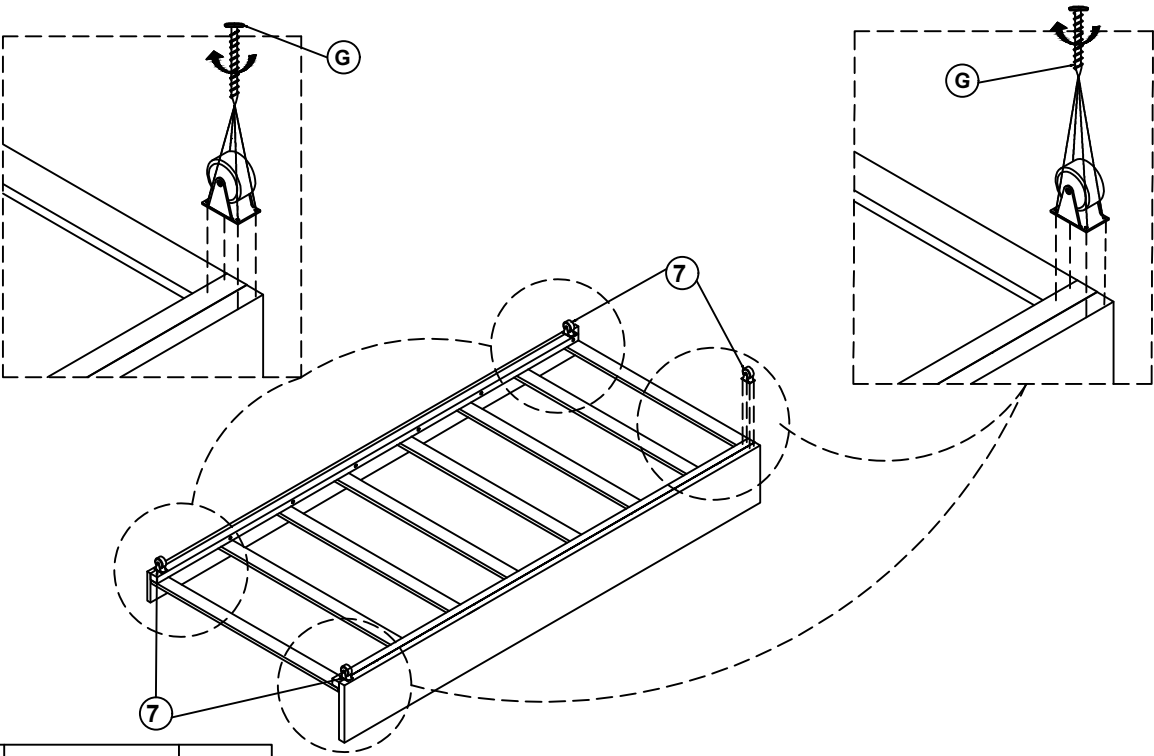

G	Flat Head Screw (m4x20mm-RBW)		16pcs
7	Wheels (m59x42mmx66mm)		4pcs

## STEP 8 COMPLETE

