


**Tribesigns**  
LITTLE TREE  
**Assembly Instructions**

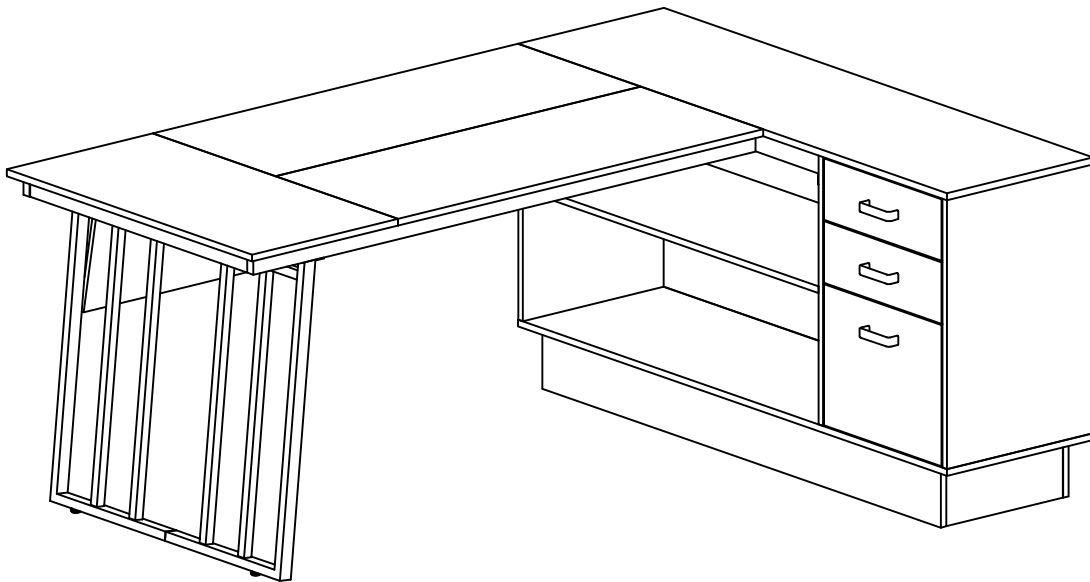

**Model No. HOGA-JW0723-A/B**

**Executive Desk**

# Call us!

## We're here to help!

If you have any issues with this product, please contact our customer service team **before returning** it.



We want you to be completely satisfied with your purchase! If anything is missing, damaged, incorrect, or not what you expected, don't worry. Please keep the outer packaging and take photos of both the packaging and products, and then reach out to us at **support@tribesigns.com** or call us at **1-424-220-6888**. We'll take care of everything and send you a free replacement, so you can enjoy your purchase as soon as possible without any hassle.

### Assembly Instructions:

1. Carefully read these instructions and keep them for future reference.
2. Refer to the parts list for guidance and ensure that you have all the pieces before starting the assembly process, if anything is missing, damaged, incorrect, contact us **FIRSTLY BEFORE** assembling.
3. When assembling, place all parts on a soft, clean, and flat surface, such as a carpet, to prevent any scratches.
4. To avoid misalignment of the holes, Please don't full tighten the screws until you ensure all parts in place.

---

### Follow Tribesign:



Facebook



Twitter






Pinterest










YouTube




Instagram

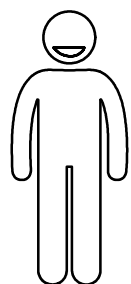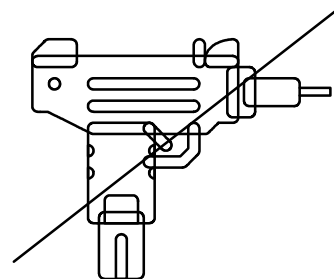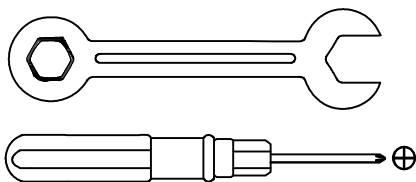**X2**


When using the electric screwdriver ,  
Reduce the power and torque to avoid damaging the furniture

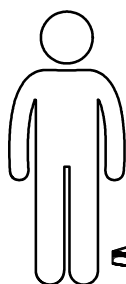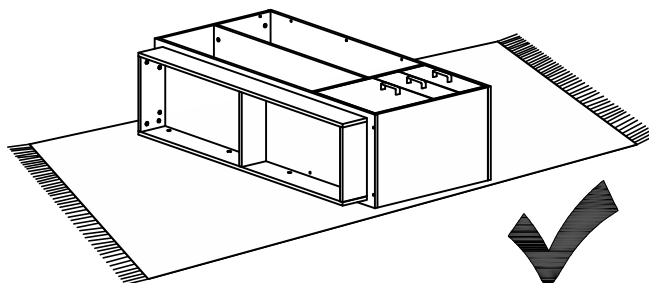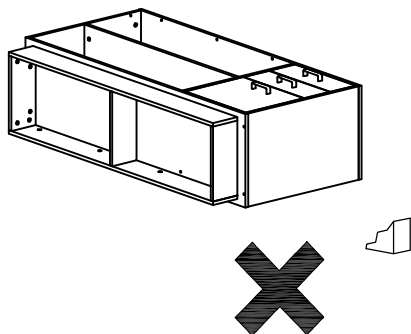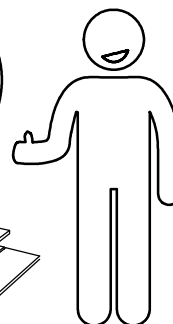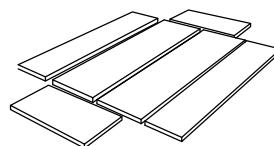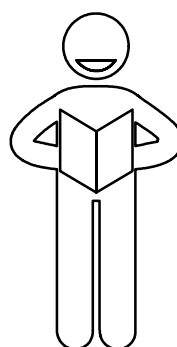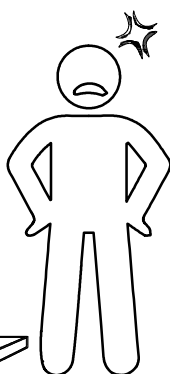**?**

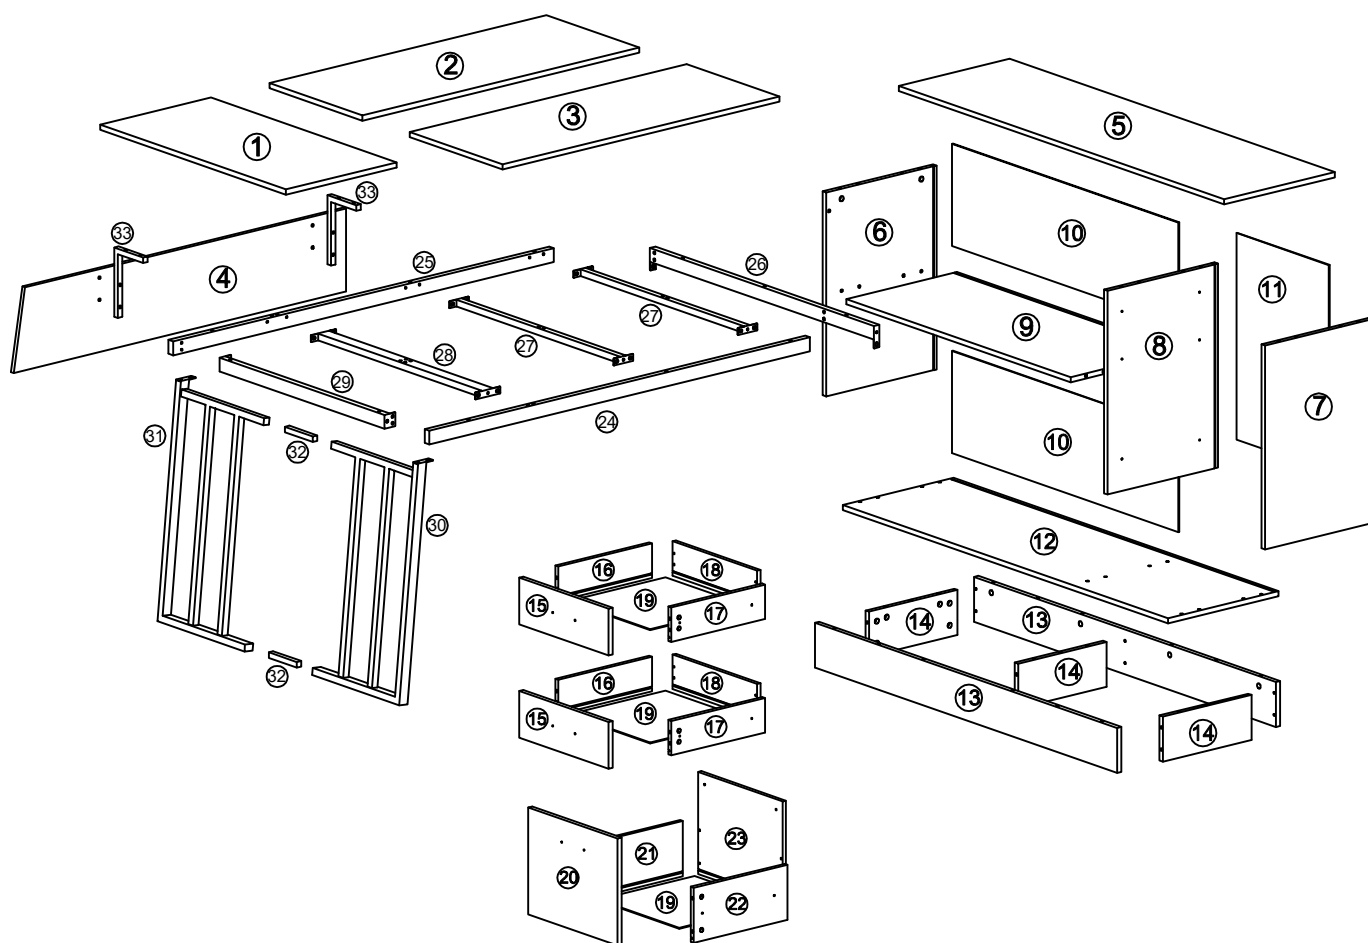


SKU	PART NO.	QUANTITY
JW0723-A	①	1
	⑥	1
	⑦	1
	⑧	1
	⑭	3
	⑮	2
	⑯	2
	⑰	2
	⑱	2
	⑲	3
	⑳	1
	㉑	1
	㉒	1
	㉓	1
	㉔	2
	㉕	2

SKU	PART NO.	QUANTITY
JW0723-B	②	1
	③	1
	④	1
	⑤	1
	⑨	1
	⑩	2
	⑪	1
	⑫	1
	⑬	2
	㉔	1
	㉕	1
	㉖	1
	㉗	2
	㉘	1
	㉙	1
	㉚	1



Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for free replacement if having damaged or missing parts.

## Parts & Hardware List

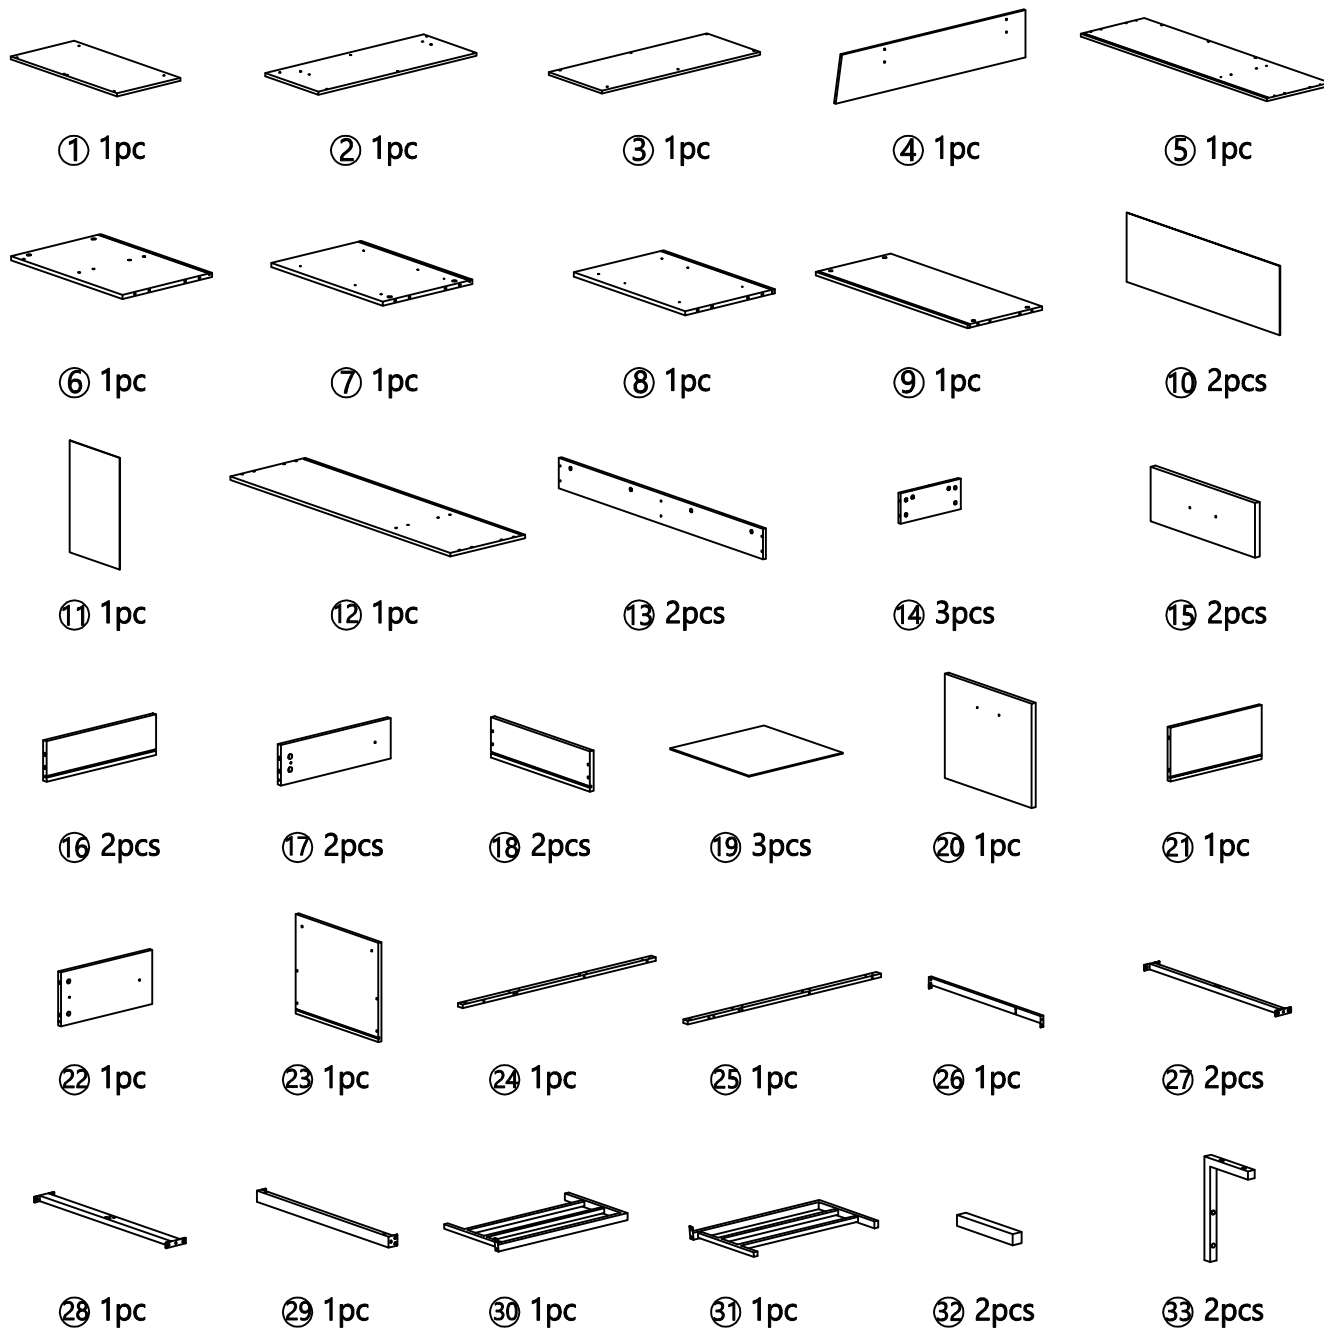


## Hardware List


A	X48+1	B	X36+1	C	X12+1	D	X23+1	E	X24+1	F	X12+1	G	X6+1
φ6X35mm		φ15X12mm		φ15X10mm		φ8X30mm		φ3.5X14mm		φ4X35mm		φ7X47mm	
H	X1	I	X28+1	J	X8+1	K	X8+1	L	X4+1	M	X13+1	N	X2+1
M4X55mm		M6X12mm		M6X25mm		M6X30mm		M6X40mm		M6X50mm		M6X50mm	
O	X3	P	X6+1	Q	X2	R	X2	S	X6	T	X6		
102X27X19mm		M4X18mm		M6XØ28mm		L352		L350mm		L350mm			

## Installation of Cams and Pins


Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

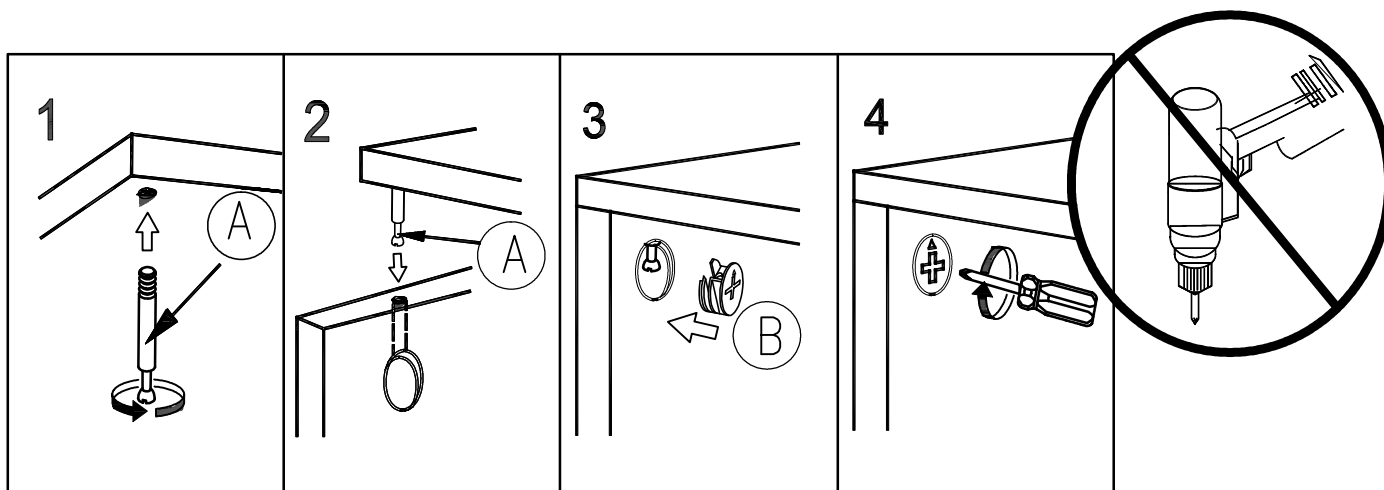


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

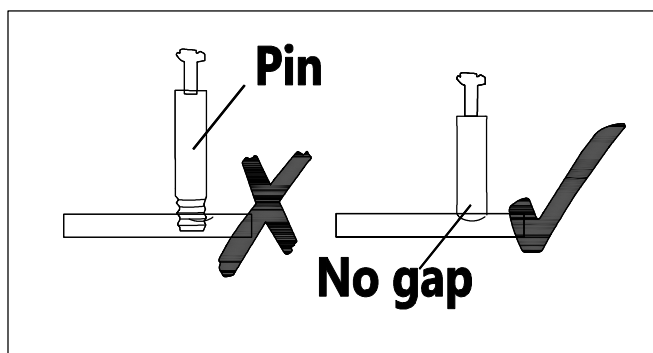


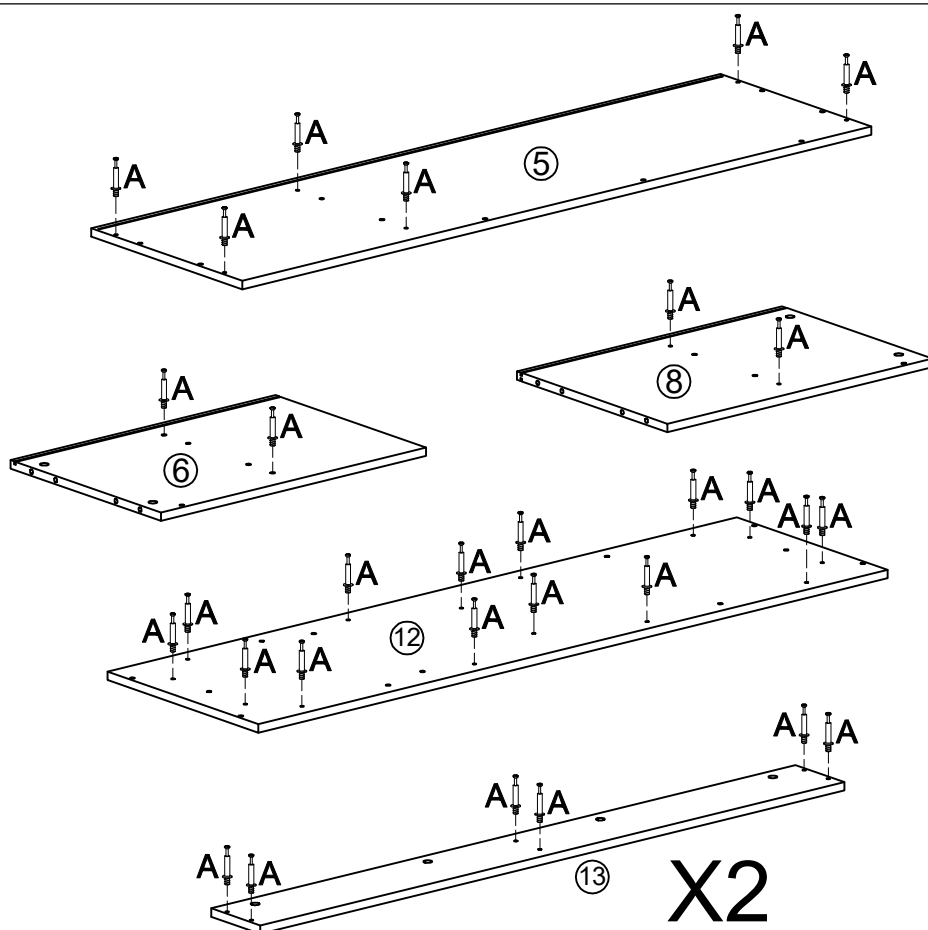

1




A	X36
	
φ6X35mm	

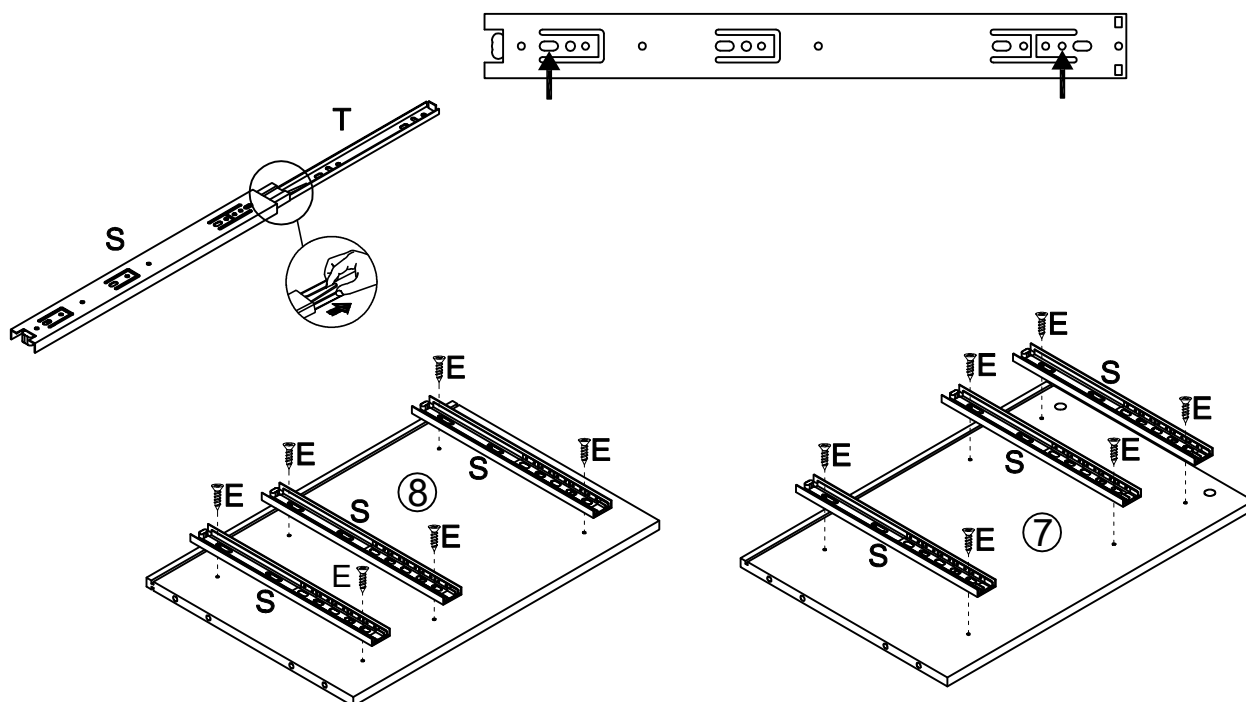

2




E	X12	S	X6
			
φ3.5X14mm		L350mm	

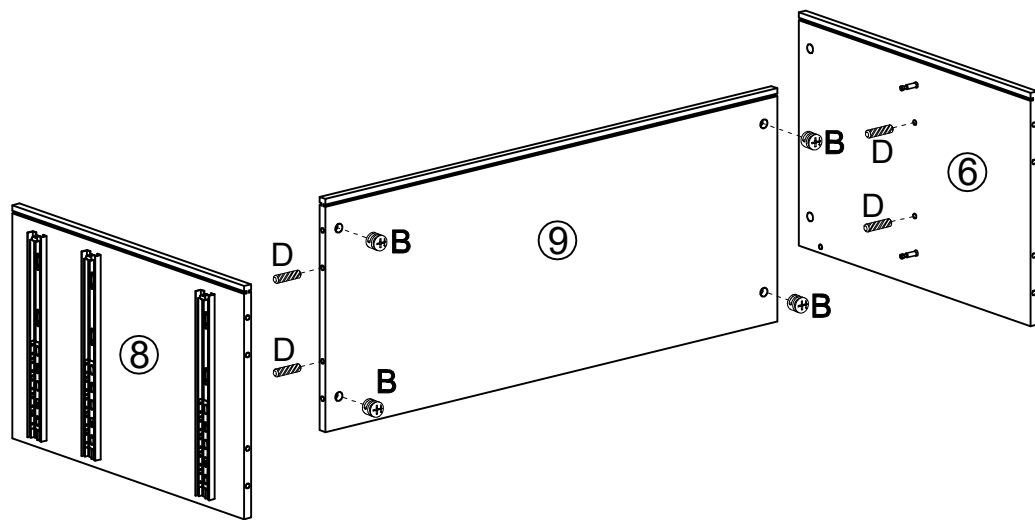3




B	X4	D	X4
			
φ15X12mm		φ8X30mm	

4

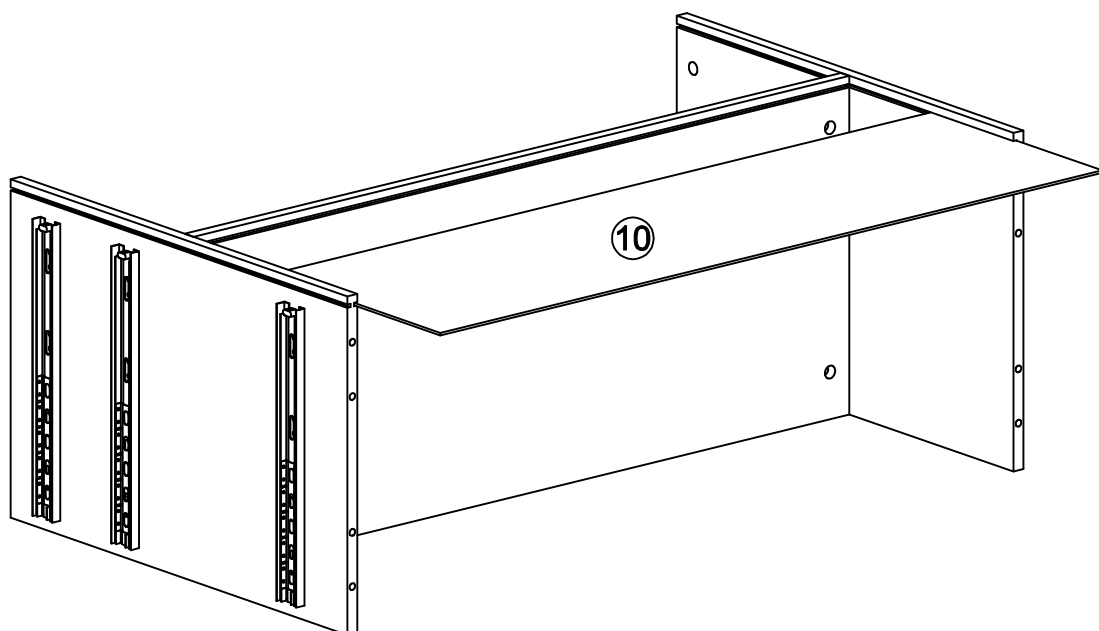





5

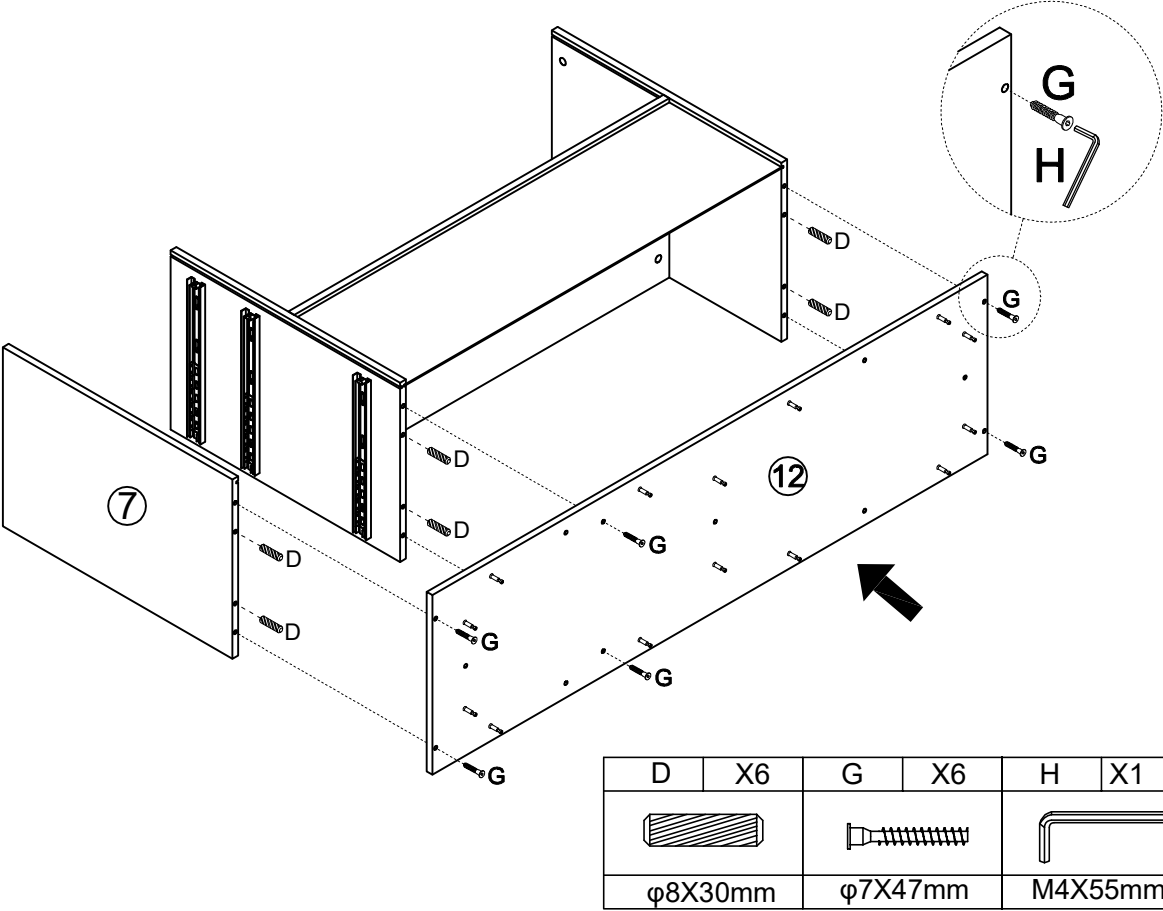




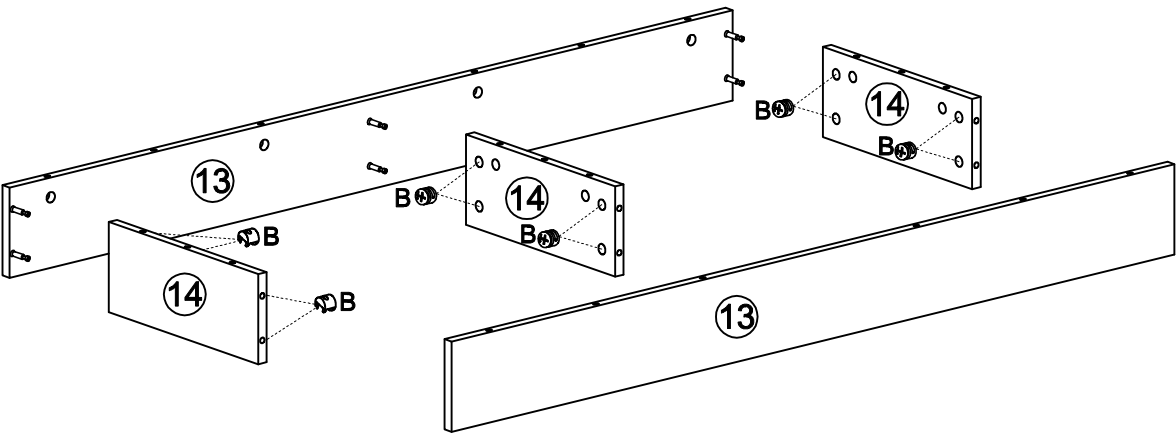

6

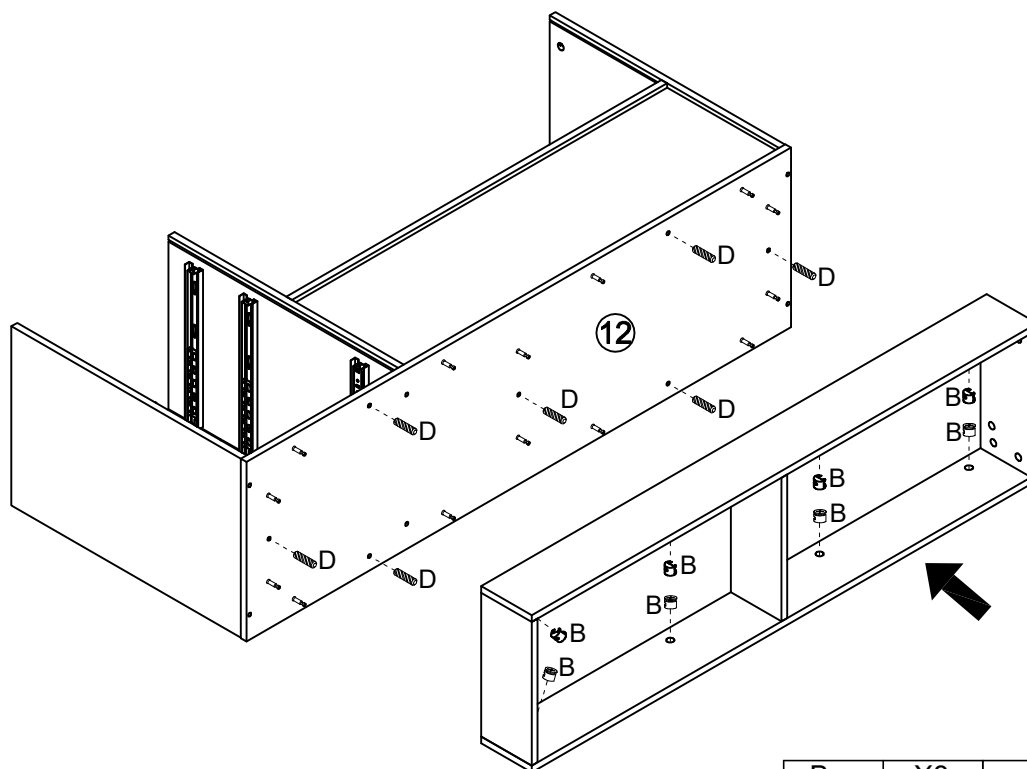


B	X12
	
φ15X12mm	



7




B	X8	D	X7
			
φ15X12mm		φ8X30mm	

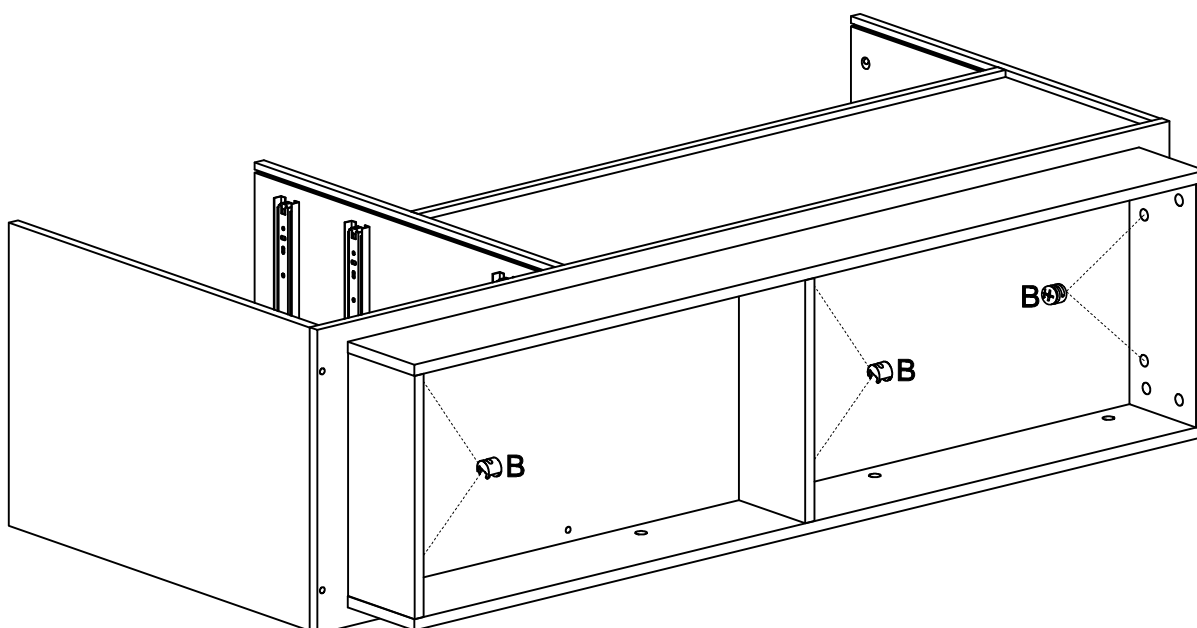8





B	X6
	
φ15X12mm	


9

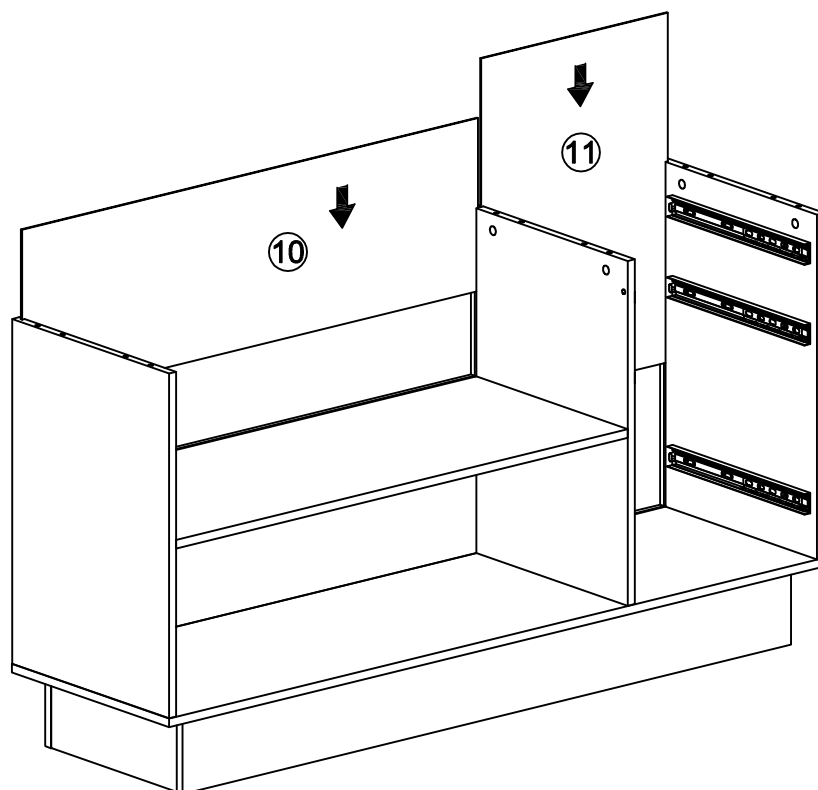


10

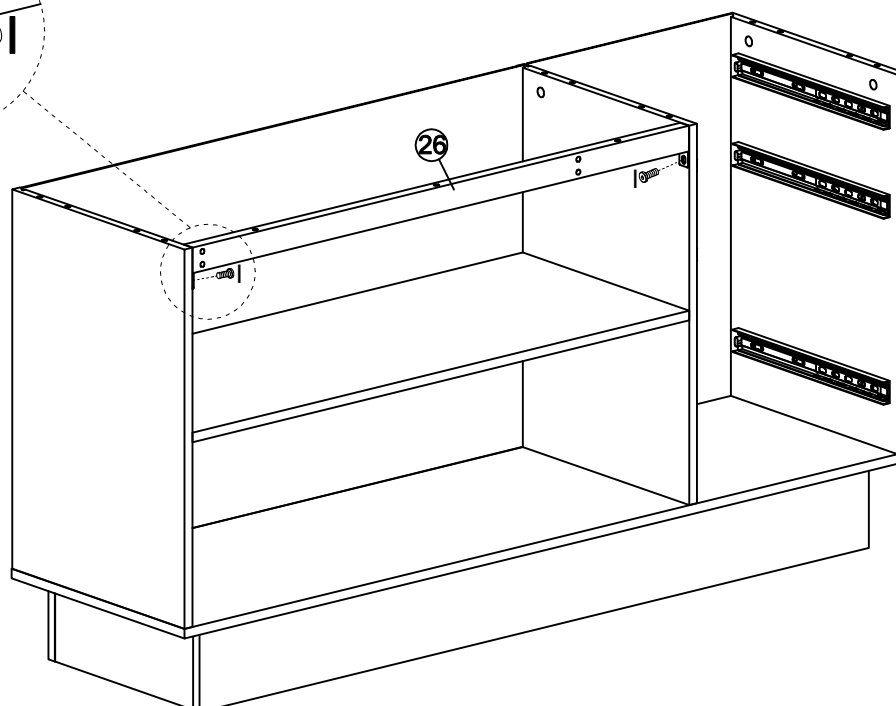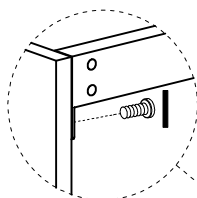


screw down



I	X2
	
M6X12mm	

11


pre-drill 70%

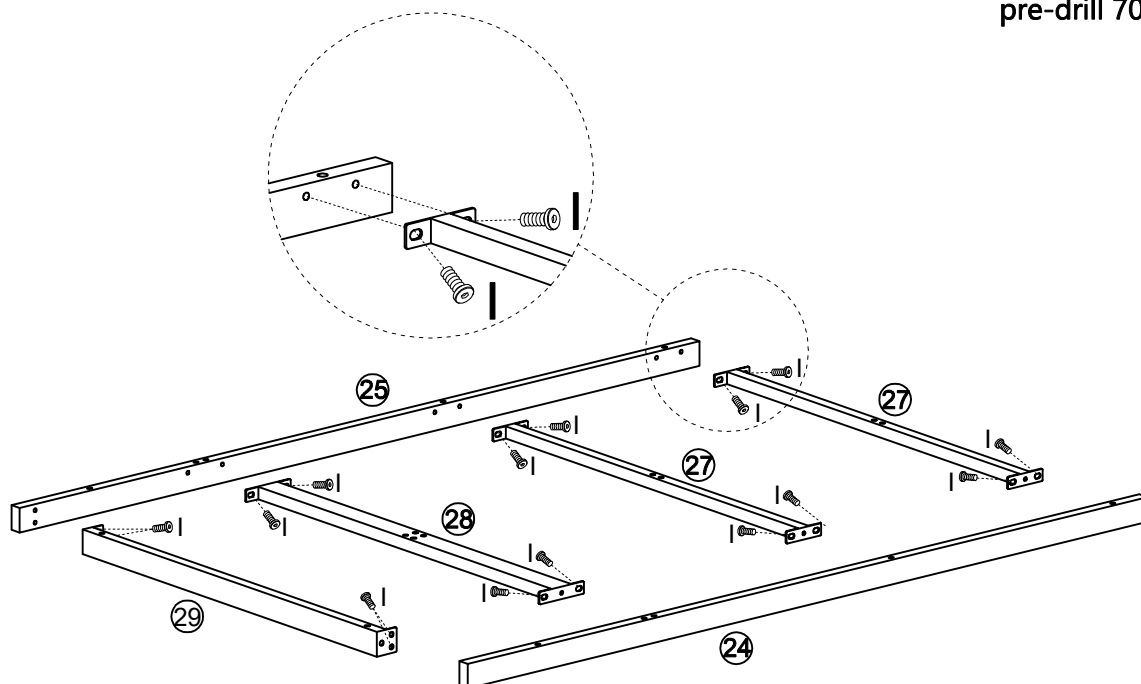

I	X16
M6X12mm	

12


screw down

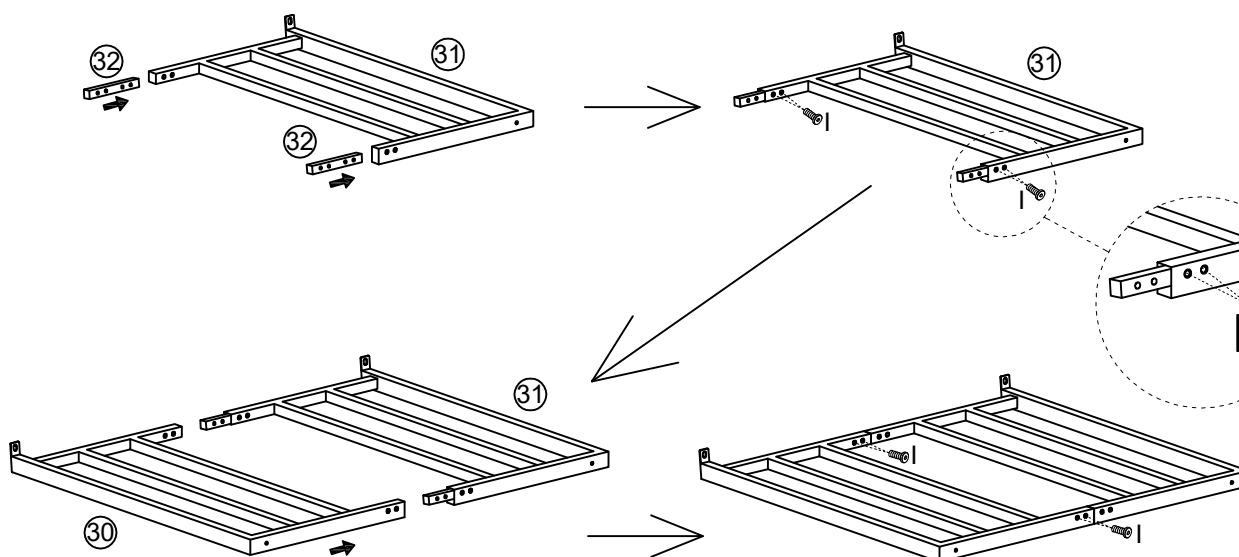



I	X8
M6X12mm	

13


pre-drill 70%


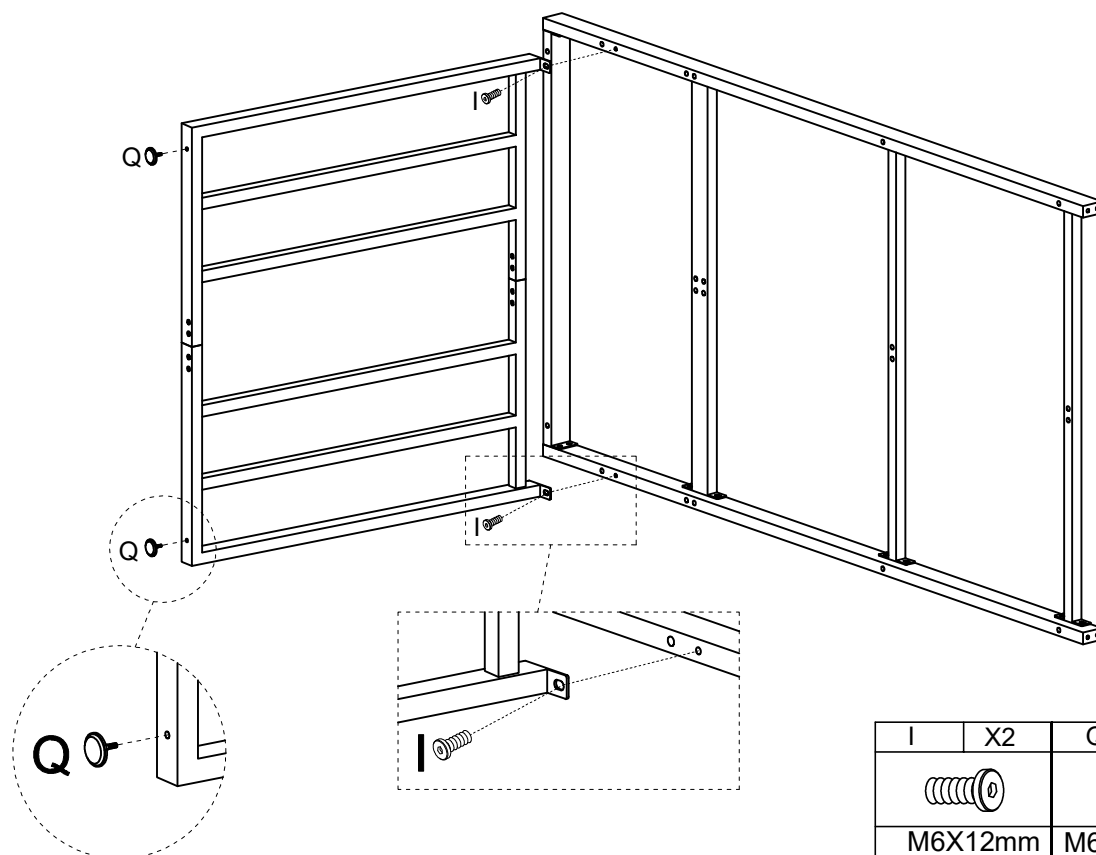


I	X2	Q	X2
			
M6X12mm		M6XØ28mm	


14

screw down

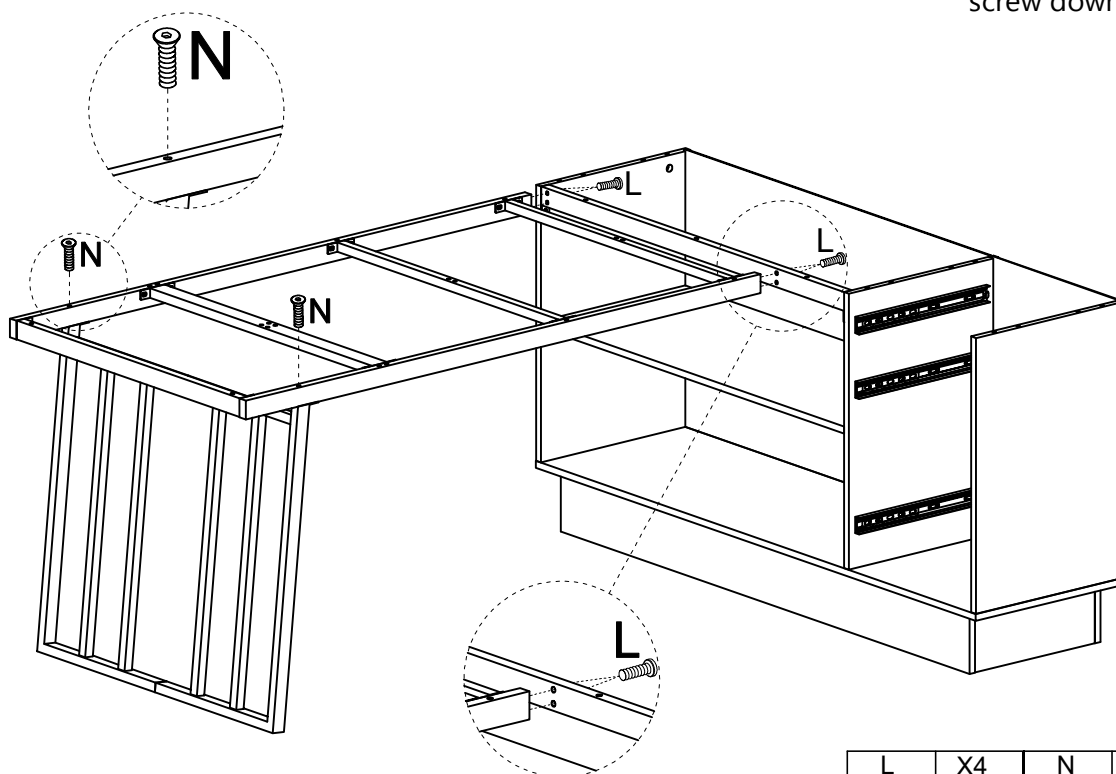


L	X4	N	X2
			
M6X40mm		M6X50mm	

15

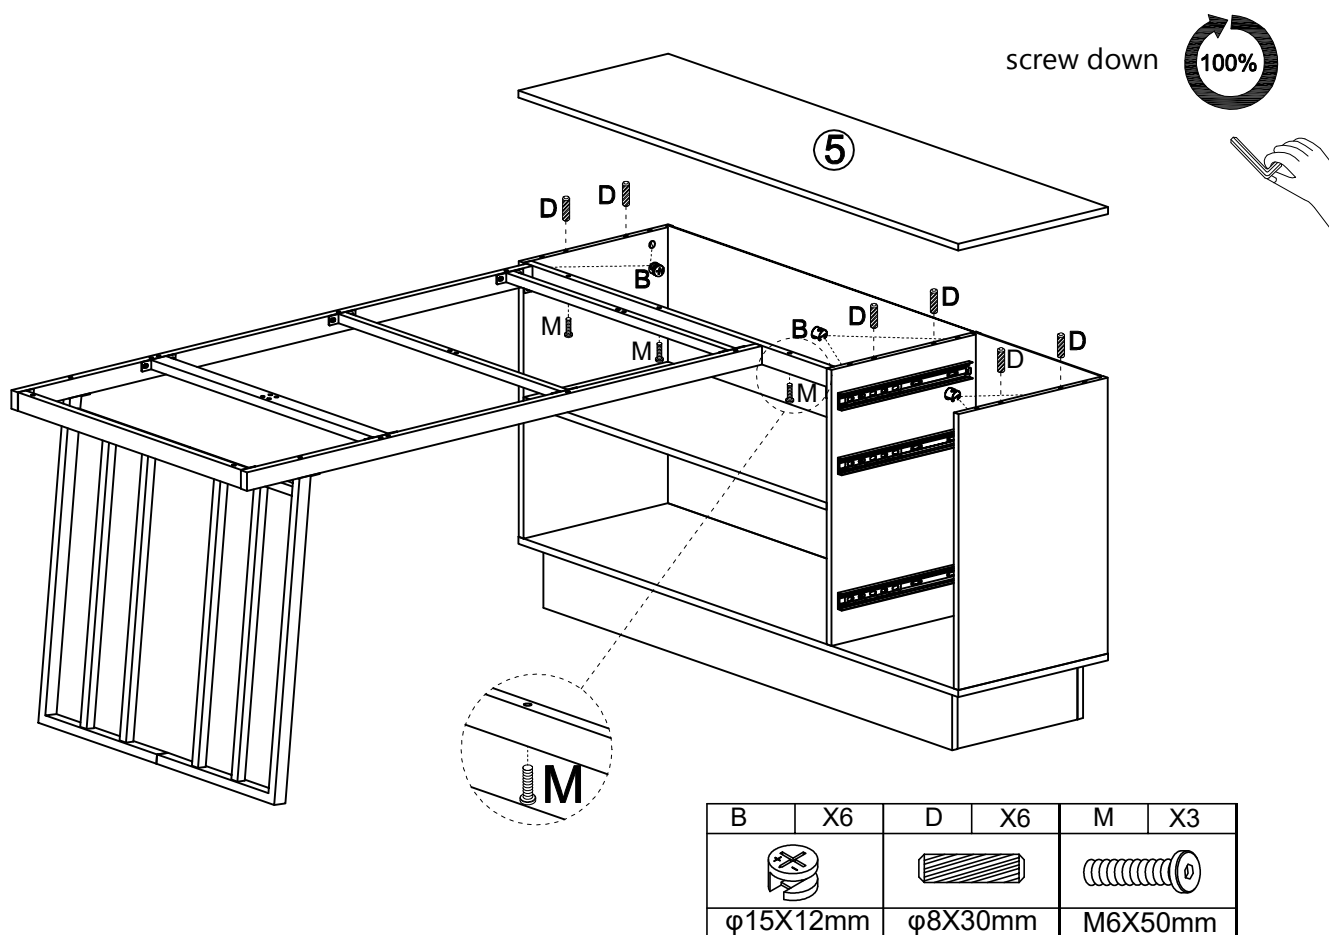


16

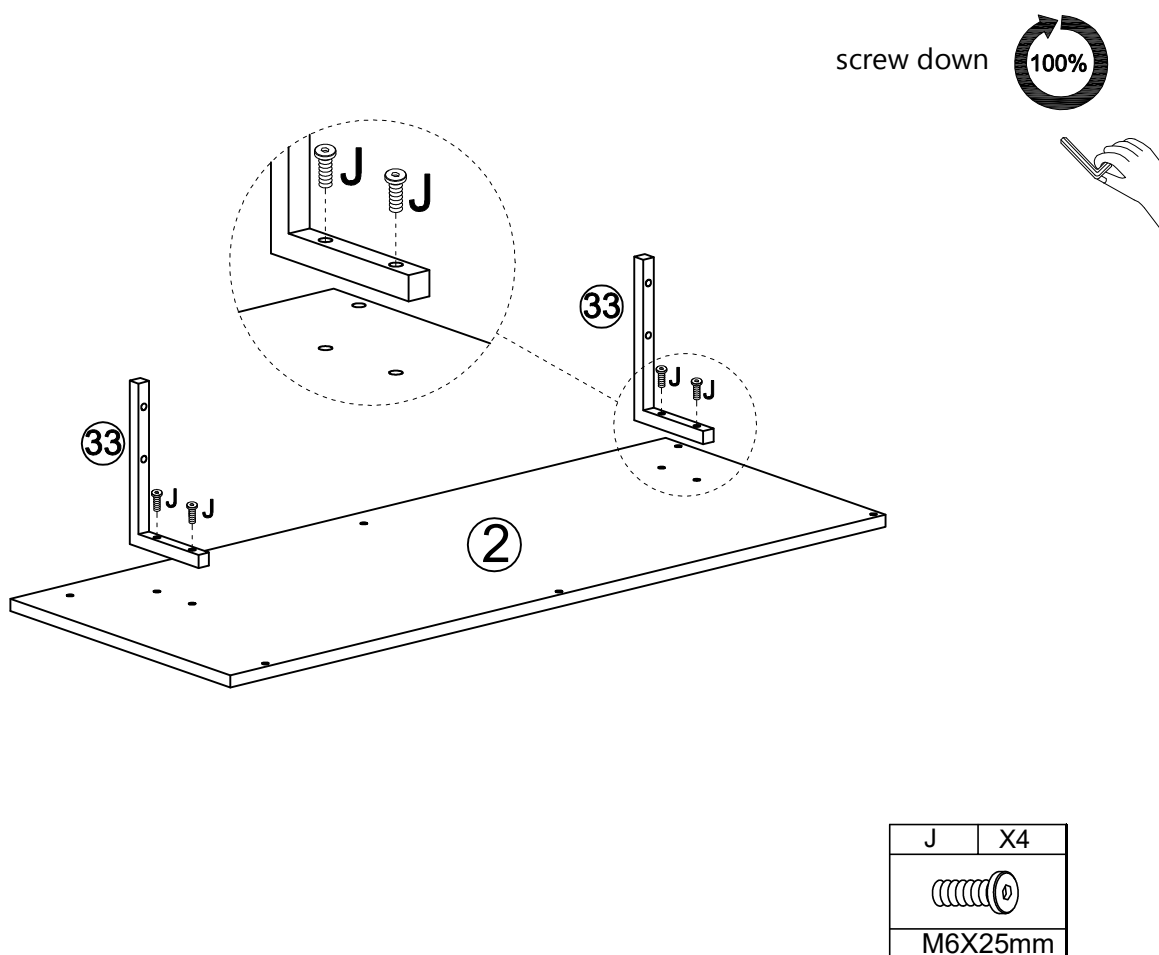

17


screw down

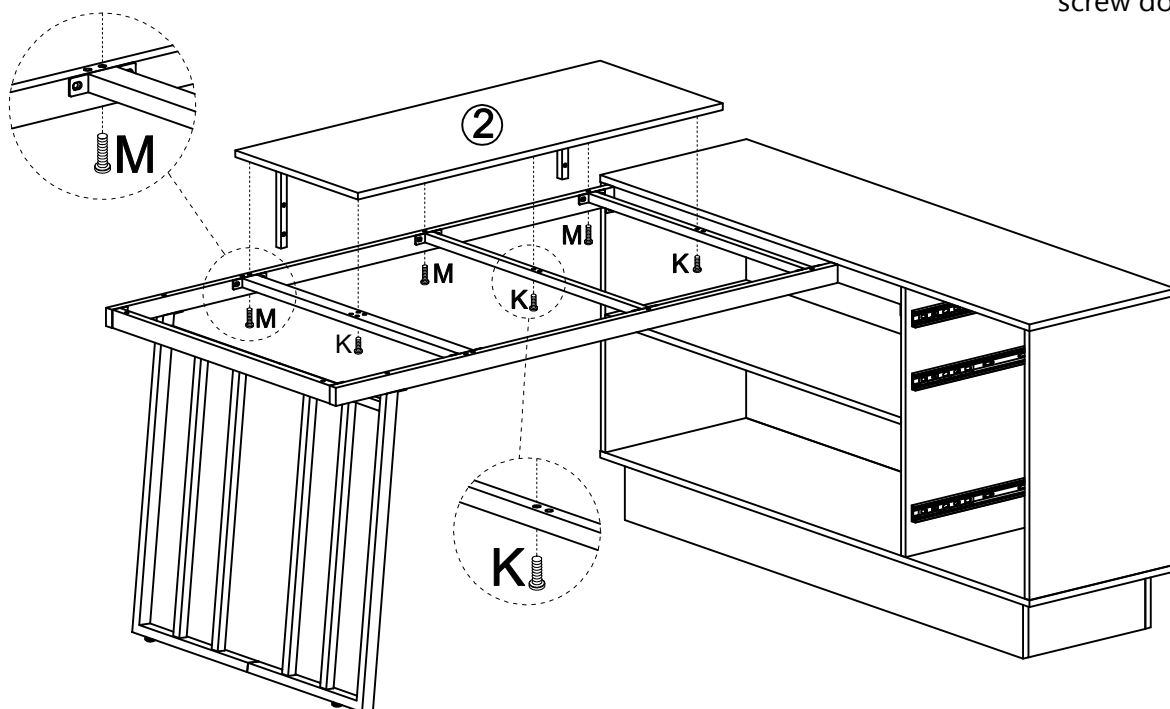

K	X3	M	X3
M6X30mm		M6X50mm	

18



screw down

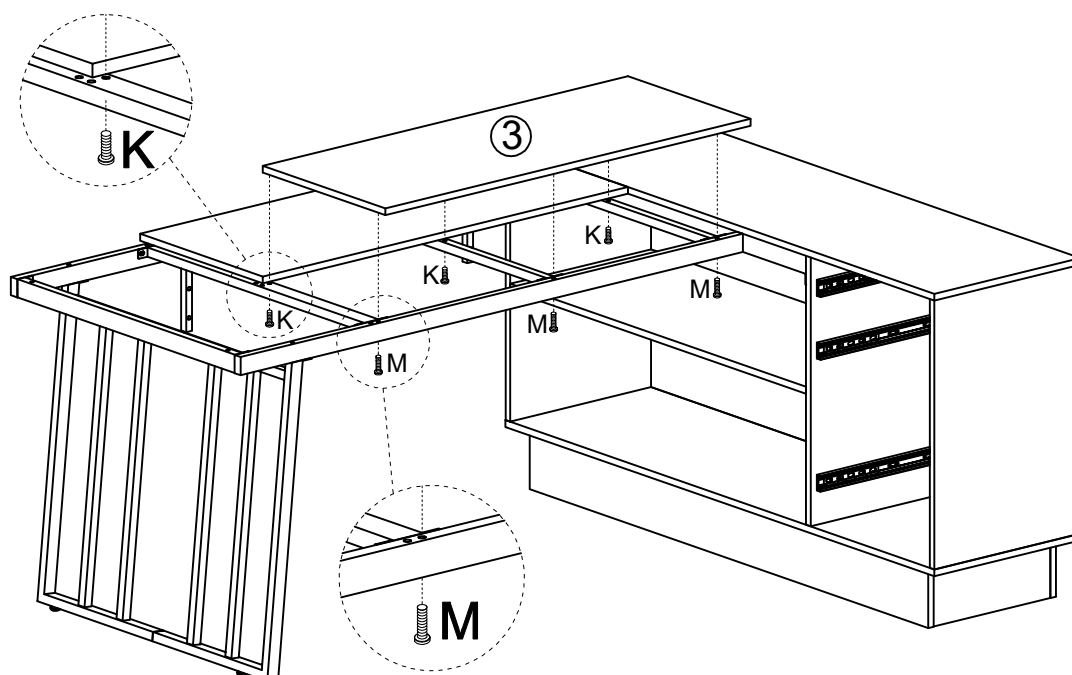

K	X3	M	X3
M6X30mm		M6X50mm	

19



screw down

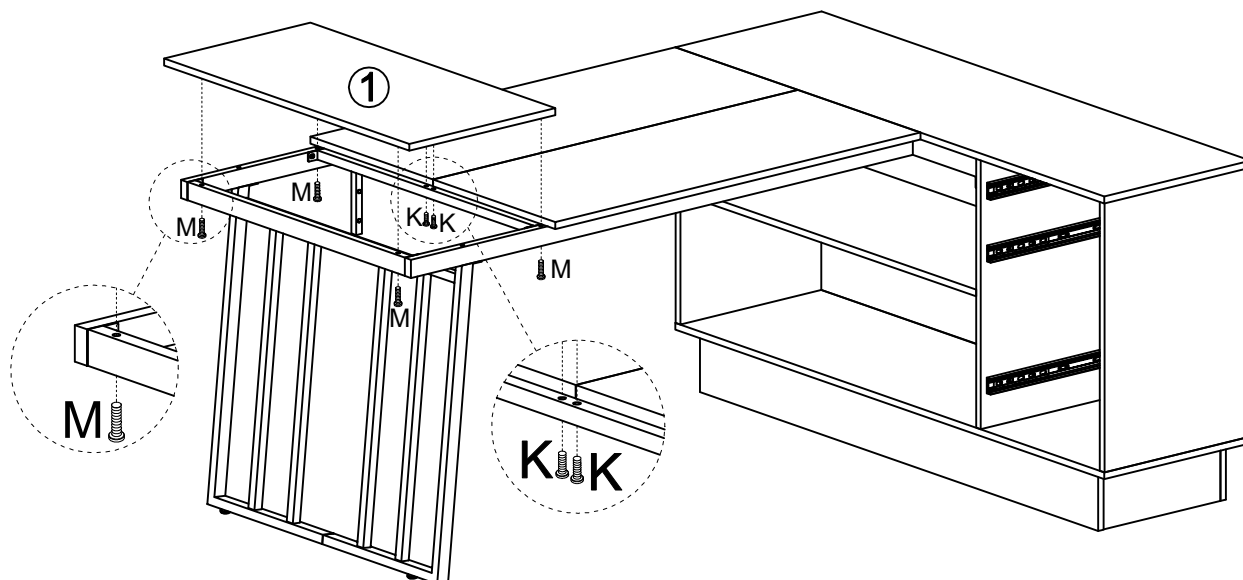

K	X2	M	X4
M6X30mm		M6X50mm	

20


screw down

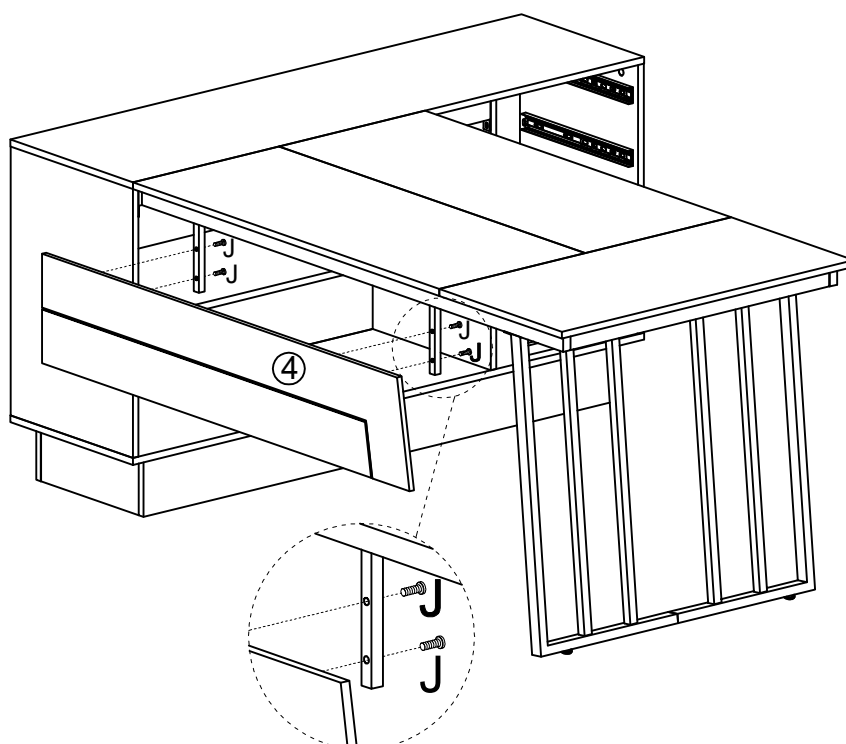






J	X4
M6X25mm	

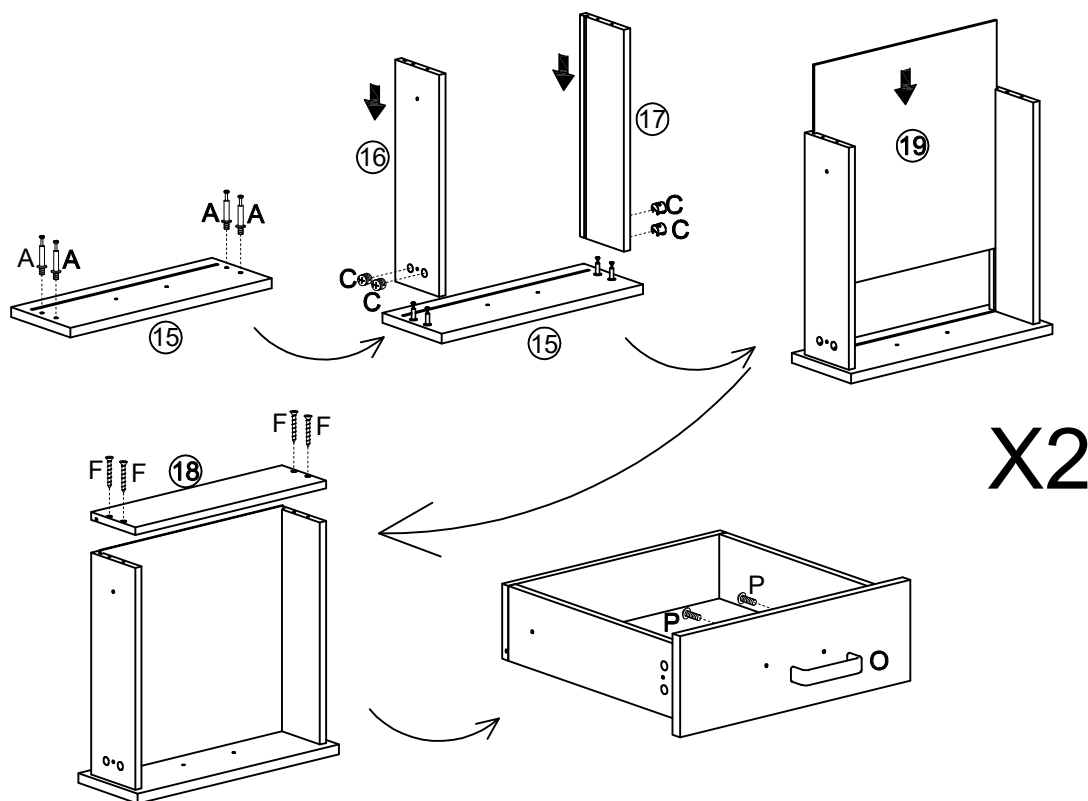








21




A	X8	C	X8	F	X8	O	X2	P	X4
									
φ6X35mm		φ15X10mm		φ4X35mm		102X27X19mm		M4X18mm	

22

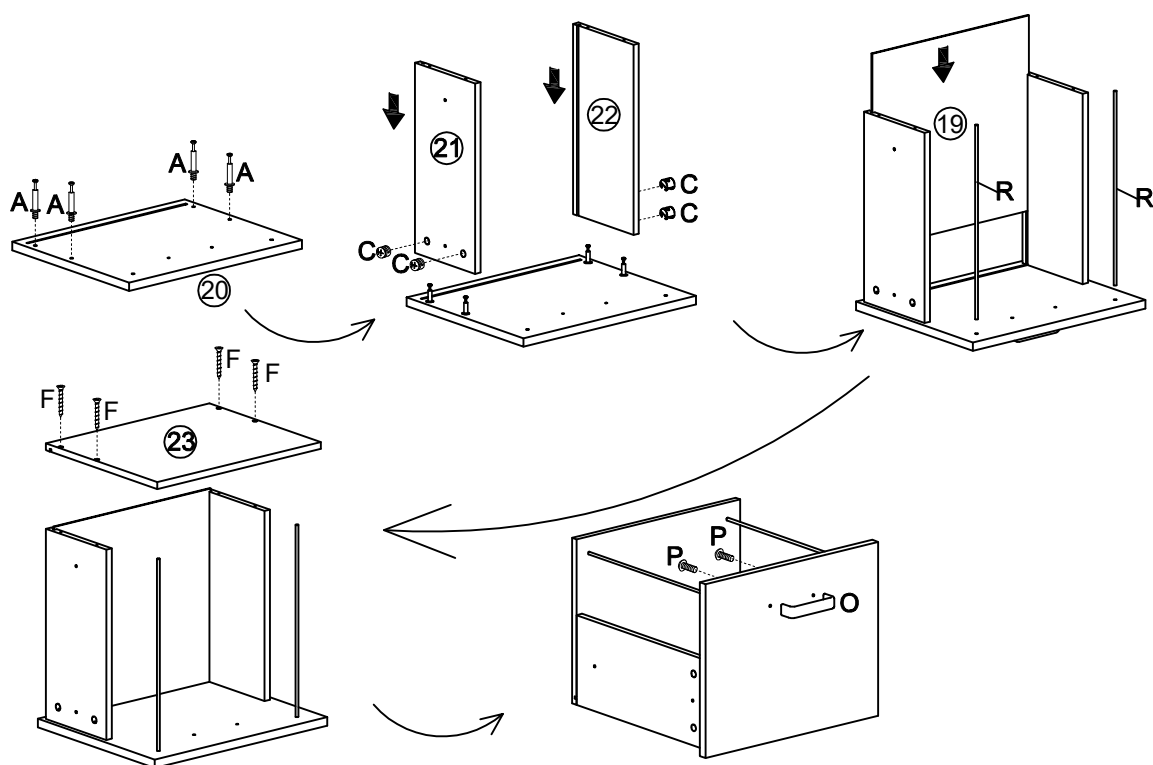



A	X4	C	X4	F	X4	O	X1	P	X2	R	X2
											
φ6X35mm		φ15X10mm		φ4X35mm		102X27X19mm		M4X18mm		L352	

23

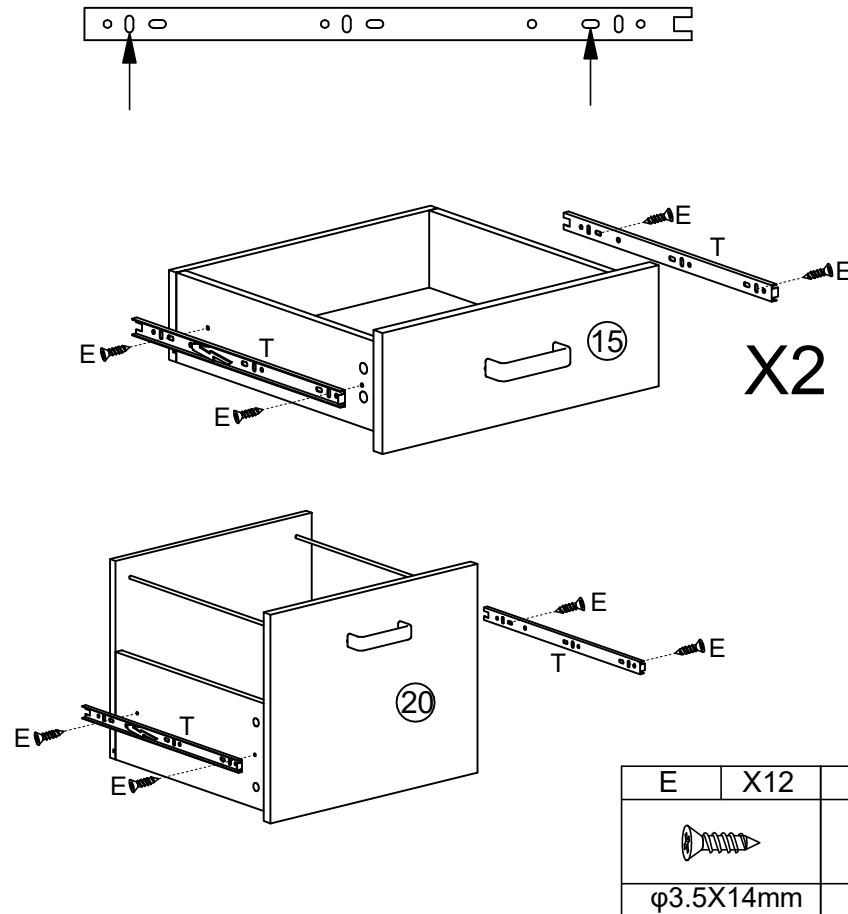

24

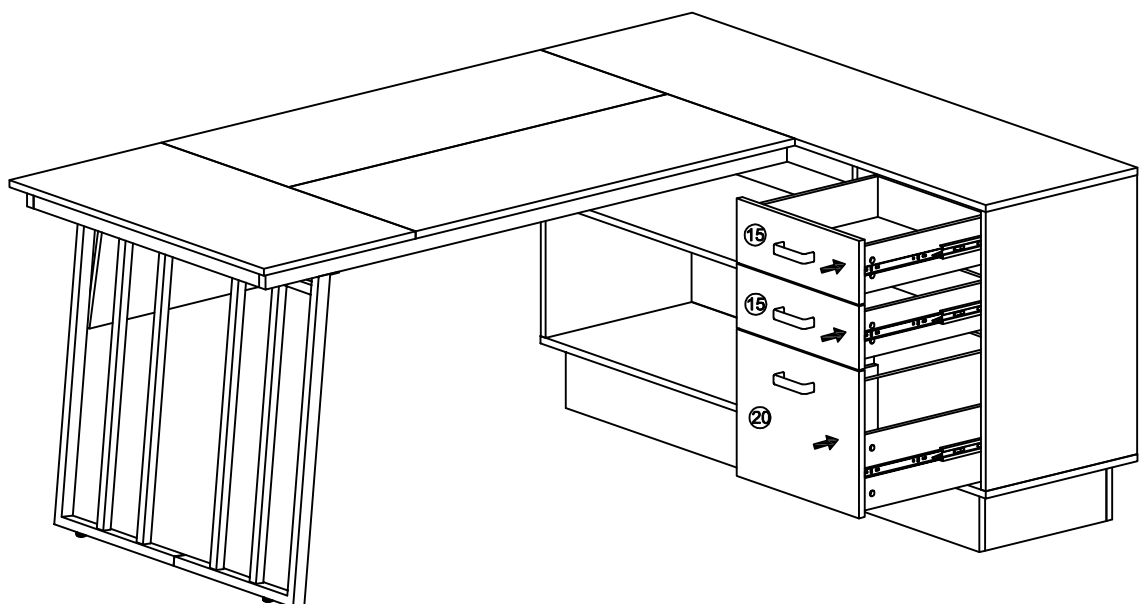

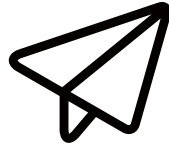

## No heartburn, when we handle the return

---

### Our way

---



support@tribesigns.com



Replacement/Refund



You

### Their way

---



Re-package item



Schedule pick-up



Track package



Replacement



You

Contact our customer service team



**support@tribesigns.com**  
**www.tribesigns.com**



**1-424-220-6888**