



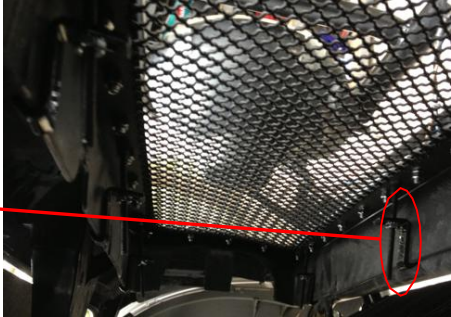
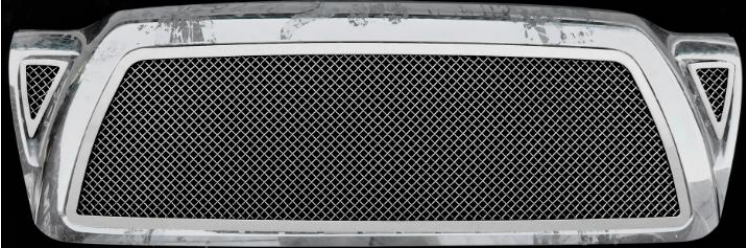
<b>Part#</b>	T76456T/H	<b>Application</b>	For 2005-2010 Toyota Tacoma 1 PC Center & 2 PCS For Side Holes
--------------	-----------	--------------------	--

	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
<b>Parts List</b>	#1	Mesh Grille	3	Stainless steel	#4	Studs	8	6-32×3"
	#2	J hook	8		#5	Studs	4	6-32×1.5"
	#3	Washers	4		#6	Nylon Lock Nuts	12	6-32

**Install Notes:** Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Optional: pop hood, remove the black plastic cover (on top of OEM grille) from vehicle. If you are still unable to access the rear, remove the grille shell according to factory manual.	
3	Center the 2 small grilles onto the opening of the factory grille, mark & drill 4 holes according to the position of the weld nuts on the rear of the grille.	
4	Secure (4) studs to the threaded holes on the rear of the grilles.	
5	Center the grilles on the factory grille again. Be sure the studs are through the OEM grille shell. Secure 2 small grilles using 4 washers and 4 lock nuts from the back side of the OEM grille shell.	

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	T76456T/H	Application	For 2005-2010 Toyota Tacoma 1 PC Center & 2 PCS For Side Holes
<b>6</b>	<p>Cut out the OEM plastic grille. Secure the center grille using 8 J hooks and lock nuts from the back side of the OEM grille shell.</p>	<div style="display: flex; justify-content: space-around; align-items: flex-start;">  <div style="border: 1px solid black; padding: 5px;">Cut out the center bars</div> </div> <div style="display: flex; justify-content: space-around; align-items: center; margin-top: 10px;"> <div style="border: 1px solid black; padding: 5px; text-align: center;">             (8) Studs              (8) J hooks              (8) Nuts           </div>   </div>	
<b>7</b>	<p>Make sure the insert is centered and tighten the hardware.</p>		
<b>8</b>	<p>Reinstall the plastic shroud with the fasteners removed in Step 2.</p>		
<b>9</b>	<p>Installation completed.</p>		

The instruction here is for your reference only. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!