





	MAS90: 5043-43240
	<b>SUMMIT BED FRAME HARDWARE</b>
<b><u>QTY:</u></b>	<b><u>DESCRIPTION:</u></b>
8	100MM DECORATIVE HEAD LAG BOLTS
1	4MM ALLEN WRENCH
10	6 X 1 1/4" PHIL FLAT PARTICLE BOARD SCREW
1	4MM POWER DRILL DRIVER
 LAG BOLT  4MM ALLEN WRENCH  PHIL FLAT PARTICLE BOARD SCREW  4MM POWER DRILL DRIVER	

ASSEMBLY: 1 PERSON AND 30 MINUTES

**TOOLS:**

- 1) 4 mm Allen Wrench (INCLUDED)
- 2) 4 mm Allen Drill Bit  
(Be sure to FULLY SEAT bit into bolt head before turning)
- 3) Phillips Head Screwdriver

\*We recommend using a power driver with the drill bit if available\*

BE SURE THAT LAG BOLTS ARE STARTED INTO THE HOLES ON THE FRAME RAILS DURING ASSEMBLY.  
DO NOT FULLY TIGHTEN UNTIL ASSEMBLY IS LOOSELY COMPLETE.



**SUMMIT FULL BOOKCASE BED**  
**w/ DOUBLE 4 DRW STORAGE**

**4655/4658/4659**  
**4695/4695**



**PARTS LIST**


- A) 8 – 100mm Decorative Head Lag Bolts
- B) 1- Headboard Assembly
- C) 1- Footboard Assembly
- D) 2 -5 1/4" x 75" Mattress Rails w/Support Cleats.
- E) 3 -3 1/2" x 38 3/4" (Twin) Individual slats
- F) 10 -1 1/4" Wood Screws
- G) 1 – 4mm Driver for power drill
- H) 8 - Silver drawer pulls (box in drawer unit)
- I) 16 - 1 1/2" Pan head machine screws (box in drawer unit)
- J) 1 - Silver Knob (stapled to inside of Footboard Door)
- K) 1 - 3/4" Pan head machine screw (packaged with knob)

**NOTE:**


**Make sure you have all parts before beginning assembly. If you need a part, contact the dealer where you purchased your bed.**

- 1) Attach mattress rails (D), to headboard (B), and footboard (C) with eight lag bolts and tighten.
- 2) Spread Slat roll out across bed frame from end to end. Place wood screws in 4 outside corners with slat pushed tightly up against the footboard/headboard. Place 3 loose slats into gaps in slat roll, and screw down with wood screws. See Slat installation information on following pages.
- 3) Install pulls on drawer fronts and knob on footboard door with supplied machine screws, and slide 4Drw Underdressers into position below mattress rail on both sides of bed.
- 4) Add the proper thickness innerspring bunk mattress. See Living Spaces for details.

When used with a slot roll, the three individual slats should be placed evenly in the gaps and underneath the strapping before fastening.

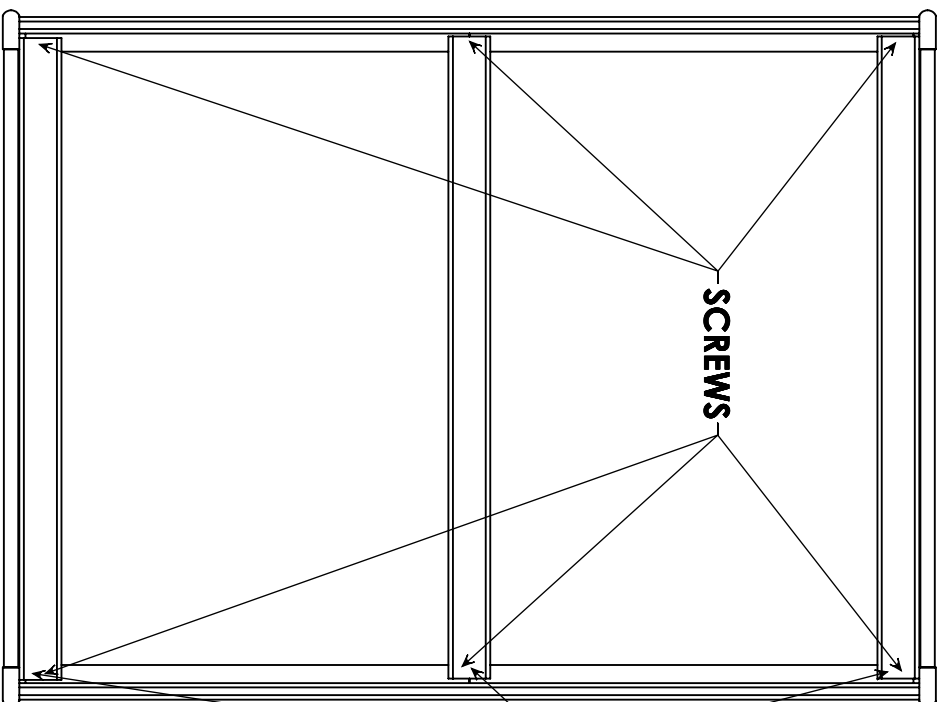

Installation of individual slats for use with Bunkie Board  
(Bunkie Board sold separately)  
See your retailer for purchase of Bunkie Board

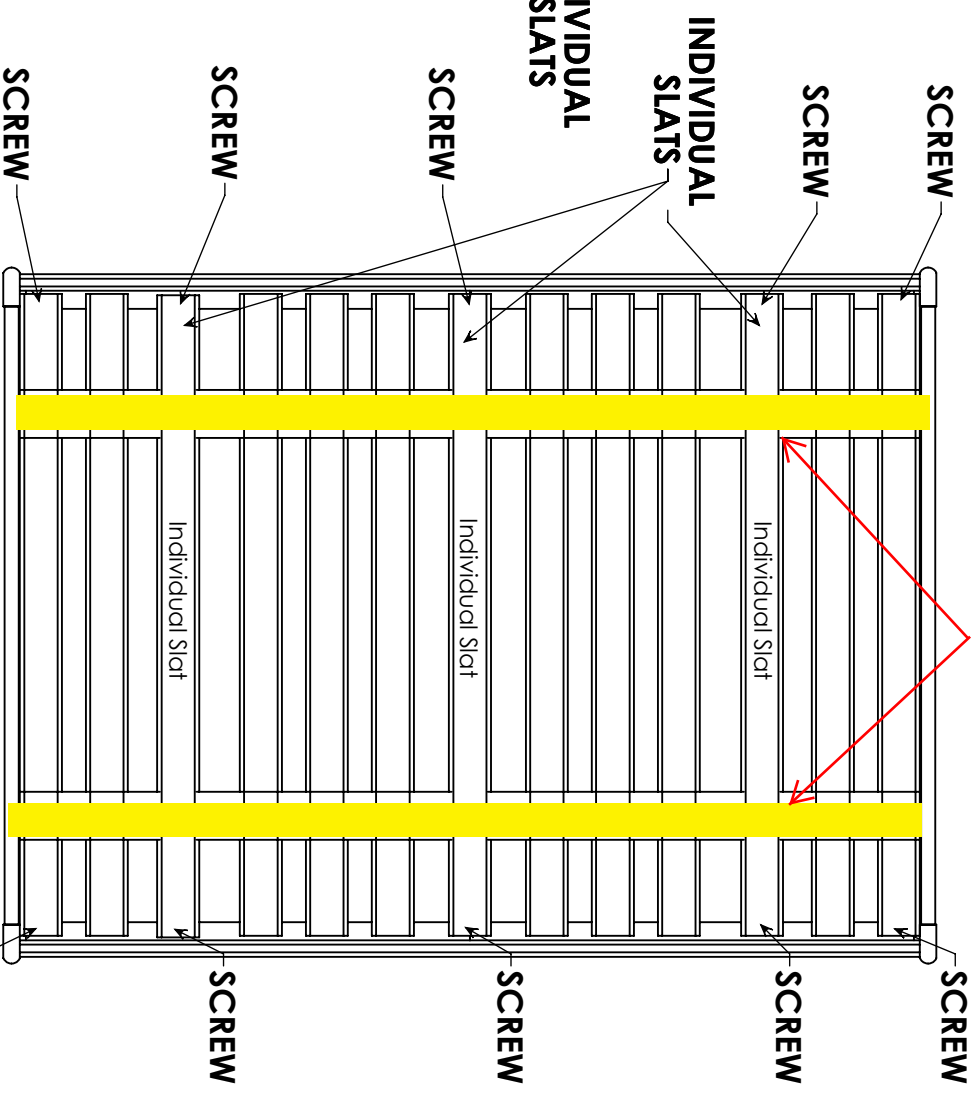

Installation of individual slats for use with Slot Roll  
(Slot roll sold separately)  
See your retailer for purchase of Slot Roll