

MADSTAD ENGINEERING Can-Am Spyder F3-T Windshields



MADSTAD ENGINEERING Can-Am Spyder F3-T Windshields Instruction Manual

[Home](#) » [MADSTAD Engineering](#) » **MADSTAD ENGINEERING Can-Am Spyder F3-T Windshields Instruction Manual** 

Contents

- [1 MADSTAD ENGINEERING Can-Am Spyder F3-T Windshields](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 INSTALLATION OVERVIEW](#)
 - [4.1 Windshield Installation](#)
- [5 Adjustment](#)
- [6 Disclaimer](#)
- [7 Returns and Warranty](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)

MADSTAD
ENGINEERING

MADSTAD ENGINEERING Can-Am Spyder F3-T Windshields



Product Information

Specifications

- **Product Name:** Can-Am Spyder F3-T / F3-LTD MadStad Adjustable Windshield Brackets
- **Manufacturer:** MadStad Engineering
- **Compatibility:** Can-Am Spyder F3-T / F3-LTD models
- **Adjustability:** Height and angle adjustable
- **Warranty:** Lifetime warranty on brackets against manufacturing defects; 1-year warranty on plastic parts

Product Usage Instructions

Installation

Please read the entire guide before installing the system.

Follow these steps:

1. Remove the factory windshield and mounting blocks.
2. Bolt the MadStad adjustable windshield brackets to the dash using the supplied M6 x 25 screws.

Adjustment

Follow these steps for adjusting the windshield:

1. Ensure the vehicle is at a complete stop before making adjustments.
2. Loosen both adjustment knobs by about 2 turns to free up the mechanism.
3. Lift or lower the windshield so that the top edge is at mouth level and set the angle to approximately 60

degrees.

4. Adjust further for optimal airflow and comfort as needed.

Disclaimer

MadStad Engineering and its owners are not liable for any damages resulting from product use. Installation signifies acceptance of terms.

Returns and Warranty

MadStad adjustable brackets carry a lifetime warranty against manufacturing defects. Cosmetic issues and parts subject to wear over time are not covered. Plastic parts have a 1-year warranty against manufacturing defects. Visit the website for more details.

Date: May 10, 2018

FAQ

- **Q: Can these brackets be used on other models besides Can-Am Spyder F3-T / F3-LTD?**

A: These brackets are specifically designed for Can-Am Spyder F3-T/F3-LTD models and may not be compatible with other models.


- **Q: How do I clean the windshield and brackets?**

A: Use a mild soap and water solution with a soft cloth to clean the windshield and brackets. Avoid abrasive cleaners that may damage the finish.

Please read this entire guide before installing this system.


INSTALLATION OVERVIEW

The factory windshield and mounting blocks must be removed. The MadStad adjustable windshield brackets bolt to the dash replacing the factory mounting blocks using the supplied M6 x 25 screws. (not M6 x 16 shown in photo)

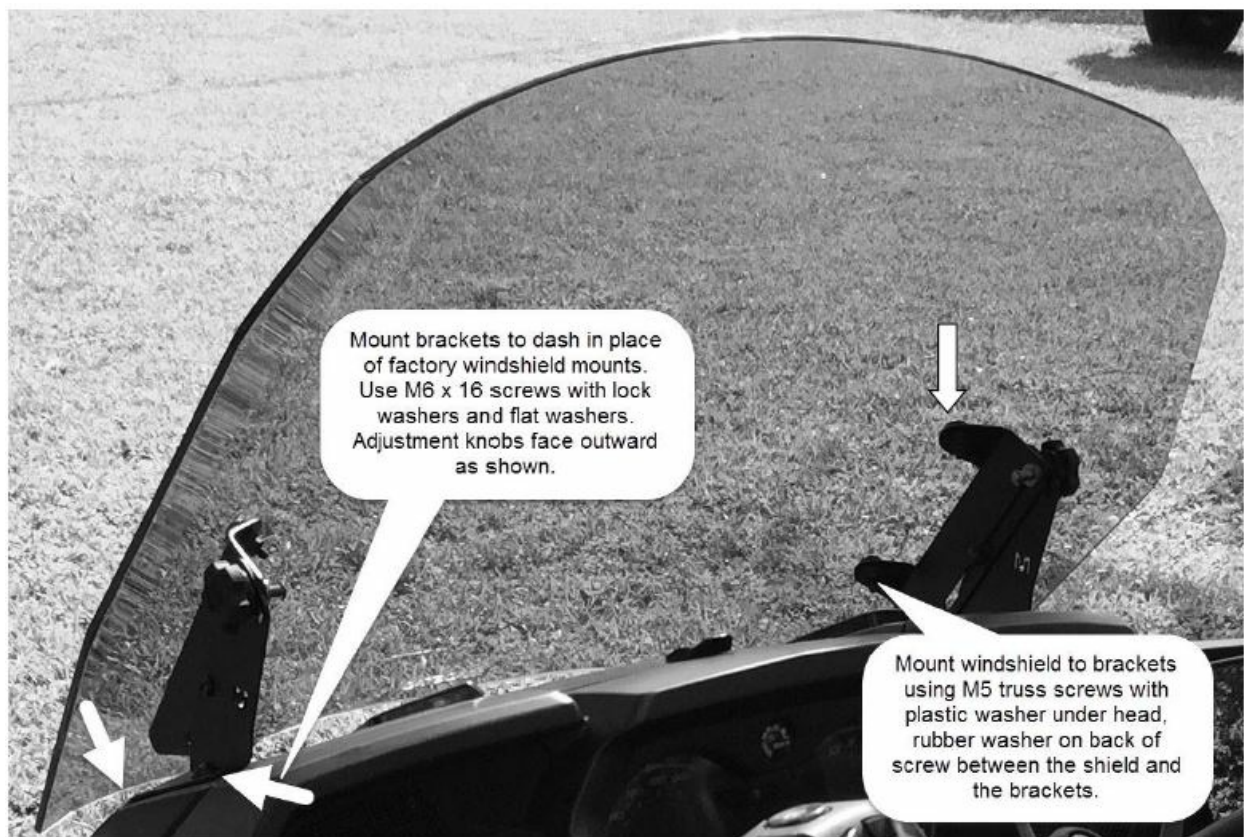

Windshield Installation

1. Pre-install the Truss screws & washers into the windshield holes as shown in the image below.
2. Once all four of the screws are in place, gently guide the screws into the Well Nuts in the brackets until all four are set.
3. Hand-tighten the Truss screws until they swell up behind the bracket and are firmly holding the windshield.

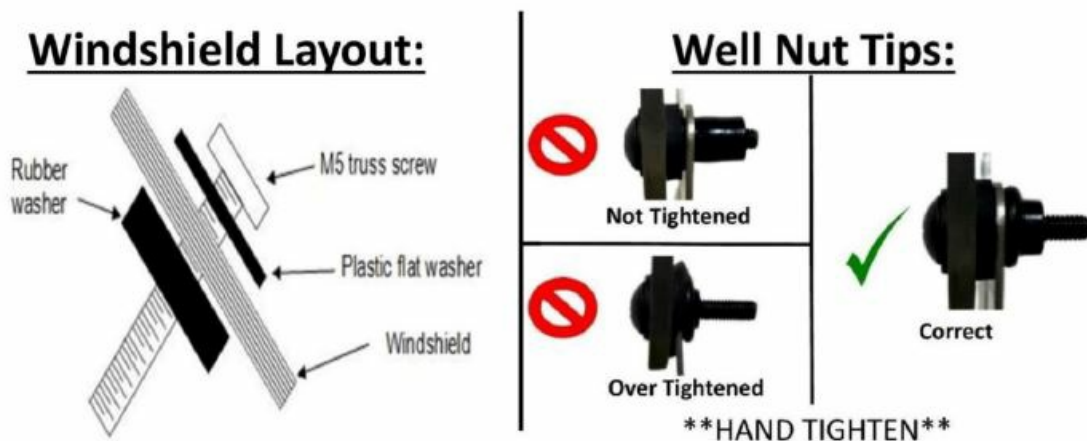

Adjustment

- Always bring your vehicle to a complete stop before adjusting the windshield!
- MadStad brackets are adjustable for both height and angle. Loosen both knobs about 2 turns to free up the mechanism. Lift or lower the windshield so that the top edge is at about mouth level, and set the angle to approximately 60 degrees. This is only an initial setting to get you started, simply adjust as necessary for

optimal airflow and comfort.

Disclaimer

Neither MadStad Engineering nor its owners shall be liable for any damages, consequential or inconsequential, resulting from the use of our products. Installation of any of our products constitutes acceptance of these terms. It is the responsibility of the user to make sure all fasteners are tightened securely, the windshield is mounted properly and the adjustment knobs are tightened snugly before putting the motorcycle in motion. MadStad systems ARE NOT intended to be adjusted while the vehicle is in motion; you must pull over out of the way of traffic and come to a complete stop before making any changes. The user must never place the windshield in such a position as to interfere with the safe and complete movement of the handlebars and controls.

Returns and Warranty

MadStad adjustable brackets carry a lifetime warranty against manufacturing defects. This does not include cosmetic issues nor any parts that inherently wear out or degrade over time such as rubber and plastic parts. Windshields, deflectors, and other similar plastic parts are warrantied for 1 year against manufacturing defects, not against cosmetic issues or issues related to normal wear and tear. Please visit our website for further details.


Contact Information

MadStad Engineering, Inc.

- 1451 E. Jefferson Street Brooksville, FL 34601 U.S.A.
- **Phone:** 352-848-3646
- **Web Site:** <http://www.madstad.com>
- **Email:** support@madstad.com

Thank you for your support, and ride safely!

Documents / Resources

	<p>MADSTAD ENGINEERING Can-Am Spyder F3-T Windshields [pdf] Instruction Manual Can-Am Spyder F3-T Windshields, Can-Am, Spyder F3-T Windshields, F3-T Windshields, Windshields</p>
---	--

References

- [M Adjustable motorcycle windshield systems | motorcycle windscreen | Madstad](#)
- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.