


MaxMate-SS2D35098MX-3.5-Oval-Nerf-Bar-Side-Steps



MaxMate SS2D35098MX 3.5 Oval Nerf Bar Side Steps Instruction Manual

[Home](#) » [MaxMate](#) » MaxMate SS2D35098MX 3.5 Oval Nerf Bar Side Steps Instruction Manual 

Contents

- [1 MaxMate SS2D35098MX 3.5 Oval Nerf Bar Side Steps](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 BEFORE INSTALLATION](#)
- [5 TORQUE VALUES](#)
- [6 Parts List](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



MaxMate SS2D35098MX 3.5 Oval Nerf Bar Side Steps



Product Information

Specifications:

- **Model:** SS2D35098MX
- **Fastener Size Torque Values :**

Fastener Size	6mm	8mm	10mm	12mm	14mm
Class 8.8 Torque (ft-lbs)	6-7	15-16	31-32	54-55	87-88
Class 10.9 Torque (ft-lbs)	6-7	22-23	44-45	78-79	125-126

Product Usage Instructions

Before Installation:

Read instructions carefully before starting installation. Remove contents from the box and verify all parts are

present. If missing parts or any damage are found, take a photo to file a claim.

Step Bars Installation:

Step 1:

Start the installation under the passenger side of the vehicle. Locate the front (3) factory studs along the inner sidewall of the body panel. Use a wire brush or thread die to remove paint buildup on the threaded studs.

Step 2:

Select (1) Mounting Bracket. Attach the Mounting Bracket to the (3) factory studs with (3) 8mm Flat Washers and (3) 8mm Nylon Lock Nuts. Leave the bracket loose at this time.

Step 3:

Repeat Steps 1-2 to install Mounting Brackets in the center and rear mounting locations along the body panel.

Step 4:

Carefully unwrap and select the Passenger/Right Sidebar P. Place the Sidebar on top of the Brackets without twisting or sliding.

Step 5:

Attach the Sidebar to the (3) Brackets with (6) 8mm Combo Hex Bolts. Do not tighten the hardware at this time.

FAQ

- **Q: What should I do if I find missing parts or damage during installation?**
 - **A:** If missing parts or any damage are found, take a photo to file a claim and contact support@maxmatedepot.com for assistance.

BEFORE INSTALLATION


BEFORE INSTALLATION READ THE INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. REMOVE CONTENTS FROM BOX AND VERIFY ALL PARTS ARE PRESENT. FAILURE TO IDENTIFY DAMAGE BEFORE INSTALLATION COULD LEAD TO A REJECTION OF ANY CLAIM. IF MISSING PARTS OR ANY DAMAGE ARE FOUND, PLEASE TAKE A PHOTO FOR THE PURPOSE OF FILING A CLAIM. TO FILE YOUR CLAIM, PLEASE EMAIL SUPPORT@MAXMATEDEPOT.COM.

TORQUE VALUES


Fastener Size	Class 8.8 Torque (ft-lbs)	Class 10.9 Torque (ft-lbs)
6mm	6-7	6-7
8mm	15-16	22-23
10mm	31-32	44-45
12mm	54-55	78-79
14mm	87-88	125-126

Parts List

- **X1:** Driver/Left Sidebar **D**
- **X1:** Passenger/Right Sidebar **P**
- **X6:** Mounting Brackets (use left or right)
- **x12 :** 8-1.25mm x 25mm Combo Bolts
- **x18:** 8mm x 24mm x 2mm Flat Washers
- **x18:** 8-1.25mm Nylon Lock Nuts

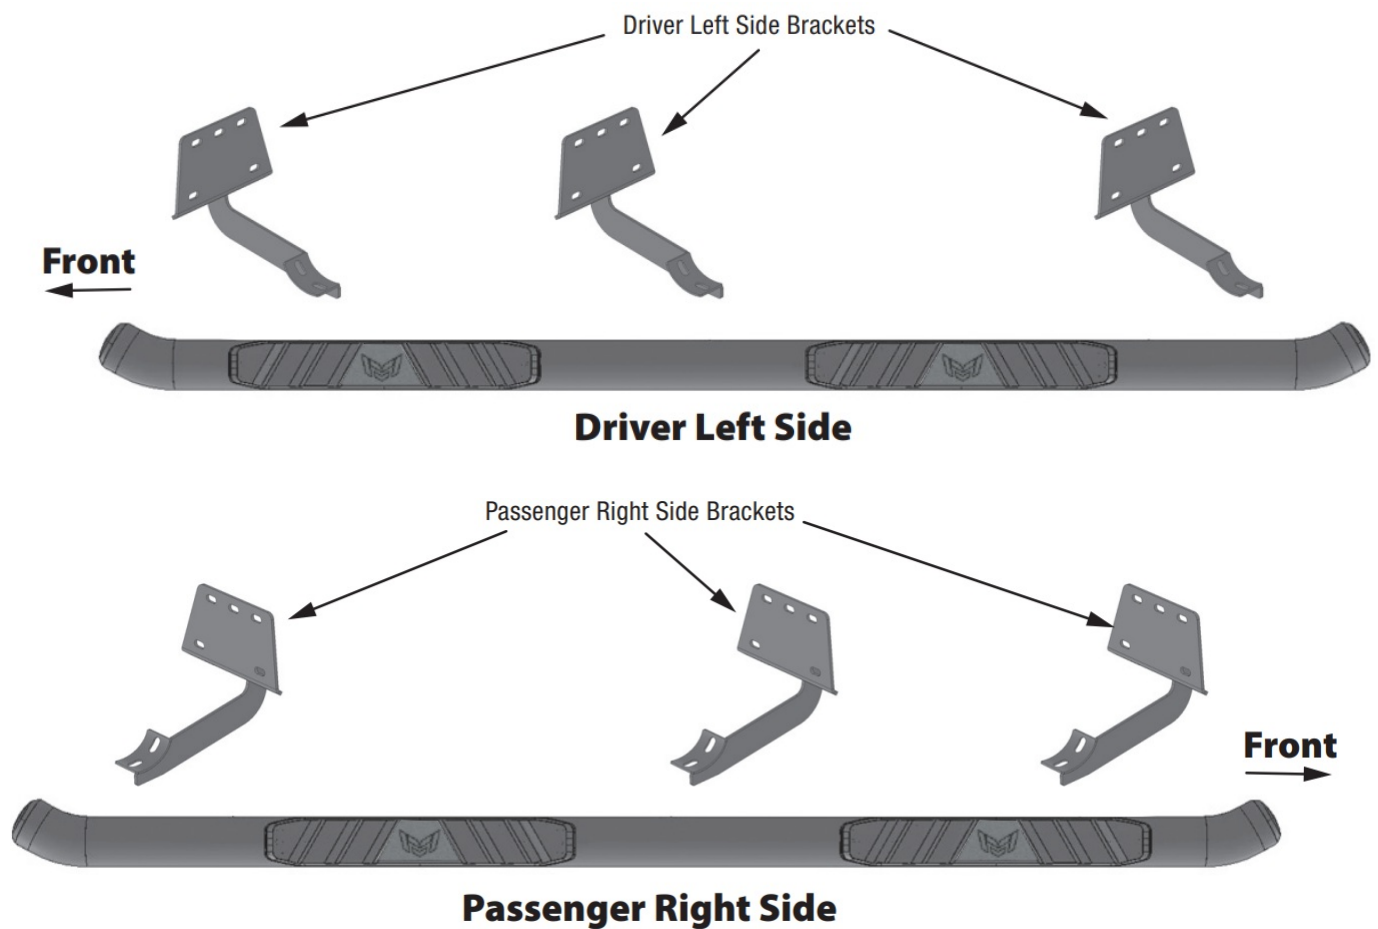

- contact us: support@maxmatedepot.com

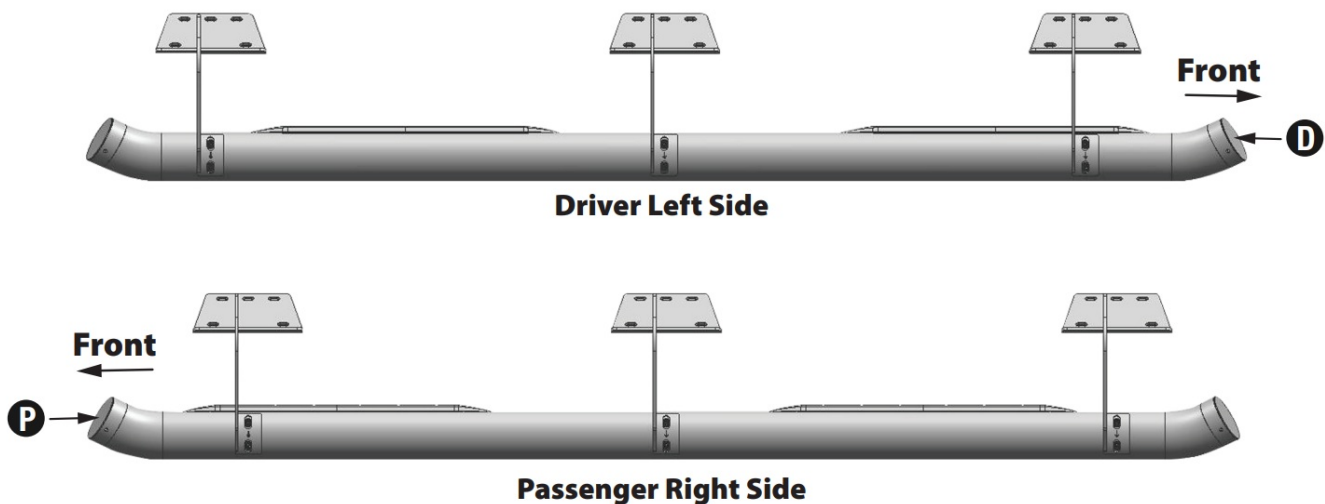


- Distinguish the Driver and Passenger Side Steps by the **D** and **P** labeling on the end caps.
- **NOTE:** REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

STEP 1

Start the installation under the passenger side of the vehicle. Locate the front (3) factory studs along the inner sidewall of the body panel, (Fig 1).


NOTE: Use a wire brush or thread die to remove paint buildup on the threaded studs.

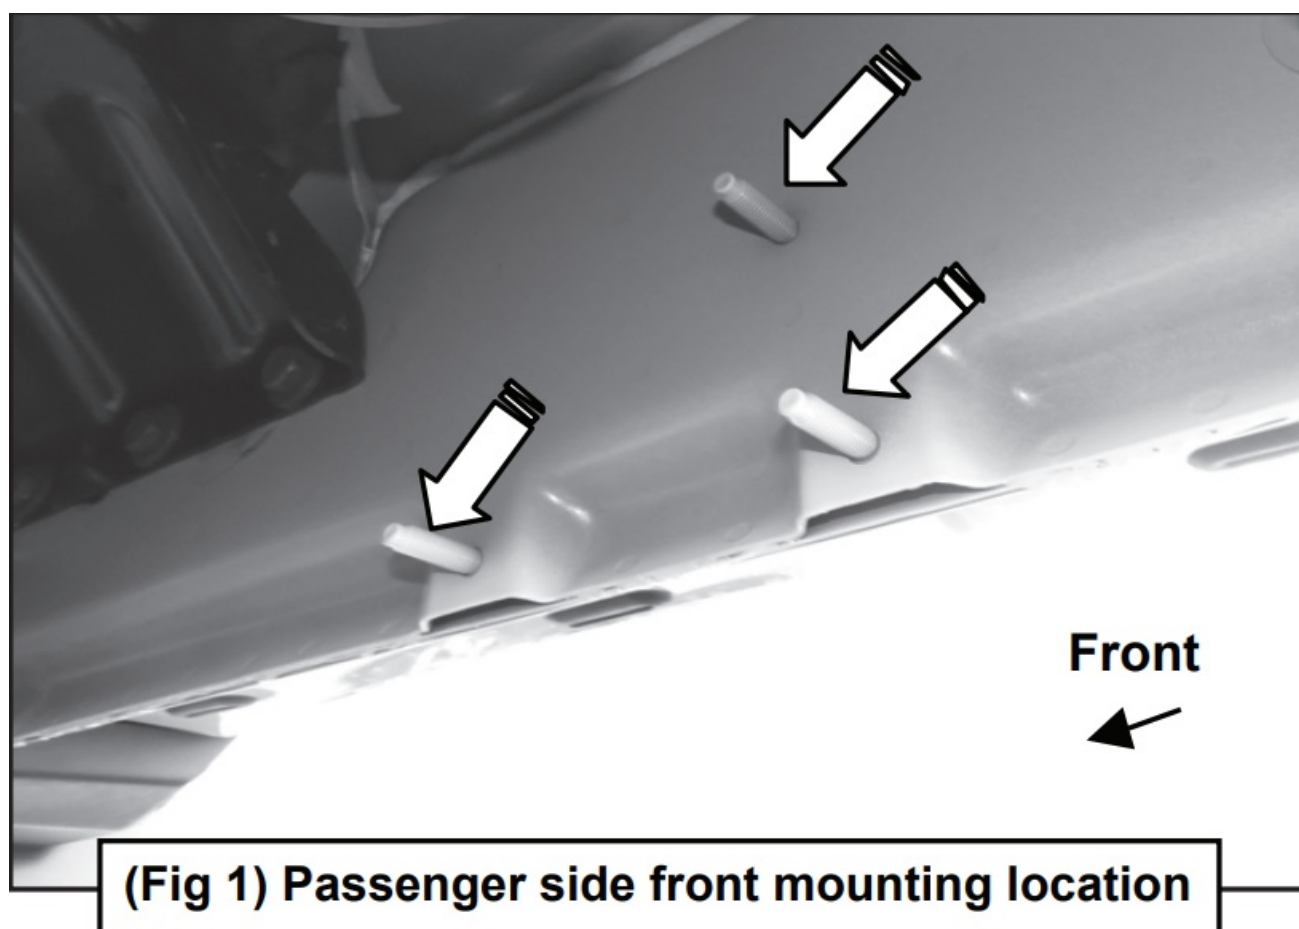


STEP 2

Select (1) Mounting Bracket, (Fig 2).


NOTE: All (6) Brackets are universal and will fit left or right side. Attach the Mounting Bracket to the (3) factory studs with (3) 8mm Flat Washers and (3) 8mm Nylon Lock Nuts, (Figs 2-3). Leave bracket loose at this time.


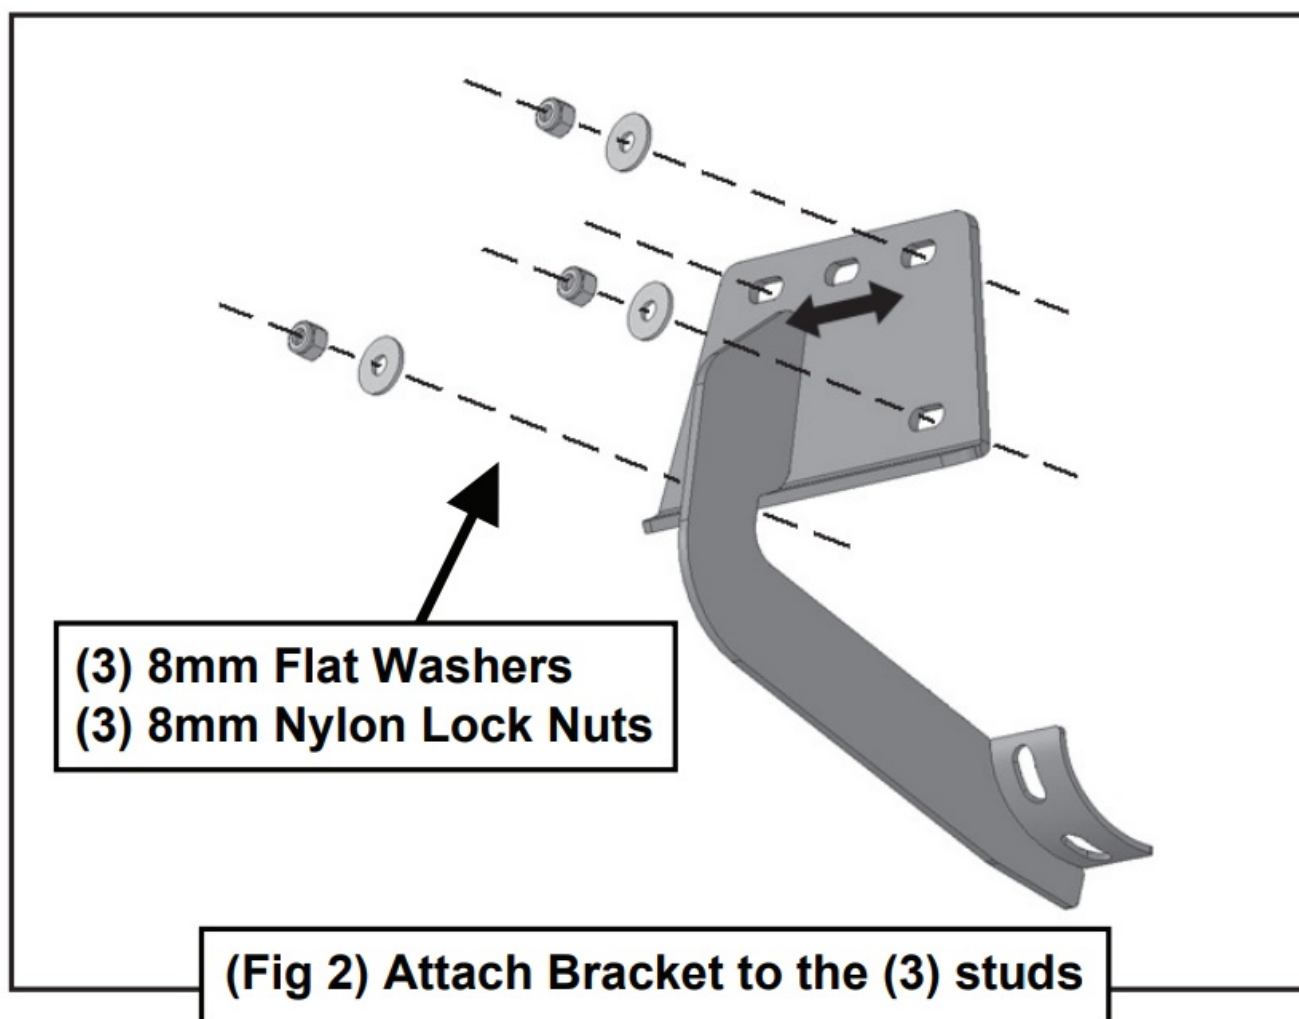



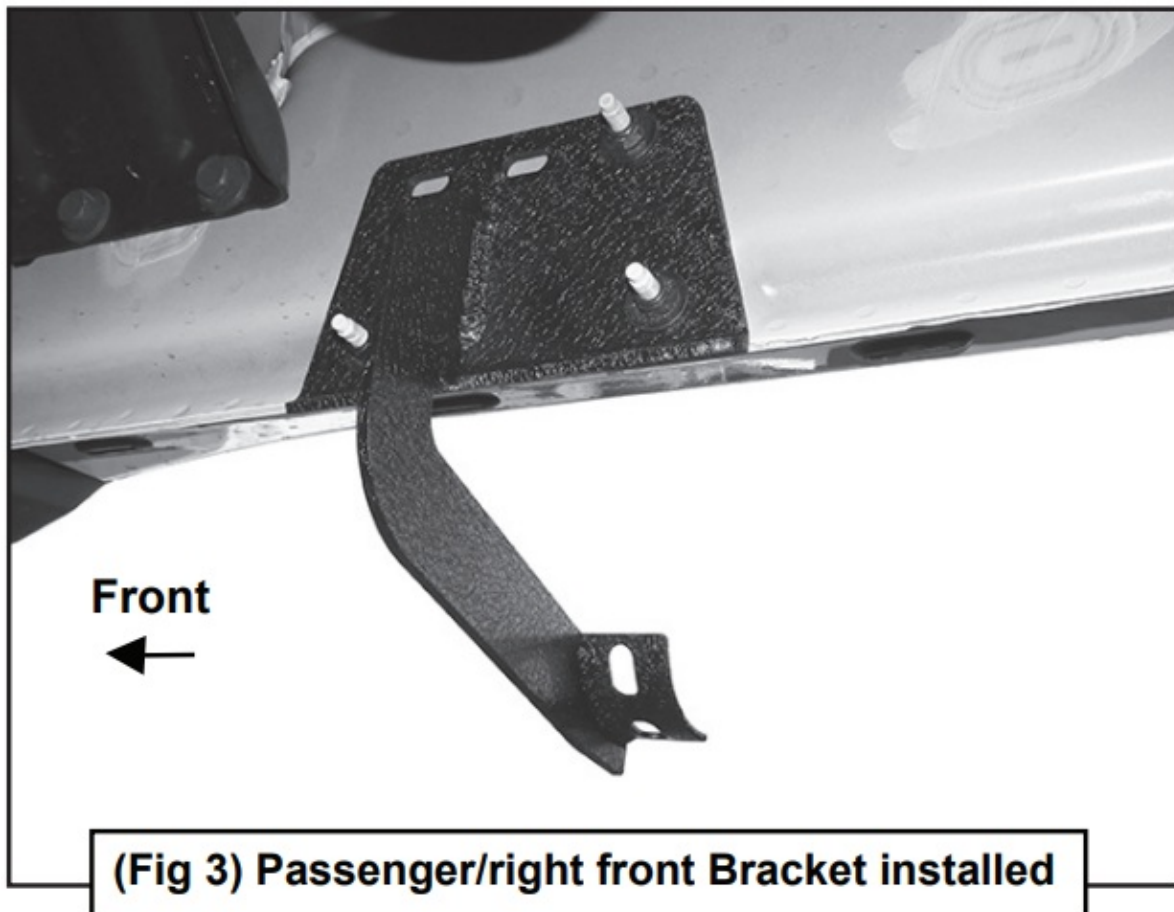


STEP 3

Repeat STEPS 1-2 to install Mounting Brackets in the center and rear mounting locations along the body panel, (Figs 4-8).

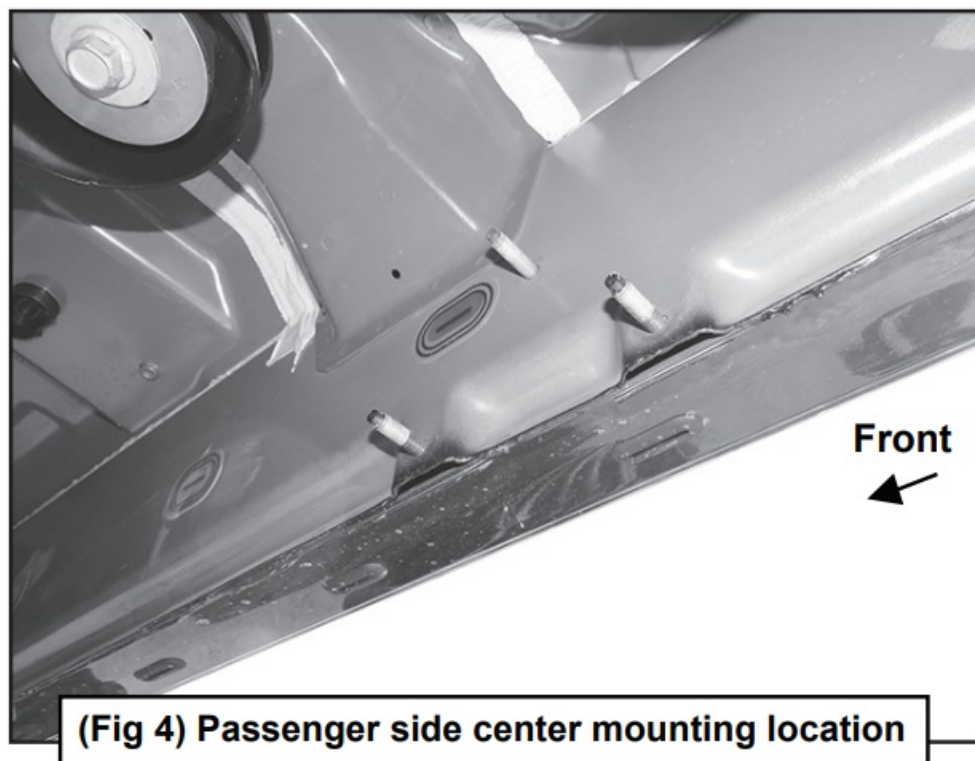

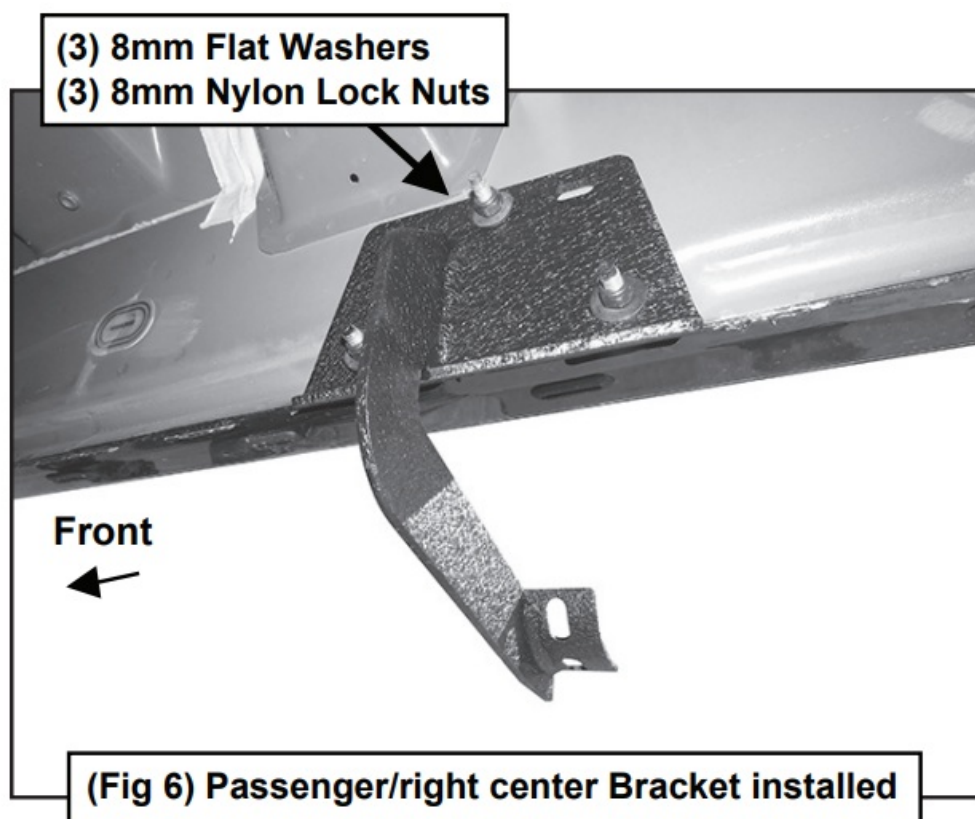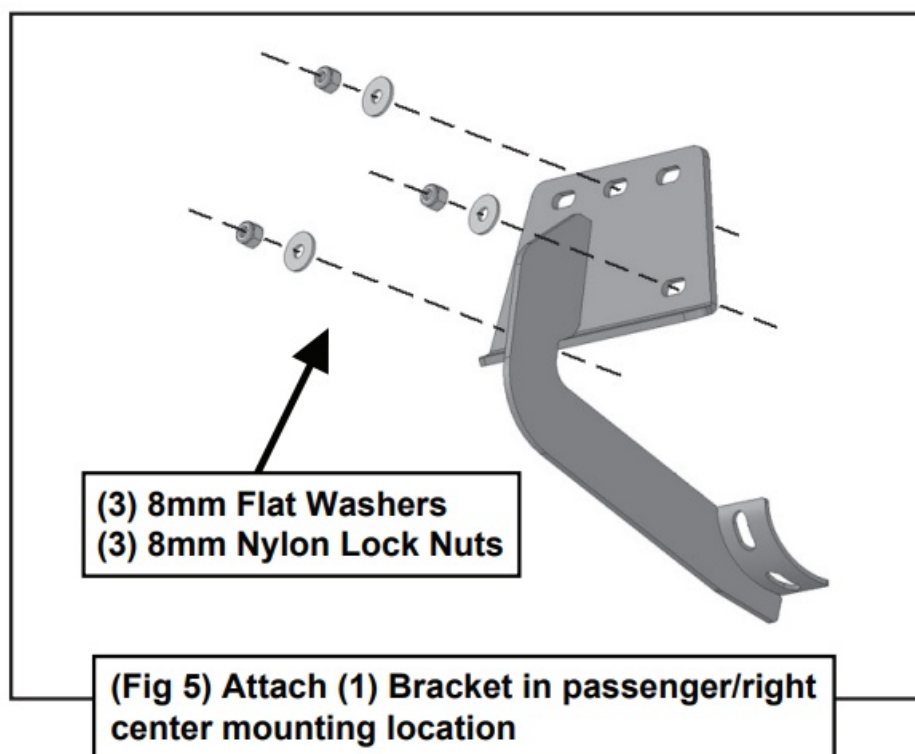

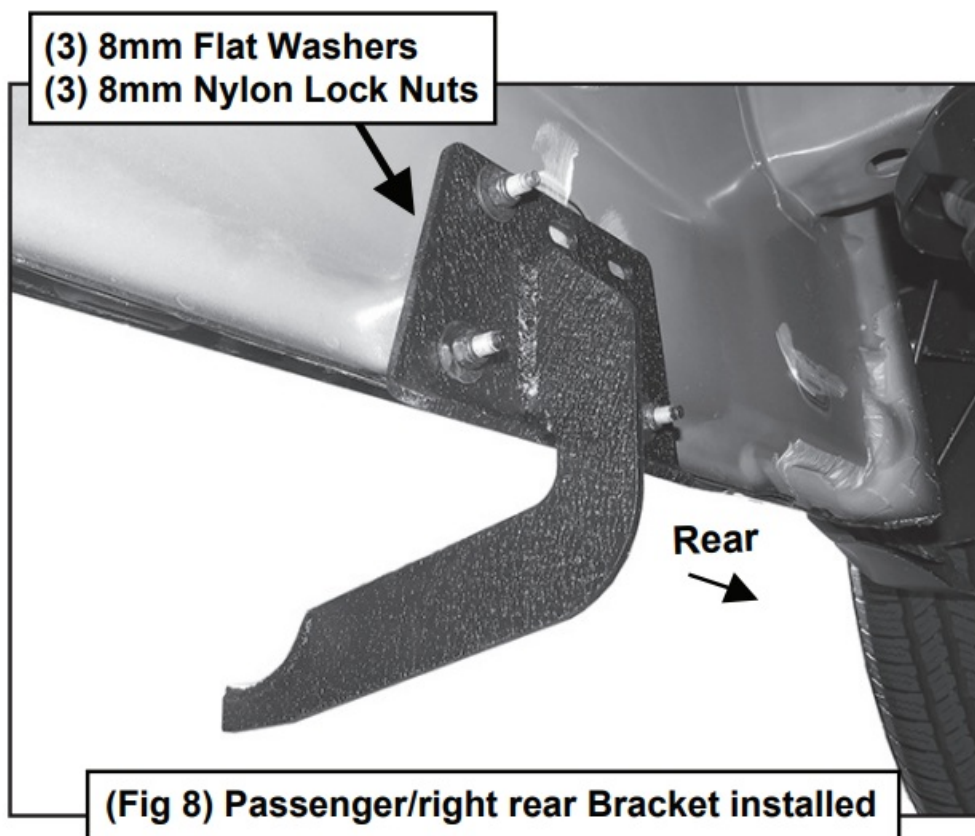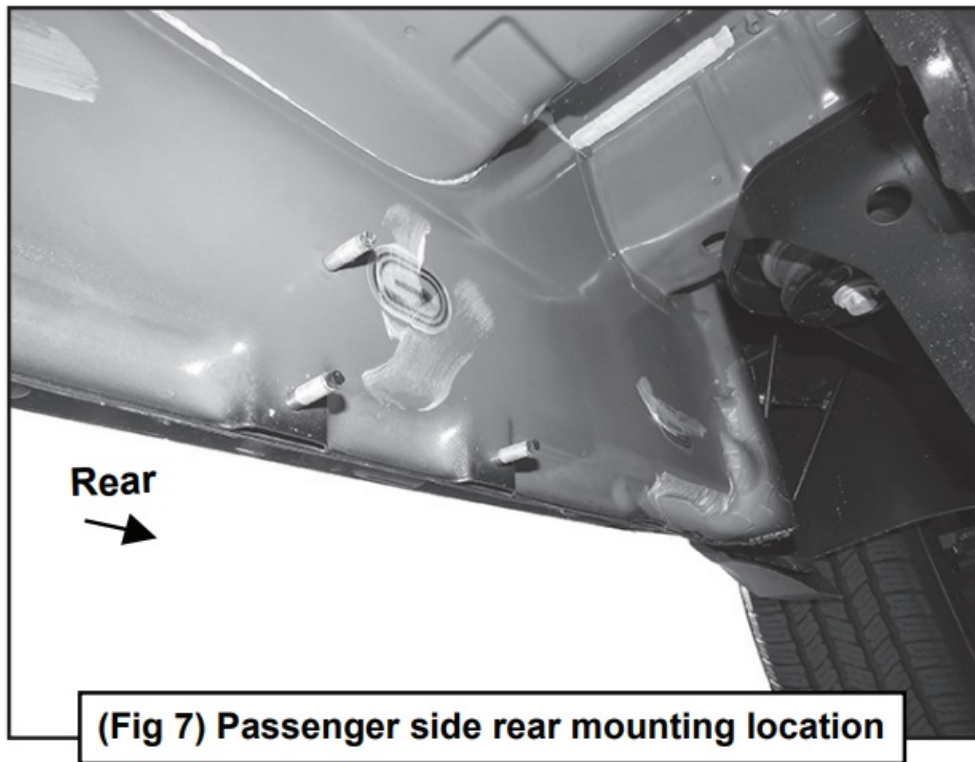


STEP 4

Carefully unwrap and select the Passenger/Right Sidebar. Use the illustration above to help identify the correct Sidebar **P**. Place the Sidebar on top of the Brackets.


IMPORTANT: DO NOT twist or slide, (front to back), the Sidebar on the Brackets or damage to the finish may result

STEP 5


Attach the Sidebar to the (3) Brackets with (6) 8mm Combo Hex Bolts, (Figs 9-12). DO NOT tighten hardware at this time.

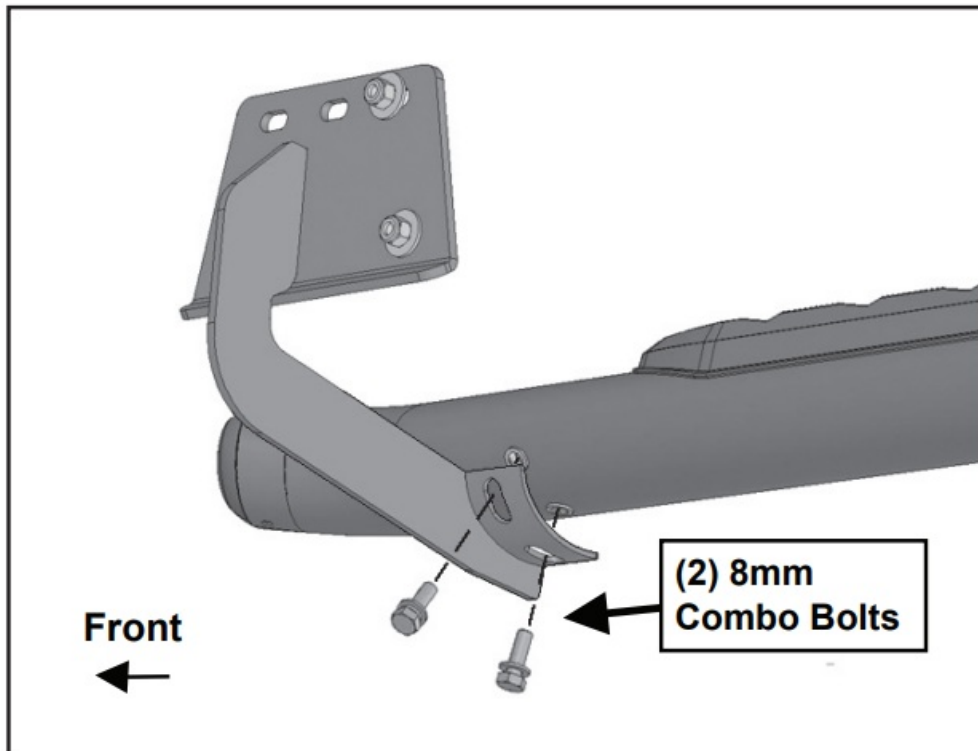

(Fig 9) Attach Passenger/Right Sidebar **P to front Bracket**

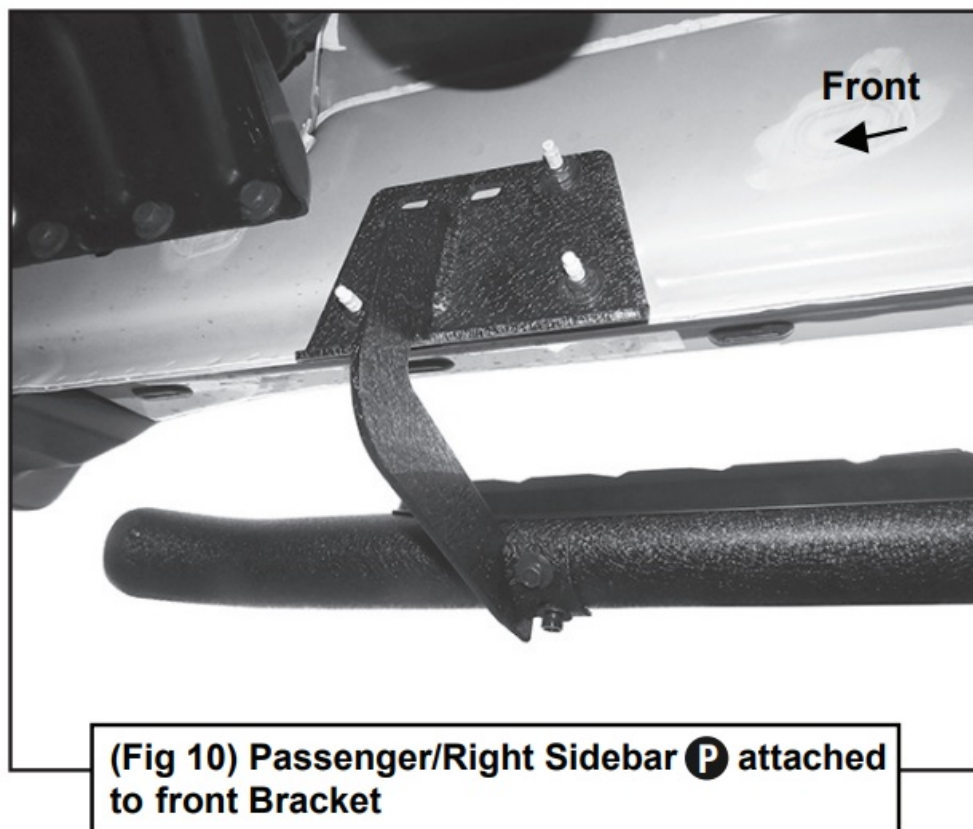

(Fig 10) Passenger/Right Sidebar **P attached to front Bracket**

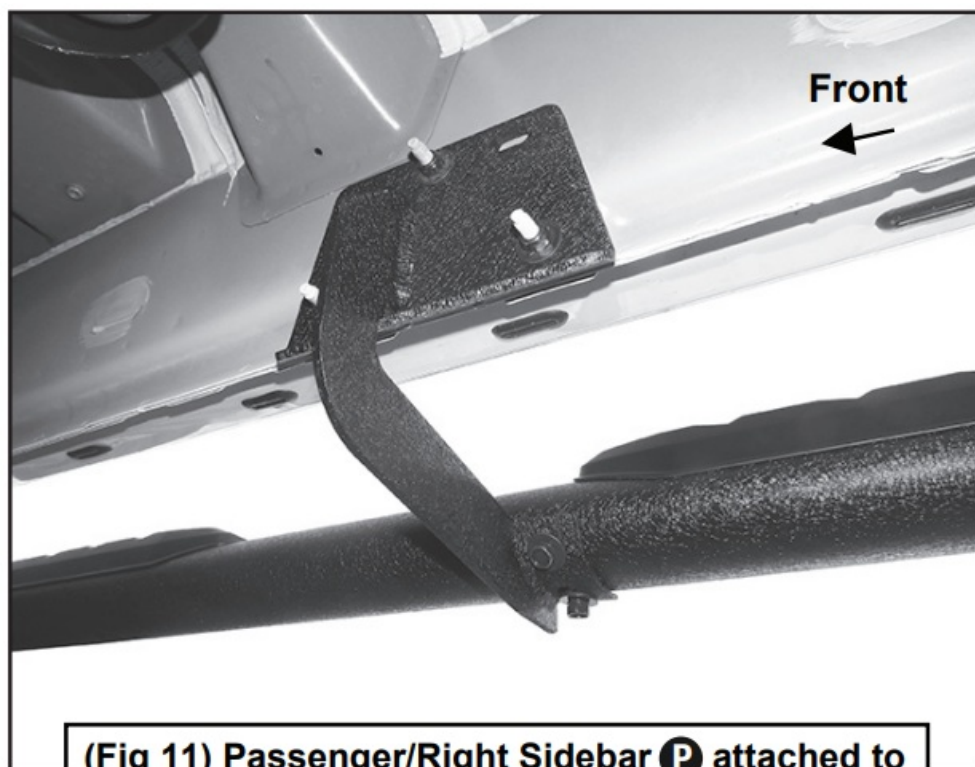

(Fig 11) Passenger/Right Sidebar **P** attached to center Bracket



(Fig 12) Passenger/Right Sidebar **P** attached to rear Bracket

STEP 6


Level and adjust the Sidebar as necessary and fully tighten all hardware.

STEP 7


Repeat STEPS 1-6 for Driver/Left Sidebar **D** installation.

STEP 8

Do periodic inspections to the installation to make sure that all hardware is secure and tight.

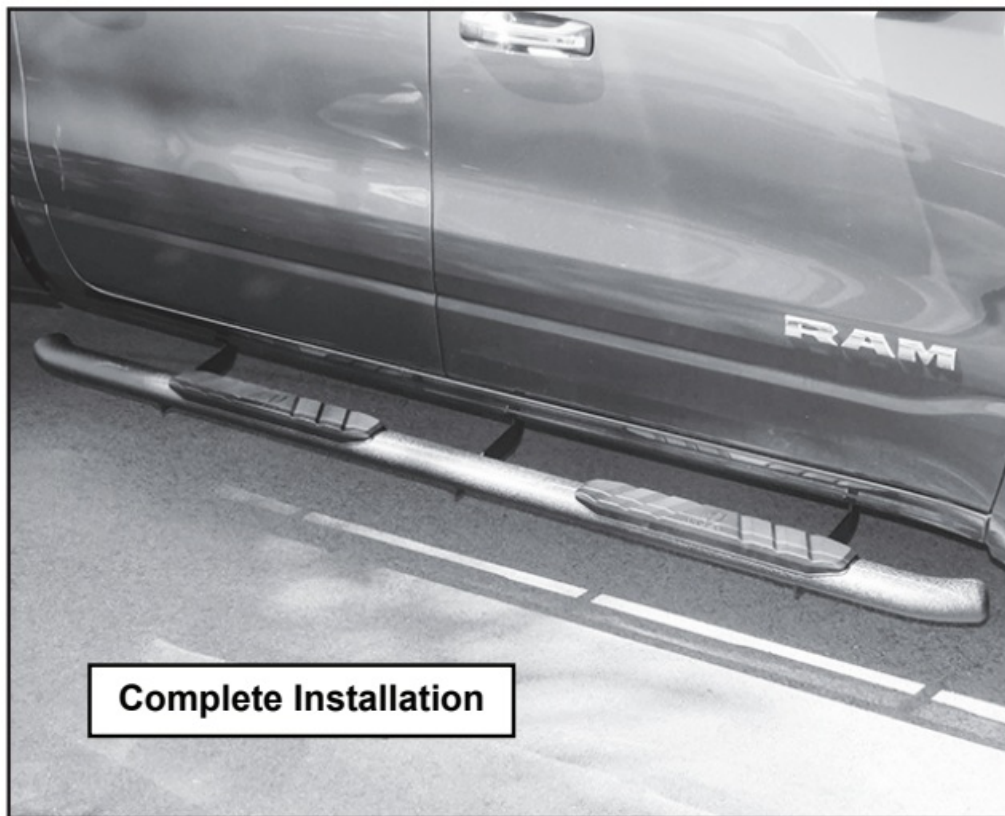

Documents / Resources

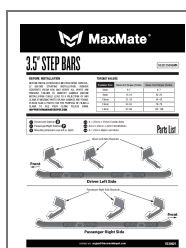

[MaxMate SS2D35098MX 3.5 Oval Nerf Bar Side Steps](#) [pdf] Instruction Manual
SS2D35098MX 3.5 Oval Nerf Bar Side Steps, SS2D35098MX, 3.5 Oval Nerf Bar Side Steps, Nerf Bar Side Steps, Bar Side Steps, Side Steps, Steps

References

- [User Manual](#)

Manuals+. [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.