



MBRP S60610 Single Side Exit Instruction Manual

[Home](#) » [MBRP](#) » MBRP S60610 Single Side Exit Instruction Manual 

Contents

- [1 MBRP S60610 Single-Side Exit](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Installation of MBRP Performance Exhaust](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

MBRP[®]

MBRP S60610 Single-Side Exit



Product Information


- The product is an MBRP Performance Exhaust system.
- It is designed to improve power, sound, and driving experience.
- The system includes an Over-Axle Pipe, Tail Pipe, Exhaust Tip, and necessary clamps and hangers.
- Sensors from the factory exhaust are reused in the installation.

Product Usage Instructions

Removal of Stock System

1. Apply a penetrating lubricant liberally to all hangers and rubber insulators.
2. Disconnect and remove any sensors located in the section of the factory exhaust being removed. Retain these sensors as they will be reused. Refer to Figure 1.
3. Mark a cut line 6.0 forward of the OEM hanger. Refer to Figure 1.
4. To verify the cut line, line up the supplied Over-Axle Pipe before making the final cut. Cut the factory pipe at the cut line.
5. Unhook the three factory rubber insulators from the exhaust and
6. remove the factory pipe.

product parts

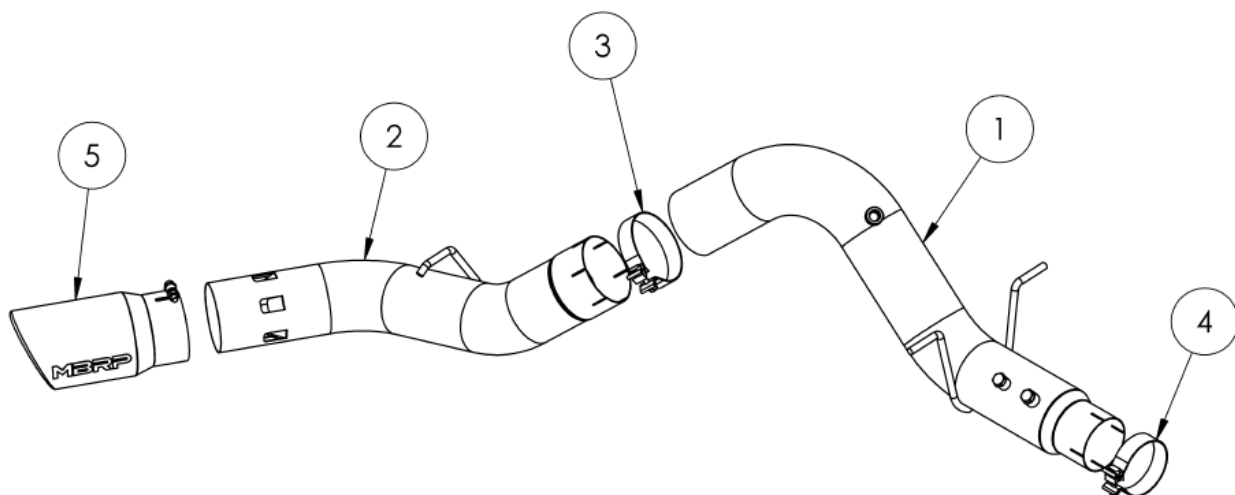

ITEM	DESCRIPTION	QTY
1	OVER-AXLE PIPE	1
2	TAIL PIPE	1
3	5" BAND CLAMP	1
4	4" BAND CLAMP	1
5	EXHAUST TIP	1

PLEASE READ BEFORE STARTING INSTALLATION

While MBRP has made every effort to ensure that all components of this system are of superior quality and properly packaged, it is the installer's responsibility to ensure the following before removal of the factory exhaust;

1. that ALL components shown above are present.
2. that ALL mating components fit together.
3. that there are no damaged components.
4. that the system you have purchased is appropriate for your vehicle year, model and
5. that you are real on teter and these ref tations previously installed or planned

If you have any questions or are uncertain about any aspect of the installation of this system to your vehicle please contact your dealer before commencing installation.

Installation of MBRP Performance Exhaust

1. Place a 4 Band Clamp onto the Over-Axle Pipe and install it onto the factory exhaust. Refer to Figure 2.
2. Install the Over-Axle Pipe hangers into the factory rubber insulators.
3. Place a 5 Band Clamp on the inlet of the Tail Pipe and install it onto the Over-Axle Pipe.
4. Install Tail Pipe hanger into the factory rubber insulator. Refer to Figure 3.
5. Install the Exhaust Tip and adjust it to your liking. Refer to Figure 4.
6. Reinstall any sensors previously removed. Short box trucks will require the plugs to be removed from the bungs in the Over-Axle Pipe for installation of the OEM sensors.


Congratulations! You are ready to begin experiencing the improved power, sound, and driving experience of your

MBRP performance exhaust system. We know you will enjoy your purchase.

PAGE 2 OF 2


Removal of Stock System

1. Apply a penetrating lubricant liberally to all hangers and rubber insulators.
2. Disconnect and remove any sensors located in the section of the factory exhaust being removed. Retain these sensors as they will be reused. Refer to Figure 1.
3. Mark a cut line 6.0" forward of the OEM hanger. Refer to Figure 1.
4. To verify the cut line, line up the supplied Over-Axle Pipe before making the final cut. Cut the factory pipe at the cut line.
5. Unhook the three factory rubber insulators from the exhaust and remove the factory pipe.

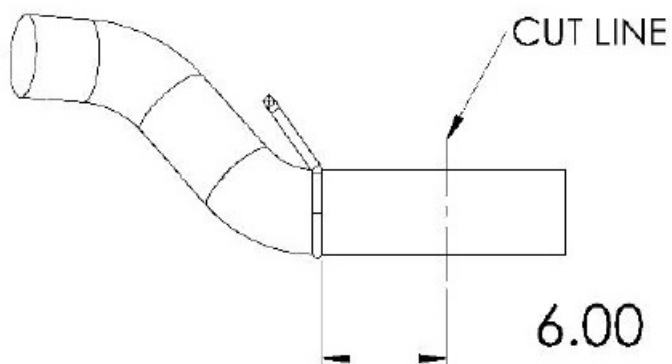

Installation of MBRP Performance Exhaust

1. Place a 4" Band Clamp onto the Over-Axle Pipe and install onto the factory exhaust. Refer to Figure 2.
2. Install the Over-Axle Pipe hangers into the factory rubber insulators.
3. Place a 5" Band Clamp on the inlet of the Tail Pipe and install it onto the Over-Axle Pipe.
4. Install Tail Pipe hanger into factory rubber insulator. Refer to Figure 3.

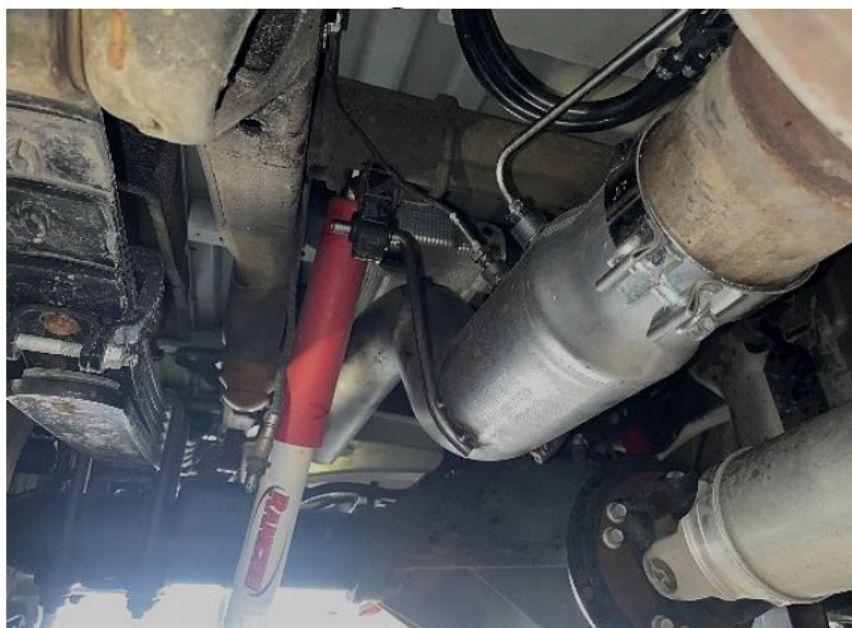




5. Install the Exhaust Tip and adjust to your liking. Refer to Figure 4.
6. Reinstall any sensors previously removed. Short box trucks will require the plugs to be removed from the bungs in the Over-Axle Pipe for installation of the OEM sensors.
7. Carefully align the system and Tip. Align the edge of each band clamp with the edge of the joint it is connecting. Tighten all hardware and clamps, starting at the front and working rearward to secure the system. Check along the full length of the exhaust system to ensure there is adequate clearance for fuel lines, vent lines, brake lines, frame, bodywork, suspension, and any wiring, etc. If there is any interference detected, relocate, or adjust to provide adequate clearance. Ensure all clamp connections are secure and components are unable to rotate or slide. Band clamps require approximately 45 lb-ft (60 N·m) of torque. Verify clearances, system security and band clamp torque after 30-60 miles (50-100 km) of driving.



Congratulations! You are ready to begin experiencing the improved power, sound and driving experience of your MBRP performance exhaust system. We know you will enjoy your purchase.

Documents / Resources

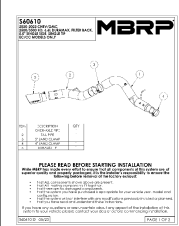

[MBRP S60610 Single Side Exit](#) [pdf] Instruction Manual
S60610, S60610 Single Side Exit, Single Side Exit, Side Exit, Exit