



# MICROVISOR SB30S Removable Mini Hood Instruction Manual

[Home](#) » [MICROVISOR](#) » MICROVISOR SB30S Removable Mini Hood Instruction Manual 

## Contents

- [1 MICROVISOR SB30S Removable Mini Hood](#)
- [2 Installation](#)
- [3 ILLUSTRATIONS:](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



## MICROVISOR SB30S Removable Mini Hood



### WHAT'S INSIDE THE BOX:

- Microvisor Bracket (SB30S/BS/B/W)
- Microvisor Minihood (SB30S/BS/B/W)

- 4 – 3/4" - #8 Philips Head Screws
- 4 – 3/16" Nylon Spacers
- 1 – Thumb Security Screw (M420)



Scan Here for installation Video for SB30S/BS/B/W Models.

#### **WHAT YOU NEED:**

- Phillips Head Screwdriver OR
- Screw Gun with a Phillips bit.

#### **Installation**

##### **STEP ONE: Identify the bottom screw configuration of your microwave**

Inspect the bottom of your microwave so determine which of the screw patterns is represented in FIG-A or FIG-B. The Microvisor bracket is designed to attach to either configuration. Only the front screws along the bottom are used to install the bracket.

##### **STEP TWO: Installing your Microvisor Bracket for screw patterns in FIG-A or FIG-B**

###### **1. The Microvisor Bracket is attached to the front of the bottom panel of your Microwave**

Over the Range using the screw holes in FIG-A or FIG-B of your microwave. If your microwave has screws along both sides of the bottom panel as illustrated in FIG-A or FIG-B, you can remove the front screws and start installing the bracket. Align the bracket so that it is centered on the microwave. Align the screw holes with the screw slot channels on the bracket. Be sure that the bracket is facing forward as in FIG-G. Using the 3/4" screws supplied, install screw 2 or 3 through the screw slot channel and into the microwave. If needed the spacers supplied can be installed between the microwave and the bracket as in FIG-F. Leave this first screw just loose enough to allow for adjustment. Install the balance of the screws across the front of the bottom panel as in FIG-E once again leaving the screws loose enough to center the bracket. When all of the screws are in place align the bracket so that it is flush with each side of the microwave as in FIG-C and tighten the balance of the screws. Insert the back of the minihood completely into the back of the bracket for a firm connection.








###### **2. Installing the Microvisor Bracket for bottom screw pattern in FIG-D.**

Attach the Microvisor bracket by first removing screw 2 or 3 from the bottom of your microwave. Align the bracket flush with the sides of the microwave and replace one of the removed screws with a 5/16" screw supplied in the packet. Put the screw through the screw slot channel and into the microwave leaving it loose enough to be able to rotate the bracket enough to have access to the balance of the front screws and replace them with the supplied screws leaving the bracket loose enough to be able to adjust. Align the bracket flush with the sides of the microwave and tighten the screws. Insert the back of the Microvisor mini-hood into the back of the bracket and push it firmly into the back of the bracket


**3. Thumb Security Screw (M420):**

Install the M420 thumb screw supplied to prevent the minihood from accidentally coming out of the bracket. Install the security screw through the access hole in the bottom of the attaching bracket and into the hole provided in the minihood to secure it in place.

**ILLUSTRATIONS:**

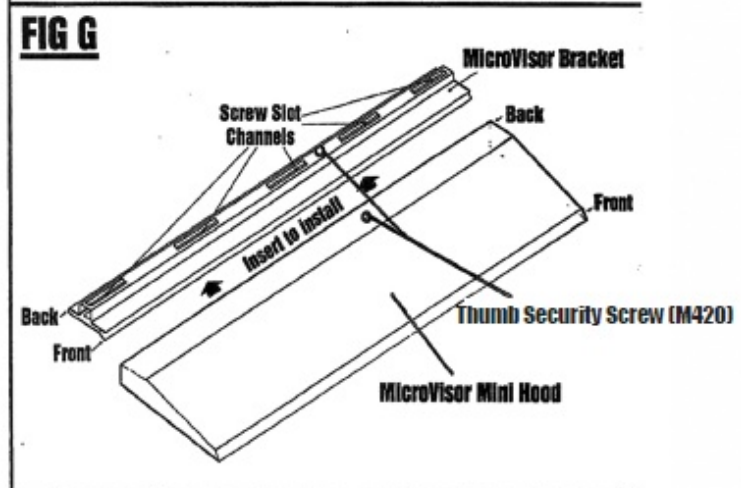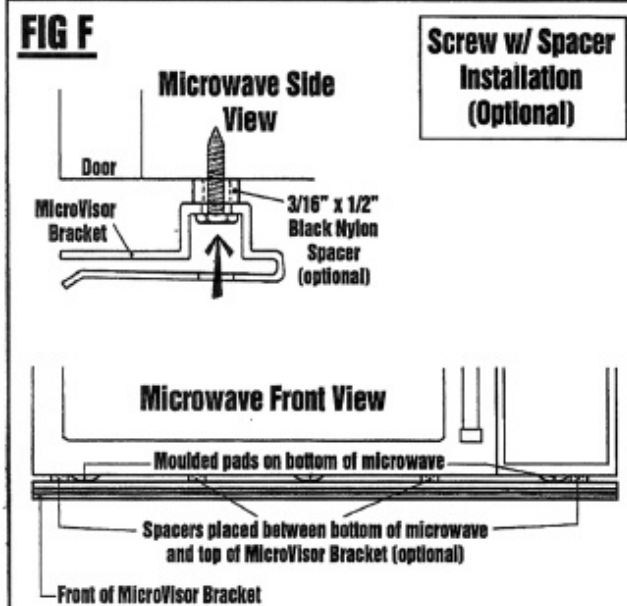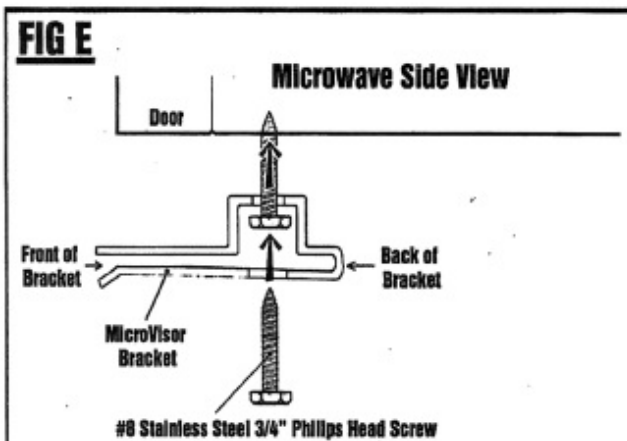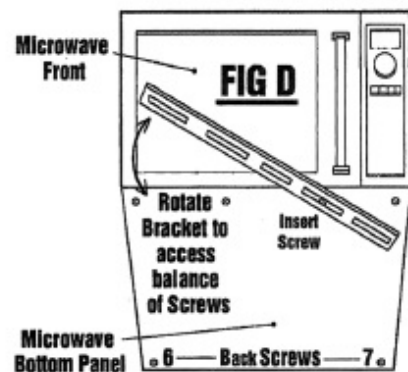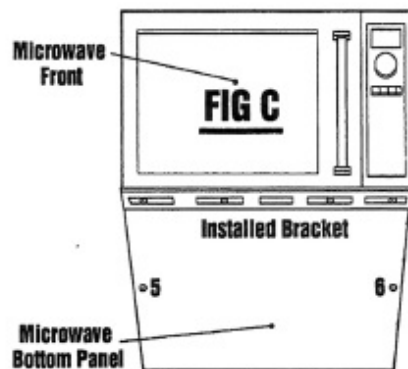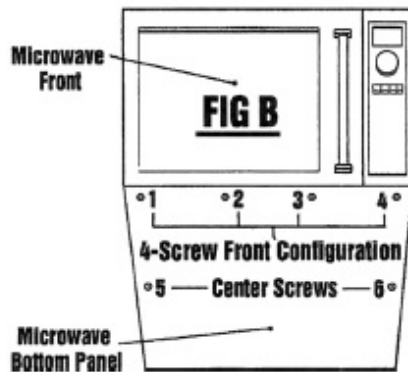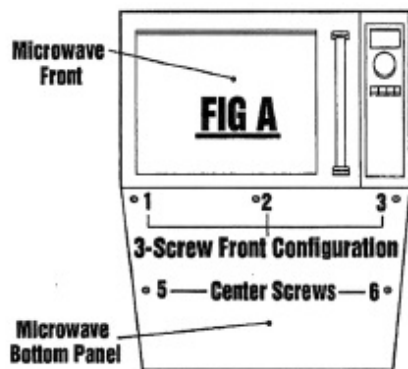

## Documents / Resources

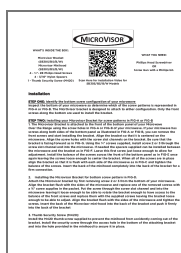

[MICROVISOR SB30S Removable Mini Hood](#) [pdf] Instruction Manual  
SB30S Removable Mini Hood, SB30S, Removable Mini Hood, Mini Hood, Hood