



MIDLAND R Series Helmet Intercom Device Installation Guide

[Home](#) » [MIDLAND](#) » MIDLAND R Series Helmet Intercom Device Installation Guide 

Contents

- [1 MIDLAND R Series Helmet Intercom Device](#)
- [2 MOUNTING KIT](#)
- [3 SPEAKERS](#)
- [4 RCF CUSHIONS*](#)
- [5 MICROPHONES](#)
- [6 LOCK/UNLOCK](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)



MIDLAND R Series Helmet Intercom Device



MOUNTING KIT

Place the intercom device on the left side of your helmet using the adhesive mount or the clamp mount.

Adhesive mount

Clean the surface and keep pressed for 10 seconds to fix the mount.




Clamp mount




Lock

Overlap and slide downwards.

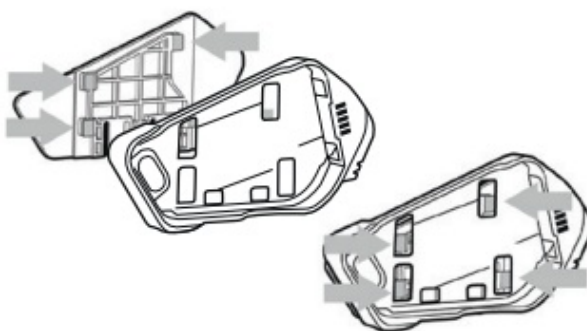

Unlock


Press (with a pointed object) and slide upwards.

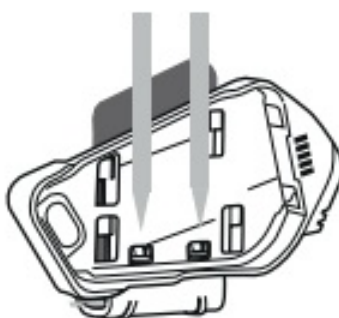

SPEAKERS

The speakers' positioning is the most important point of the installation procedure.

Attention: for the best sound clarity it is very important to place the speakers in correspondance with the centre of your ears and as close as possible (the speakers must almost touch your ears). In case of need, use the supplied spacers to better fit the speakers closer to your ears. The recesses of the speakers designed into the helmets are not always placed in the best location for you. Please be sure to fix speakers properly.

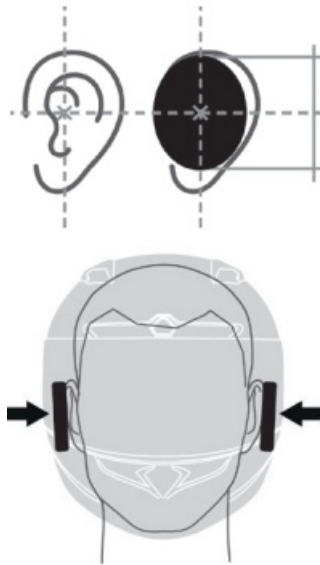


RCF CUSHIONS*

To improve the sound experience, you can use the RCF cushions. They can be installed or removed afterwards.

Attention: although the RCF cushions have been designed to guarantee a high-level comfort, please verify that there's enough space into your helmet and that they can fit well.


* for models supplied with RCF cushions

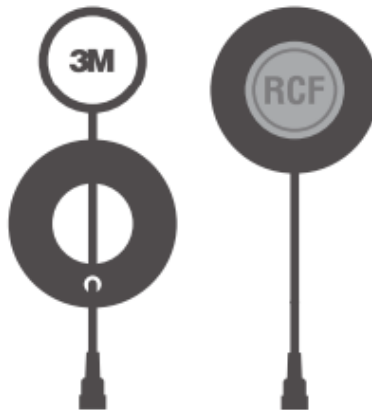

MICROPHONES

Wired microphone for full face helmets: place the microphone in front of your mouth.


Boom microphone for modular/jet helmets: fix the mike on the left side and keep the sponge as closely as possible to your mouth (white symbol in front of your mouth).

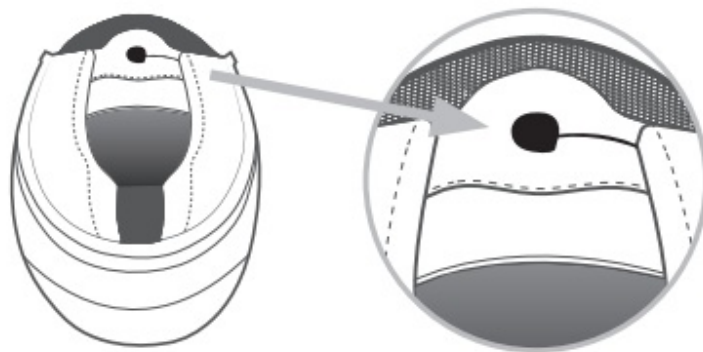

LOCK/UNLOCK


To fix the intercom device to the MAGic LOCK mount:

Insert at first the rear side of the unit into the mount by tilting the unit of 45° and then bring nearer the fore side: the strong magnet will lock safely the device.

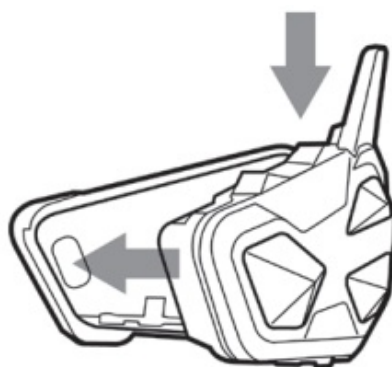

To unlock the intercom device:

press the bottom on the bottom side of the clip (A) and pull out the device.

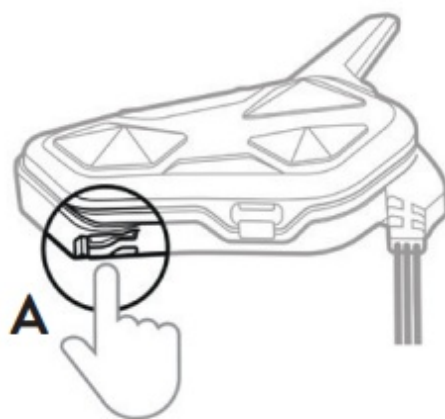



[MIDLAND R Series Helmet Intercom Device](#) [pdf] Installation Guide
R Series Helmet Intercom Device, R Series Intercom Device, Helmet Intercom Device, Intercom Device

References

- [^ Midland Europe | Radio and CB, Motorbike intercom systems and Action Cams](#)