

MODENA FM 3000 L Built In Frame User Manual

Home » MODENA » MODENA FM 3000 L Built In Frame User Manual



User Manual Book Built – In Frame FM 3000 L, FM 3000 FM 2000 L, FM 2500

Contents

- 1 INSTALLATION
- 2 Documents /


Resources

3 Related Posts


INSTALLATION

To install the frame of microwave (FM 2000, FM 2500, FM 3000) on the kitchen cabinet, follow the installation below:


1. Make space to put a microwave oven in your kitchen cabinets will be installed frame with space size 566 mm x 550 mm x 366 mm

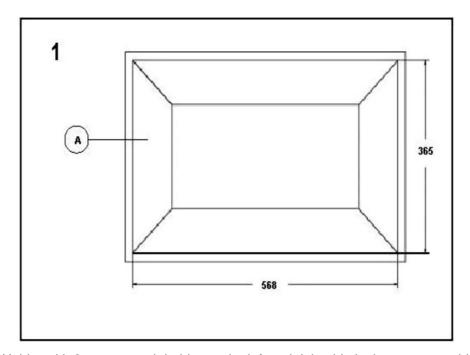


2. Attach 4 pieces Holder with 2 screws each holder on the left and right side in the space provided.

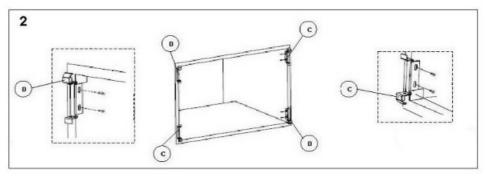


3. Attach the template on the bottom of the space that has been prepared to determine the position of the buffer / support.

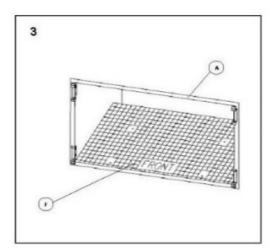


4. Attach both buffer/support with 2 screws oneach buffer / support.

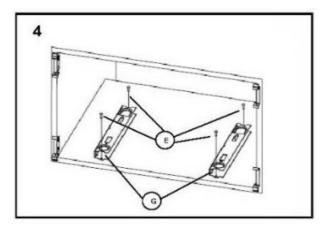


5. Insert your microwave into a space that has been provided with put a back legs microwave first above the hole buffer/ support.

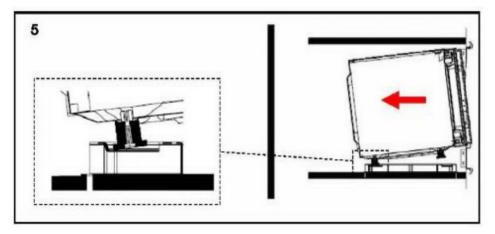


6. Adjust the position of the microwave with the position of the back legs into the holes on the buffer / support the back and most of the front legs into the holes on the buffer / support the front.

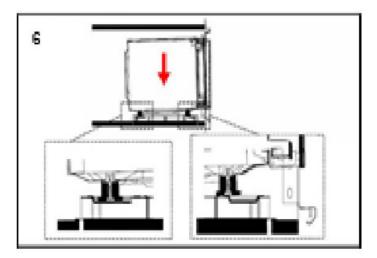


7. To strengthen the position of the microwave, pull forward the microwave until the foot of front side into the hole of buffer / support the front.

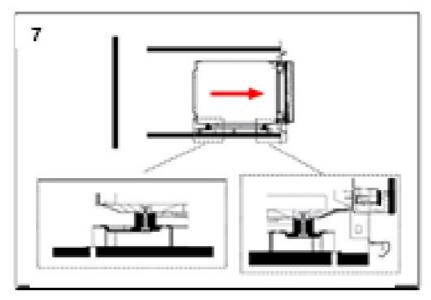

8. Attach the frame microwave from front to relate with the holder.

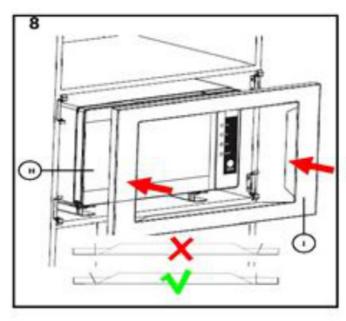

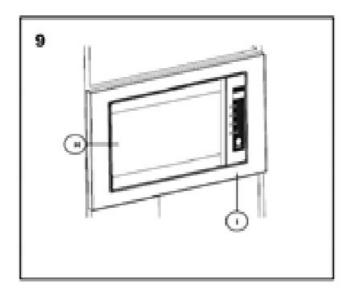

9. Ensure the frame microwave installed correctly and neatly.

Documents / Resources

User	
Manual Book Built - In Frame	MODENA FM 3000 L Built In Frame [pdf] User Manual
	FM 3000 L Built In Frame, FM 3000 L, Built In Frame, Frame
FM 3006 L, FM 3000 FM 2000 L, FM 3000	

Manuals+,