



MTI BASICS BASICS Pre-Leveled Foam Base Instructions


[Home](#) » [MTI BASICS](#) » MTI BASICS BASICS Pre-Leveled Foam Base Instructions 

Contents

- [1 MTI BASICS BASICS Pre-Leveled Foam Base](#)
- [2 Instruction](#)
- [3 Contact Information](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



MTI BASICS BASICS Pre-Leveled Foam Base

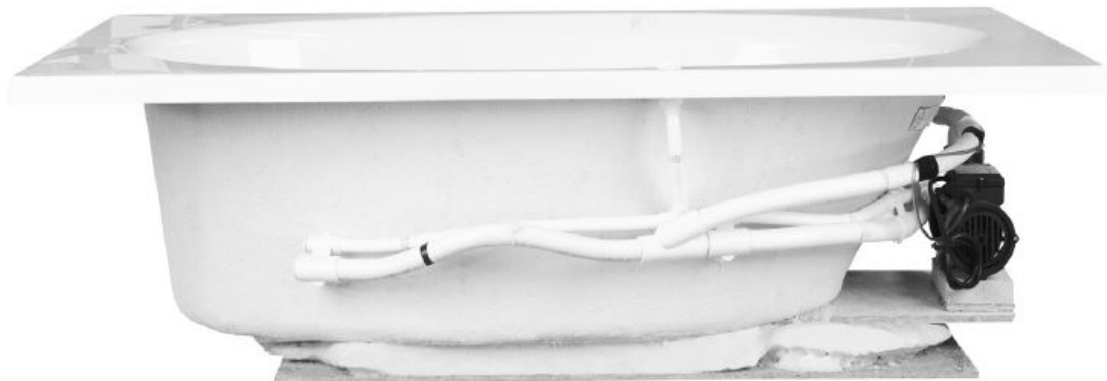

All MTI tubs are available with a factory-installed pre-leveled foam base. This facilitates installation by eliminating the need for using a wet-bed compound to level the tub.

Pre-Leveled Foam Base (PLFOAM) \$295

Instruction


- Must be ordered with tub for proper fit and finish.
- Adds approximately 2"- 3" to the overall height of drop-in and undermount tubs. This foam also acts as a sound dampener and barrier.
- MTI uses high-density closed-cell foam which will not shrink, crack or deteriorate over time. Field substitutions (e.g., Great Stuff) are not recommended and may void the warranty.
- All tubs ordered with an air bath or a frame system include the factory-installed pre-leveled foam base as standard. Freestanding tubs include an internal pre-leveled foam base.

Contact Information

MTI's Customer Service Department is available Monday-Friday 8 am-6 pm EST
800-783-8827 or service@mtibaths.com.

©2022 by MTI Baths, Inc. Modification Rights Reserved

Documents / Resources

	<p>MTI BASICS BASICS Pre-Leveled Foam Base [pdf] Instructions BASICS Pre-Leveled Foam Base, Pre-Leveled Foam Base, Leveled Foam Base, Foam Base, Base</p>
--	---