

n-com SPCOM00000039 Computer Board Instructions


[Home](#) » [N-Com](#) » n-com SPCOM00000039 Computer Board Instructions 

Contents

- [1 n-com SPCOM00000039 Computer Board](#)
- [2 INSTRUCTIONS FOR REPLACING THE SPCOM00000039](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)



n-com SPCOM00000039 Computer Board

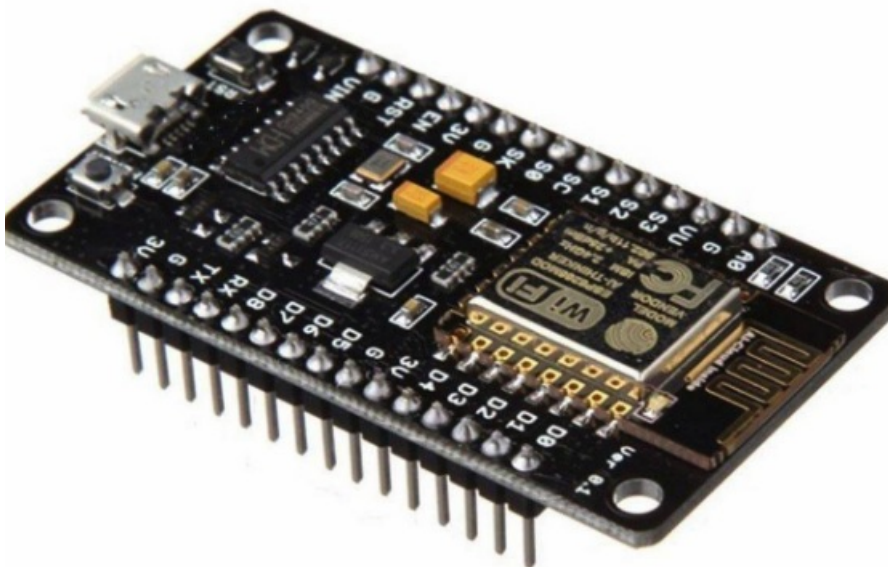

INSTRUCTIONS FOR REPLACING THE SPCOM00000039

1. Remove the N-Com system from the helmet (see instruction booklet).

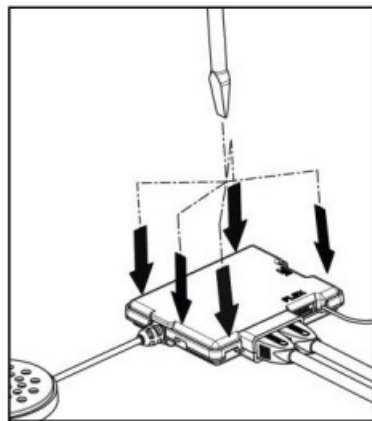


Fig. 1

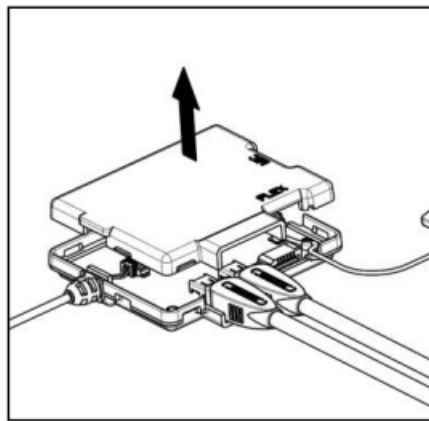


Fig. 2

2. Open the e-box (Fig. 1-2).



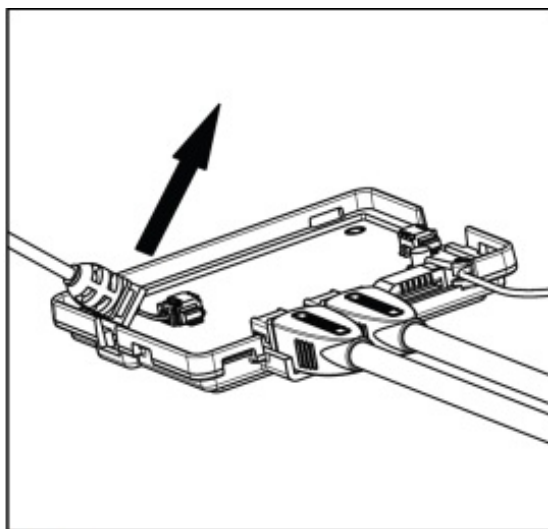



Fig. 3

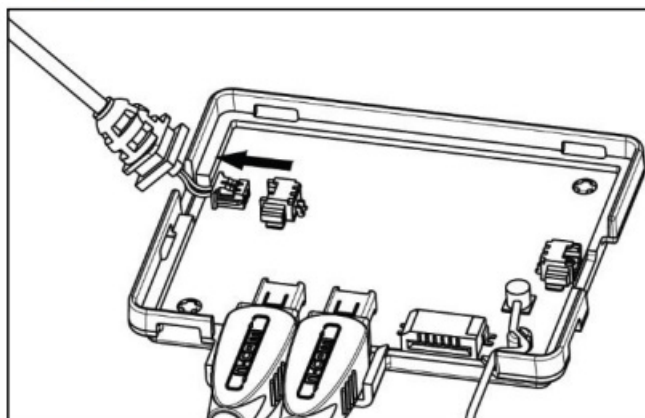


3. Remove with care the left wiring to be replaced. Lift up the cable feedthrough (Fig. 3) and then carefully take out the connector from its housing (Fig. 4).

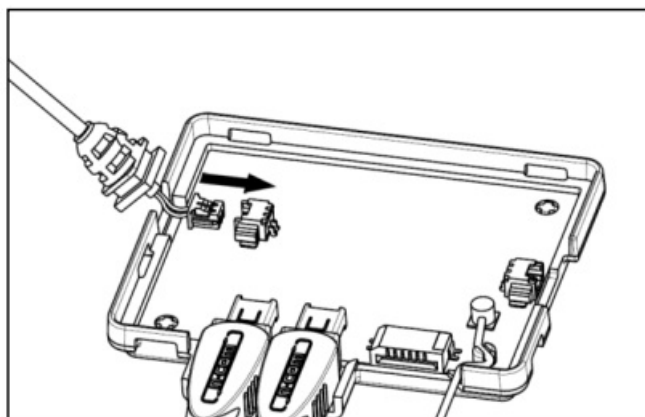

4. Position the new left wiring connector in the counterpart on the electronic card (Fig. 5).

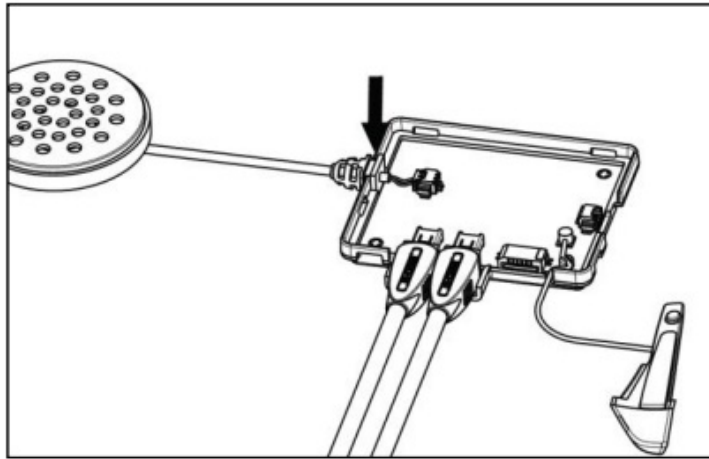

5. Secure the cable feedthrough in the special seat on the edge of the plastic e-box (Fig. 6).

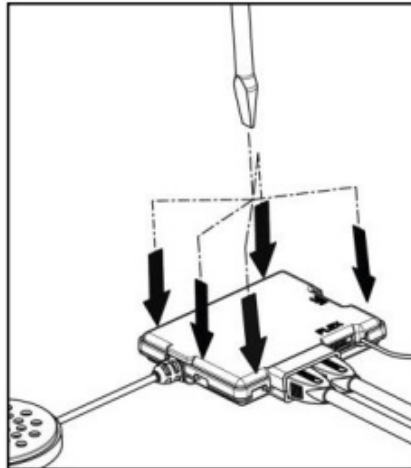

6. Close the e-box (Fig. 7).

7. Make sure that all fixing points are properly secured.

8. Reposition the N-Com system inside the helmet (see instruction booklet).

Documents / Resources

	<p>n-com SPCOM00000039 Computer Board [pdf] Instructions SPCOM00000039 Computer Board, SPCOM00000039, SPCOM00000039 Board, Computer Board, Board</p>
--	---