



n-com SPCOM00000069 Adapter Instructions

[Home](#) » [N-Com](#) » n-com SPCOM00000069 Adapter Instructions 

Contents

- [1 n-com SPCOM00000069 Adapter](#)
- [2 INSTRUCTIONS FOR REPLACING THE SPCOM00000069](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)



n-com SPCOM00000069 Adapter



INSTRUCTIONS FOR REPLACING THE SPCOM00000069

1. Select the specific adapter for your helmet (the compatible helmet model is shown on the back of the support).
2. Apply the double-sided adhesive tape supplied as standard equipment to the selected plastic adaptor (Fig. 1).

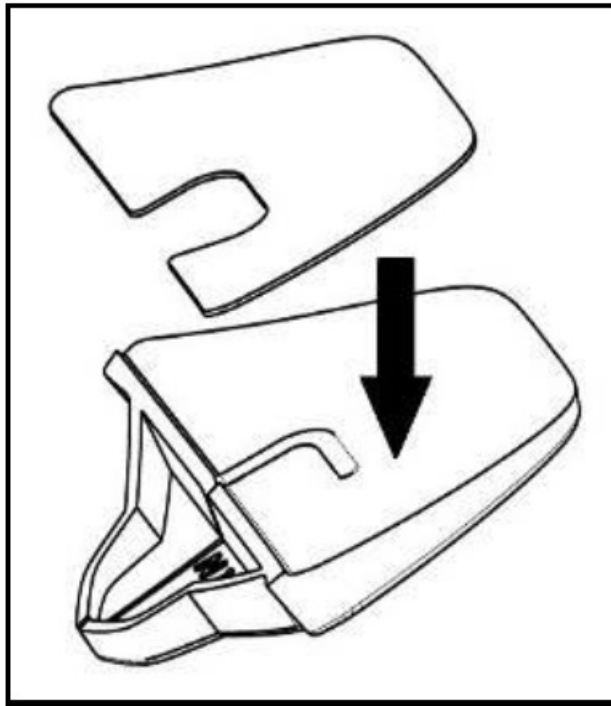


Fig. 1

3. Insert the FLEX cable of the ESS system in the hole of the selected adapter as illustrated, in the direction shown in the image (Fig. 2).

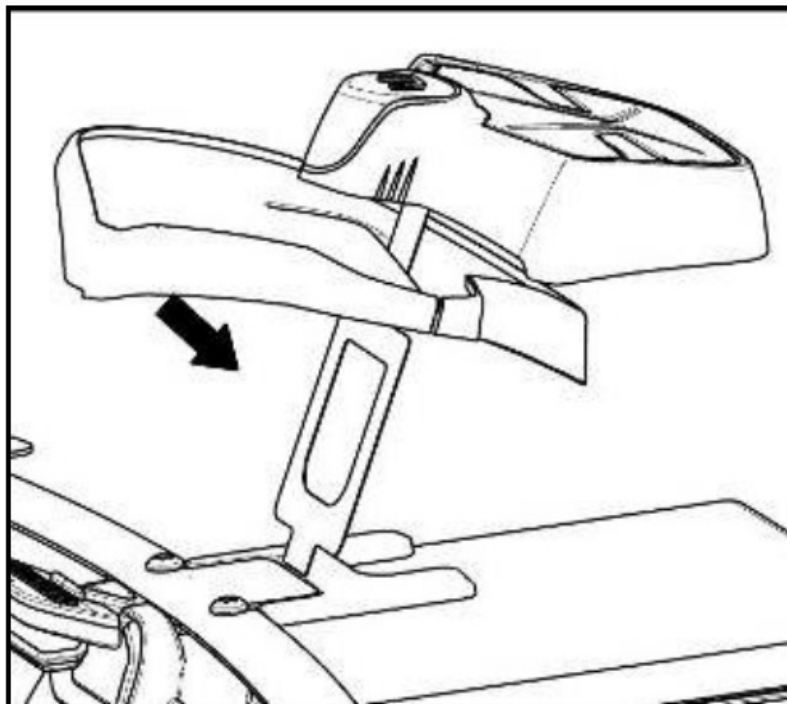


Fig. 2

4. Rotate the adapter until it is in a horizontal position like the ESS system, then press the two components together until they stick one onto the other (Fig. 3).

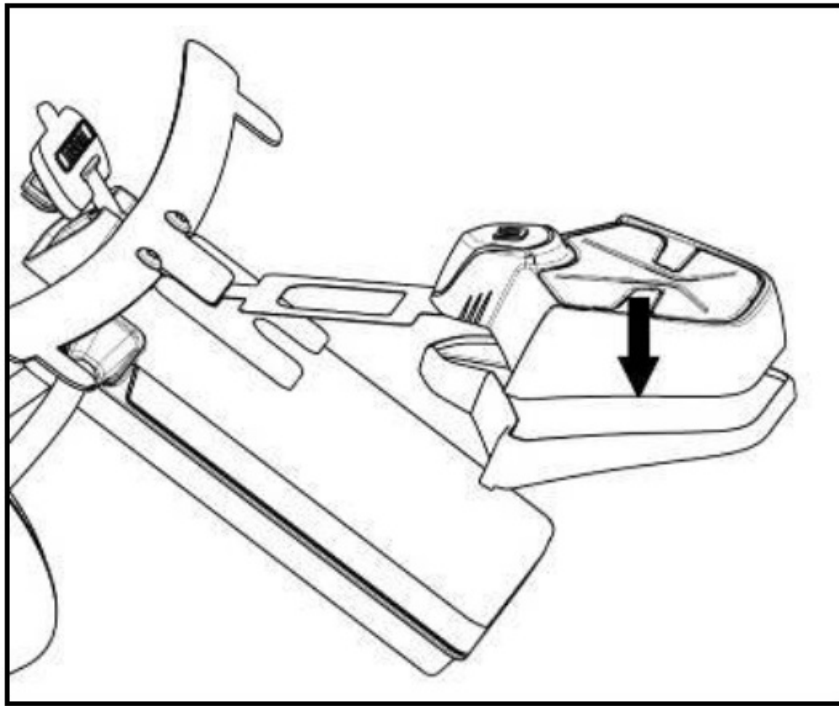



Fig. 3

For more details, see the product manual instructions.

Documents / Resources

	<p>n-com SPCOM00000069 Adapter [pdf] Instructions SPCOM00000069 Adapter, SPCOM00000069, Adapter</p>
---	---