



# NAVAC NTBRK Reverse Bending Attachment Kit Installation Guide

[Home](#) » [NAVAC](#) » NAVAC NTBRK Reverse Bending Attachment Kit Installation Guide 

## Contents

- [1 NAVAC NTBRK Reverse Bending Attachment Kit](#)
- [2 How To Install Reverse Bender](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)




## NAVAC NTBRK Reverse Bending Attachment Kit



## How To Install Reverse Bender

1. Lock (d) Reverse Bend Retaining Block using (g) Screw A onto tube bender, press appropriately sized (b) Mandrel into the (d) Reverse Bend Retaining Block, with angle marks side facing down.
2. Lock ©Crossbar onto (a)Reverse Bend Top Block, then insert it into the (e)Pushing Head and lock it with (f) Screw B.
3. Slide (h) Tubing Size Selectors into the right position. Both (h) Tubing Size Selectors should have the proper-sized notches facing the (b) Mandrel. Place the copper tube into the notches. Push the control button to start bending.

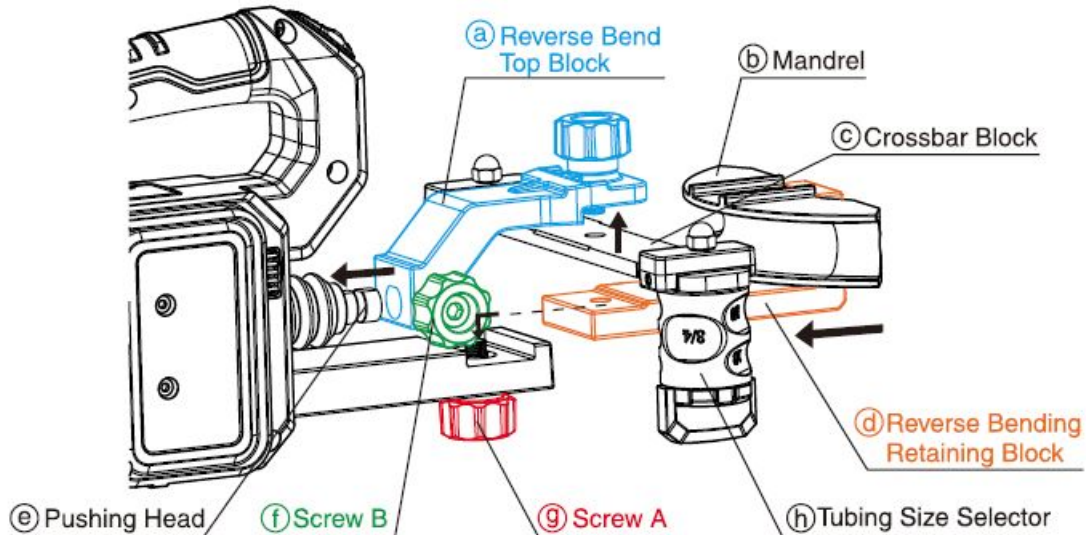


Not sure hOIN to install?



Scan to watch video instructions

## Documents / Resources

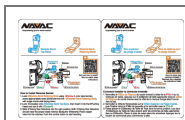

[NAVAC NTBRK Reverse Bending Attachment Kit \[pdf\]](#) Installation Guide  
NTBRK, Reverse Bending Attachment Kit, NTBRK Reverse Bending Attachment Kit, Bending Attachment Kit, Attachment Kit