

NO-DIG INST-UNDIG-RV1 Universal Landscape Edging



# NO-DIG INST-UNDIG-RV1 Universal Landscape Edging Instructions

[Home](#) » [NO-DIG](#) » NO-DIG INST-UNDIG-RV1 Universal Landscape Edging Instructions 

## Contents

- [1 NO-DIG INST-UNDIG-RV1 Universal Landscape Edging](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 INSTALLATION INSTRUCTIONS](#)
- [5 HELPFUL TIPS & INFORMATION](#)
- [6 Installation](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

# NO-DIG

NO-DIG INST-UNDIG-RV1 Universal Landscape Edging



## Product Information

### Specifications

- Product Name: No-Dig Landscape Edging
- Model: INST-UNDIG-RV1
- Manufacturer: Dimex Corp
- Material: Durable plastic
- Color: Black
- Dimensions: Varies based on product size

### Product Usage Instructions

#### Site Preparation

Before starting the installation process, prepare the site properly:

- Clear the area of grass, soil, and debris.
- Ensure the soil is solid and level.

- Compact the cleared soil to prevent shifting.
- Consider using weed fabric to control invasive weeds.

## Installation

1. Place the edging in the desired shape with anchoring tabs facing the planting bed.
2. Secure the edging by pounding anchoring spikes through the tabs.
3. Pull the edging tight between spikes.
4. Backfill with mulch or ground cover to cover the tabs completely.
5. Allow the edging to relax in the sun before installation to prevent waves.
6. Use additional spikes as needed for stability.
7. To connect edging ends, overlap tabs and pound spikes through both holes.

## Cutting the Edging

To adjust the length of the edging:

- Cut at the midpoint between anchoring tabs using hand snips or a fine-tooth saw.

## FAQ

- **Q: How do I prevent wavy edging during installation?**

A: Let the edging relax in the sun before installation and pull it tight to reduce waves.

- **Q: Can I use additional spikes for extra stability?**

A: Yes, additional spikes can be used in areas that require more support.

For further questions or support, contact us at [customersupport@dimexcorp.com](mailto:customersupport@dimexcorp.com)

**NO-DIG®**

LANDSCAPE EDGING

## INSTALLATION INSTRUCTIONS

Always use proper safety precautions when cutting and spiking edging.

1. Clear the installation area of all grass, loose soil, mulch, and debris. Place edging in desired shape on cleared surface with anchoring tabs\* facing the planting bed.
2. Use a rubber mallet to pound anchoring spikes through the tabs to secure the edging. Pull the edging tight between spikes.
3. Backfill to the top of the edging with mulch, river rock, or other ground cover. Assure tabs are completely covered with a thick layer of bedding material.





## HELPFUL TIPS & INFORMATION

### Site Preparation

Soil must be solid and level. Assure there is no debris between the landscape edging tab and the dirt below. Compact the cleared soil prior to installation to reduce spike movement from shifting ground and frost heave. Weed fabric can minimize the spread of invasive weeds and grass. If desired, install fabric according to product directions. Then, place the landscape edging over the fabric and begin to hammer anchoring spikes through the edging tabs and weed fabric.

Before installation, it is important to let the edging relax in the sun to allow for thermal expansion. Installing the edging when expanded and pulling tightly can reduce undesirable waves in straight installations.

### Installation

- Certain conditions and landscape designs will require additional spikes, which are available in stores and online.
- Anchoring spikes should be inserted only to the top of the edging tab. Installing the spike to the point the tab bends will result in wavy edging.
- To connect edging ends, overlap the final tab on each end and pound spike through both holes.
- Backfill sufficiently to the top of the edging immediately after installing the edging. Heavy bedding materials, such as rock and mulch, tend to perform best.

\*Tab designs may vary.

### Cutting the Edging:

Cut edging at the midpoint between the anchoring tabs using hand snips or a fine tooth saw.




**Westlake Dimex Marietta, OH 45750**

Questions/Comments? Contact us at [customersupport@dimexcorp.com](mailto:customersupport@dimexcorp.com)

INST-UNDIG-RV1

---

## Documents / Resources

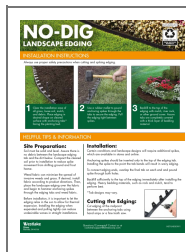

[NO-DIG INST-UNDIG-RV1 Universal Landscape Edging](#) [pdf] Instructions  
INST-UNDIG-RV1 Universal Landscape Edging, INST-UNDIG-RV1, Universal Landscape Edging, Landscape Edging, Edging

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.