



NOVA MAZUR DESIGN BK-MaxiRC Via Corner Sofa Instruction Manual

[Home](#) » [NOVA MAZUR DESIGN](#) » NOVA MAZUR DESIGN BK-MaxiRC Via Corner Sofa Instruction Manual 





Contents


- [1 KANSAS \(2AL/Bett/BK-MaxiRC\)\(MaxiRC-2AL/Bett/BK\)](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

KANSAS (2AL/Bett/BK-MaxiRC)(MaxiRC-2AL/Bett/BK)

 **Assembly instructions**
Service
Name

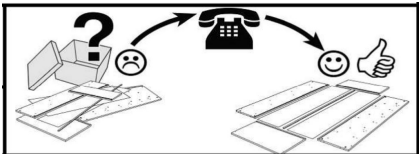


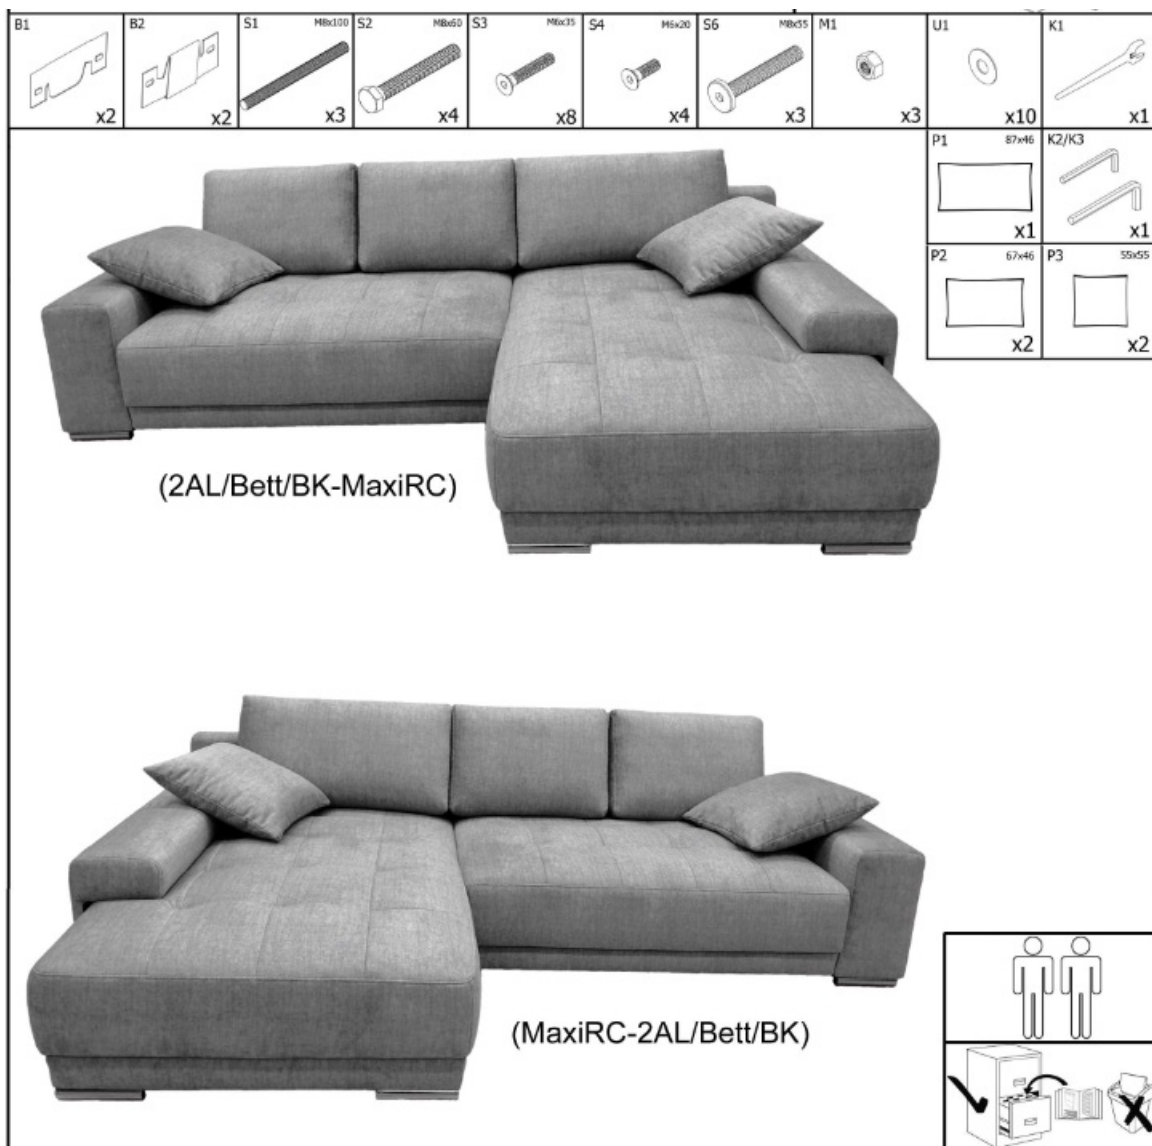

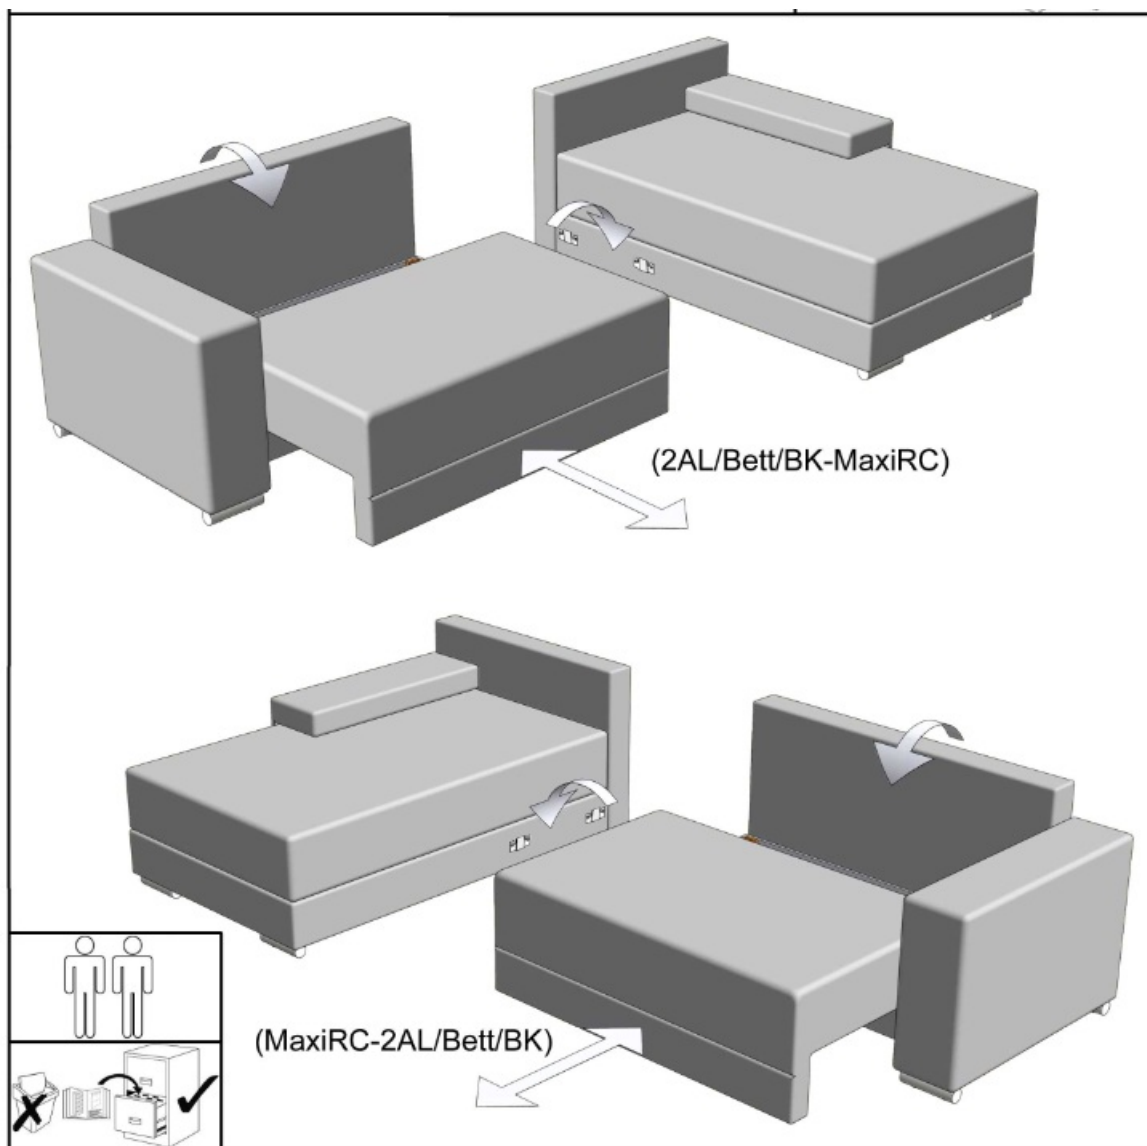


2AL/Bett/BK

MaxiRC

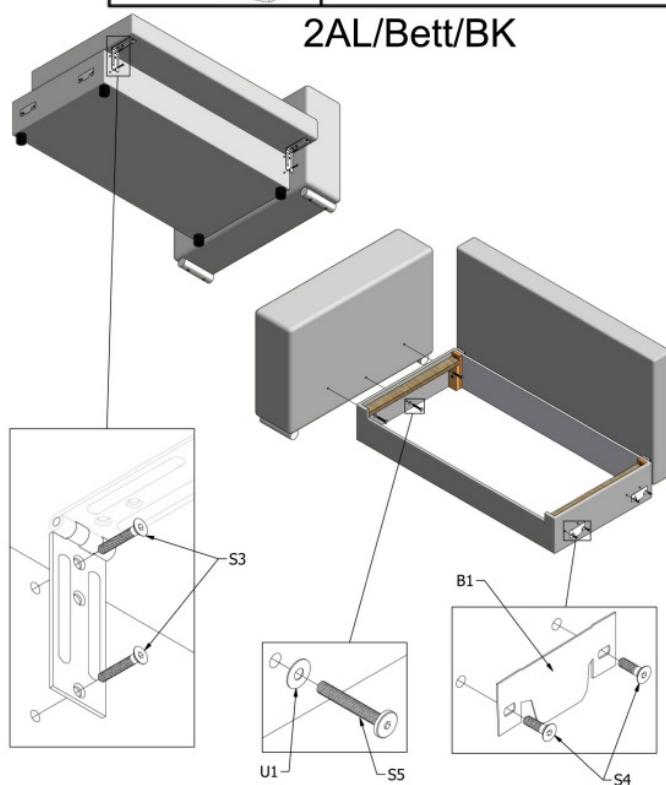



B1	S3	M6x35	S4	M6x20	S5	M8x55	U1
x2	x4		x4		x3		x3

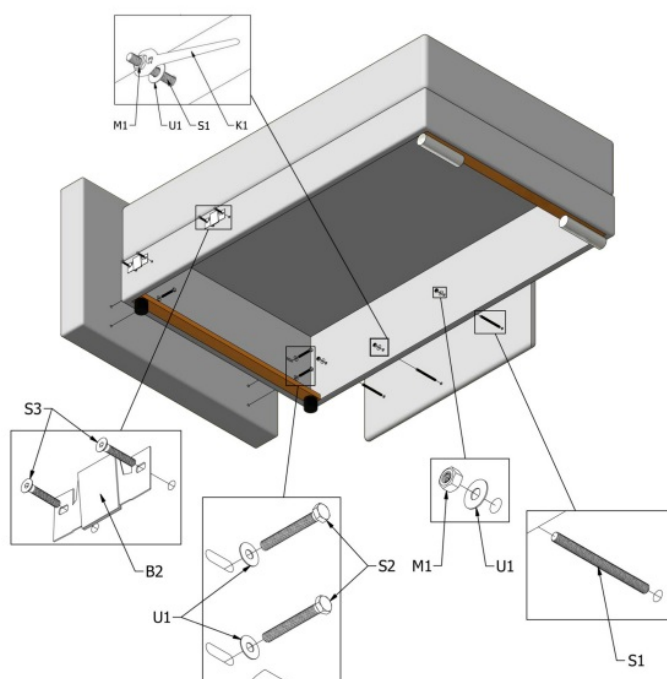

B2	S1	M8x100	S2	M8x60	S3	M6x35	M1	U1
x2	x3		x4		x4		x3	x7

MaxiRC

2AL/Bett/BK

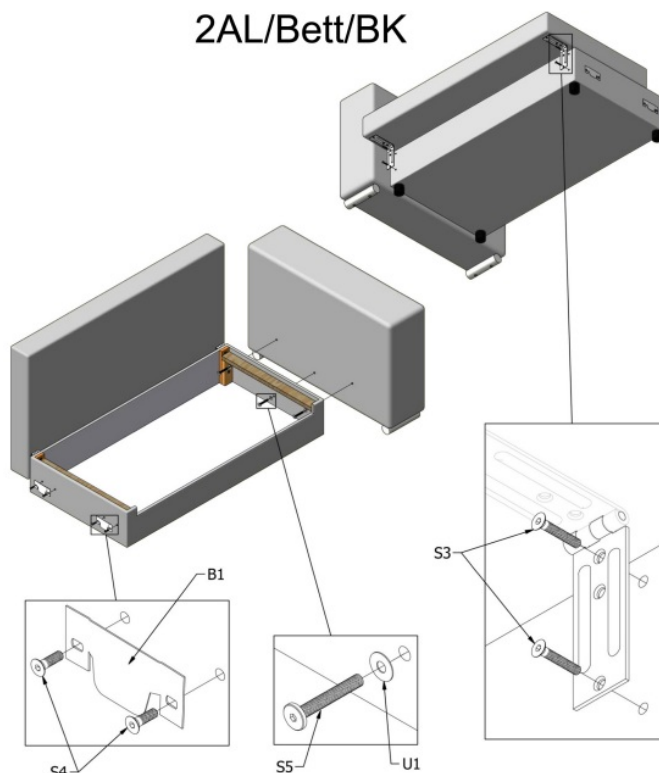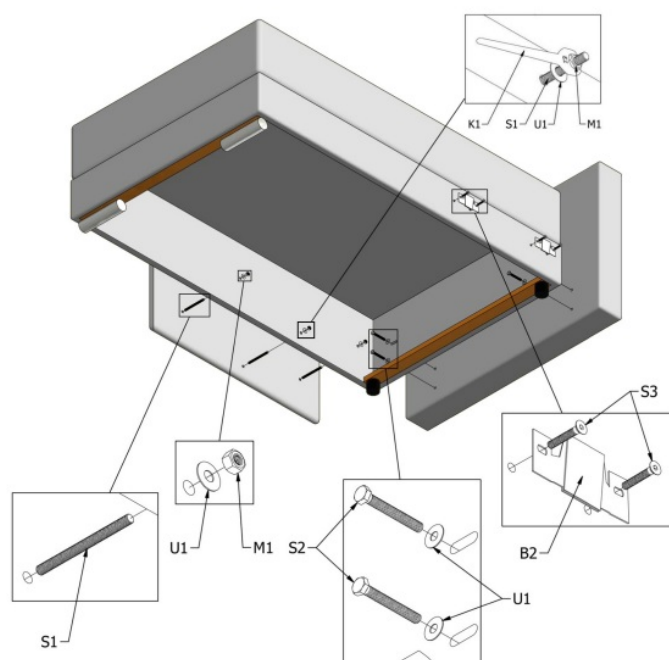

B2	S1	M8x100	S2	M8x60	S3	M6x35	M1	U1
x2	x3	x3	x4	x4	x4	x3	x3	x7

B1	S3	M6x35	S4	M6x20	S5	M8x55	U1
x2	x4	x4	x4	x3	x3	x3	x3

As it is concerned with the variable model, it must be decided before the installation which element shall be put up, right or left.

In that case, install accordingly armrest or backrest.

Please, unzip the fastener of the underside of the material and make holes in the fabric in accordance with the existing holes in the side panels (use: scissors, knife).

Documents / Resources



[NOVA MAZUR DESIGN BK-MaxiRC Via Corner Sofa](#) [pdf] Instruction Manual
BK-MaxiRC, Via Corner Sofa, Corner Sofa, BK-MaxiRC, Sofa