




nVent HOFFMAN F44BB2C Wireway Barrier Kit Instruction Manual

[Home](#) » [nVent HOFFMAN](#) » nVent HOFFMAN F44BB2C Wireway Barrier Kit Instruction Manual 

nVent HOFFMAN F44BB2C Wireway Barrier Kit

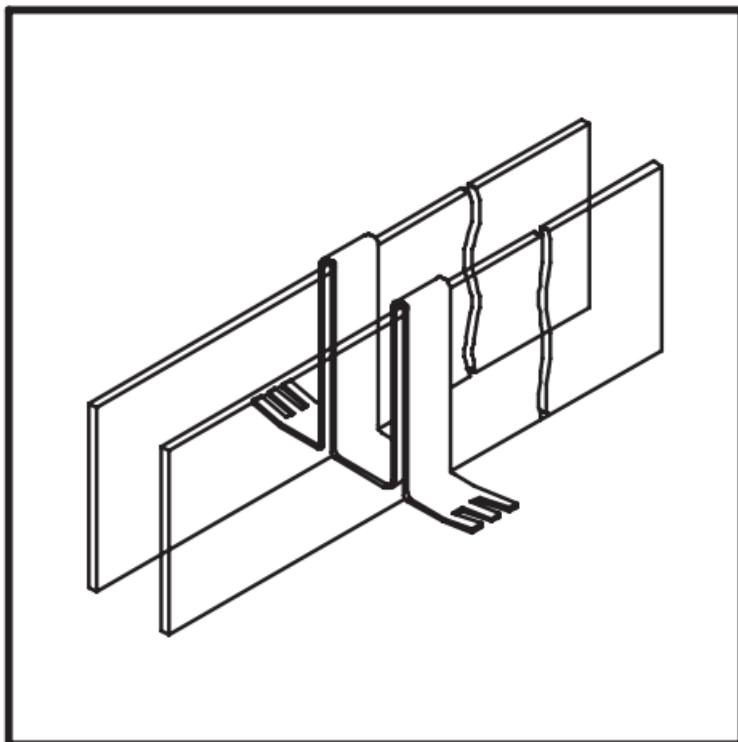

Contents

- [1 Product description](#)
- [2 Customer Support](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

Product description

1. Cut Wireway Barrier to desired length.
2. Place barriers into wireway and position all barrier brackets onto barrier as shown in **Figure 1**.

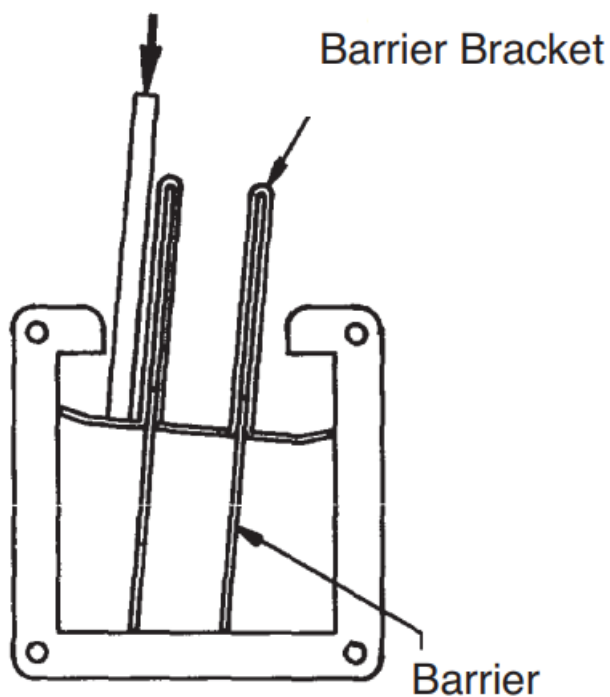


Figure 1

3. Use block of wood or similar object to force all barrier brackets into place as shown in **figure 1** and **figure 2**.

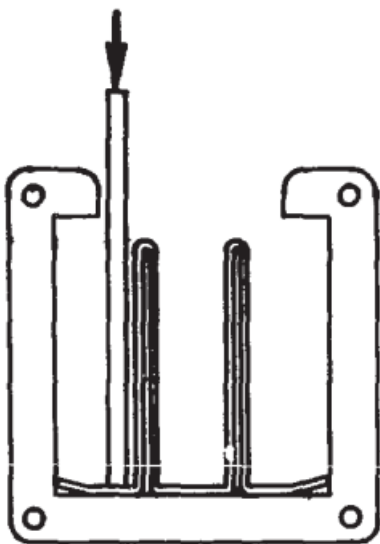


Figure 2

4. Position a nylon channel over each end of the barrier as shown in **figure 3** for catalog numbers F44BB2C and


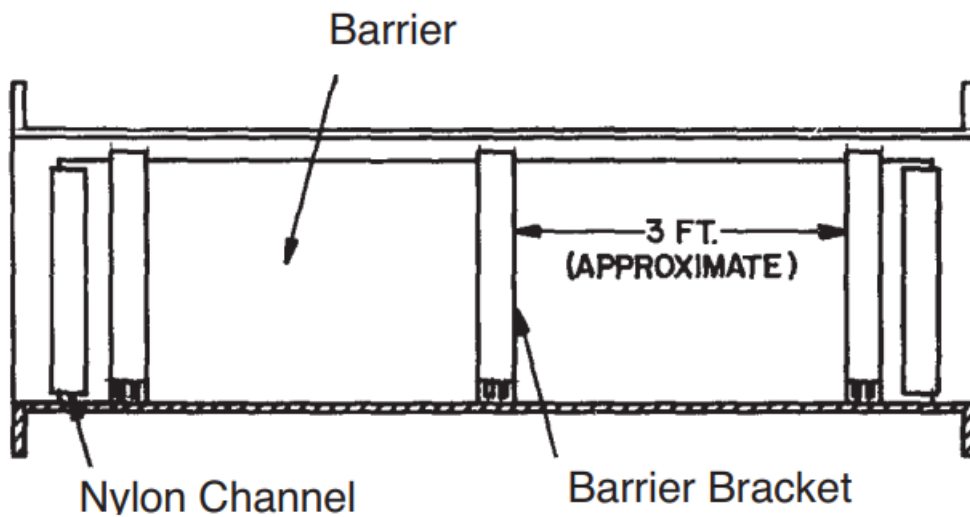


Figure 3

Customer Support

Rev. C © 2018 Hoffman Enclosures Inc.
 PH 763 422 2211 •
nVent.com/HOFFMAN
 P/N 18334001
 87567424



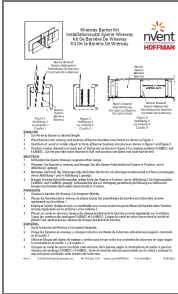

[nVent HOFFMAN F44BB2C Wireway Barrier Kit](#) [pdf] Instruction Manual
F44BB2C Wireway Barrier Kit, F44BB2C, Wireway Barrier Kit, Barrier Kit, Kit

References

-  [We connect and protect | nVent](#)