



Origin 21 VS26EK-W Vertical Standard Extender Kit Instruction Manual

[Home](#) » [Origin 21](#) » Origin 21 VS26EK-W Vertical Standard Extender Kit Instruction Manual 

Contents

- [1 Origin 21 VS26EK-W Vertical Standard Extender Kit](#)
- [2 PACKAGE CONTENTS](#)
- [3 HARDWARE CONTENTS](#)
- [4 SAFETY INFORMATION](#)
- [5 PREPARATION](#)
- [6 ASSEMBLY INSTRUCTIONS](#)
- [7 OPERATING INSTRUCTIONS](#)
- [8 CARE AND MAINTENANCE](#)
- [9 WARRANTY](#)
- [10 REPLACEMENT PARTS LIST](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)


Origin21[®]

Origin 21 VS26EK-W Vertical Standard Extender Kit

**Questions, problems, missing parts?**


Before returning to your retailer, call our customer service department at 888-251-1026, 8 a.m. – 8 p.m., EST, Monday – Sunday. You could also contact us at partsplus@lowes.com.

PACKAGE CONTENTS

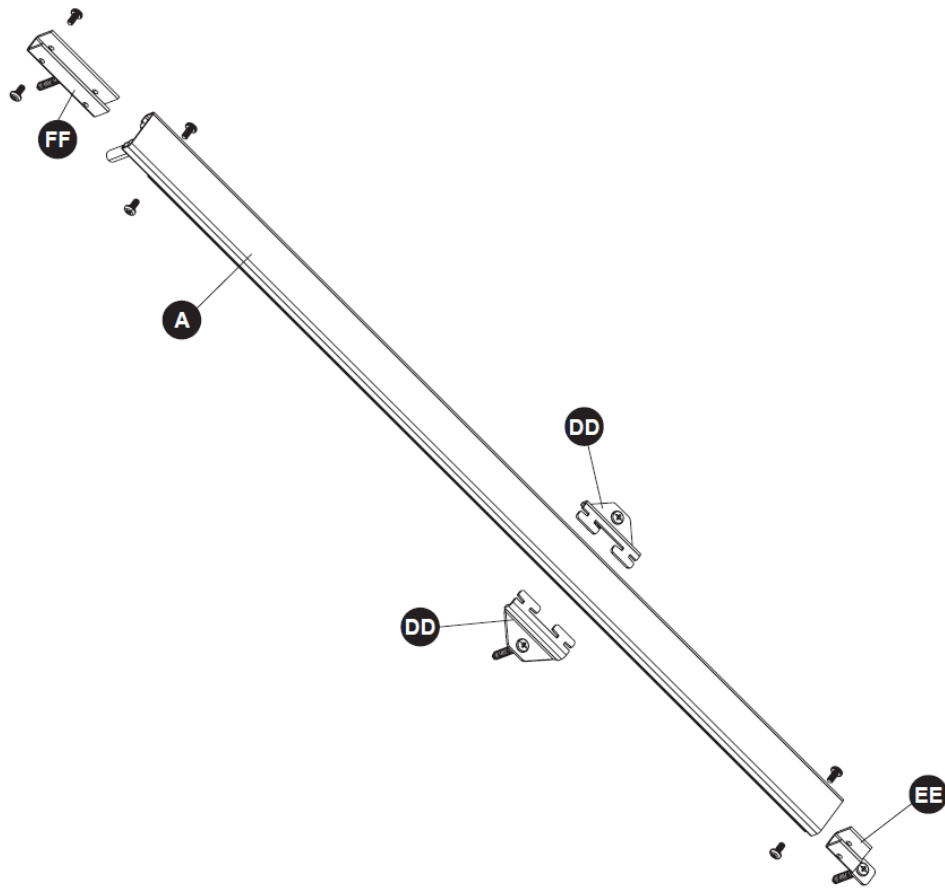


PART	DESCRIPTION	QUANTITY
A	26-IN Vertical Standard	1
DD	Universal Wall Clip	2
EE	Bottom Mount Wall Clip	1
FF	Extender Bracket	1

HARDWARE CONTENTS

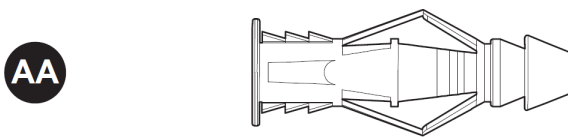


Wall Anchor
Qty. 4




4.8 x 38
Panhead Screw
Qty. 4




M4 x 8
Screw
Qty. 6

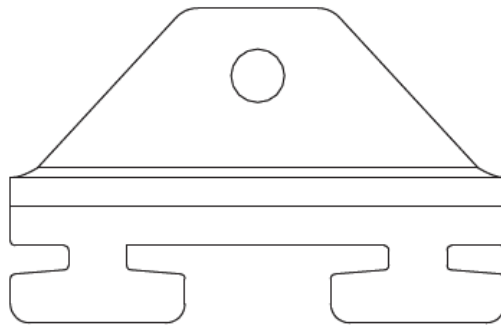DD

Universal
Wall Clip
Qty. 2

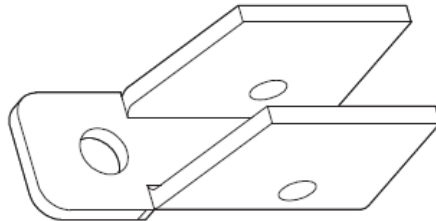EE

Bottom Mount
Wall Clip
Qty. 1

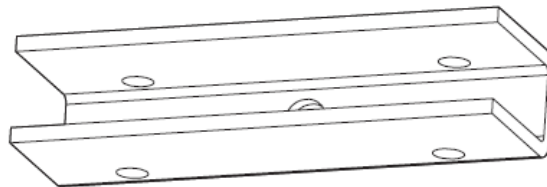FF

Vertical Standard
Connector
Qty. 1

SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

- Please confirm all parts are correct before starting the assembly process.
- Please read all instructions carefully before beginning.

WARNING

- Do not allow children to climb or play in, on, or around this product.
- Do not alter this product in any manner.
- Failure to obey installation instructions and warnings can result in injury or death.
- Use correct hardware for your specific wall type, the hardware provided is intended for 1/2 inch drywall.
- Horizontal and Vertical Standards must be firmly secured to the wall.
- Do not overload.


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 30 minutes

Tools Required for Assembly (not included):

Tape Measure, #2 Phillips Screwdriver, Pencil, Drill Bits (1/8" & 5/16"), Drill, Level

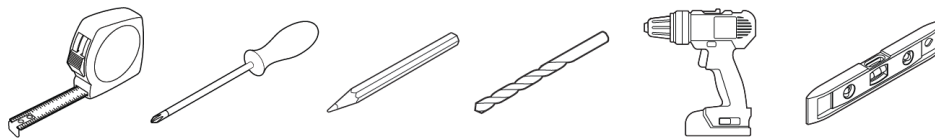

Tools Recommended for Assembly (not included): Step Ladder, Stud Finder, Rubber Mallet

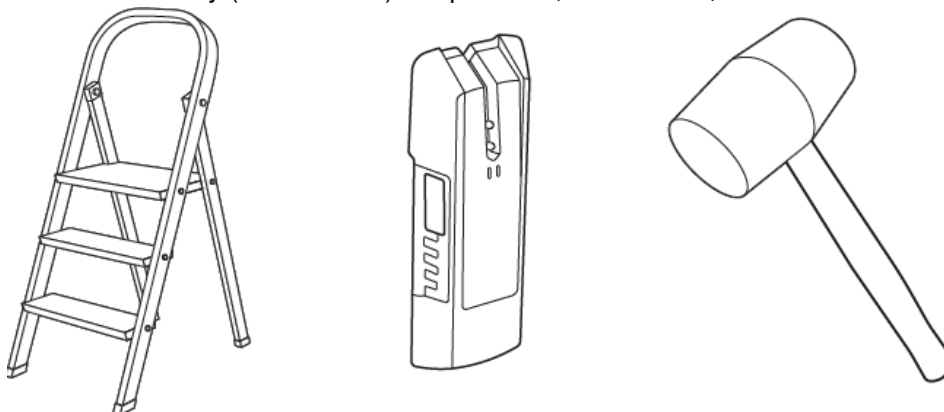

Find helpful install videos and tips at [lowes.com](https://www.lowes.com)


ASSEMBLY INSTRUCTIONS

1. Insert the Bottom Mount Wall Clip (EE) into the 26-IN Vertical Standard (A) with tab facing down. Fasten the Bottom Mount Wall Clip with M4 x 8 screws (CC).

Hardware Used




M4 x 8




x 2



Bottom Mount
Wall Clip

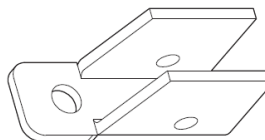



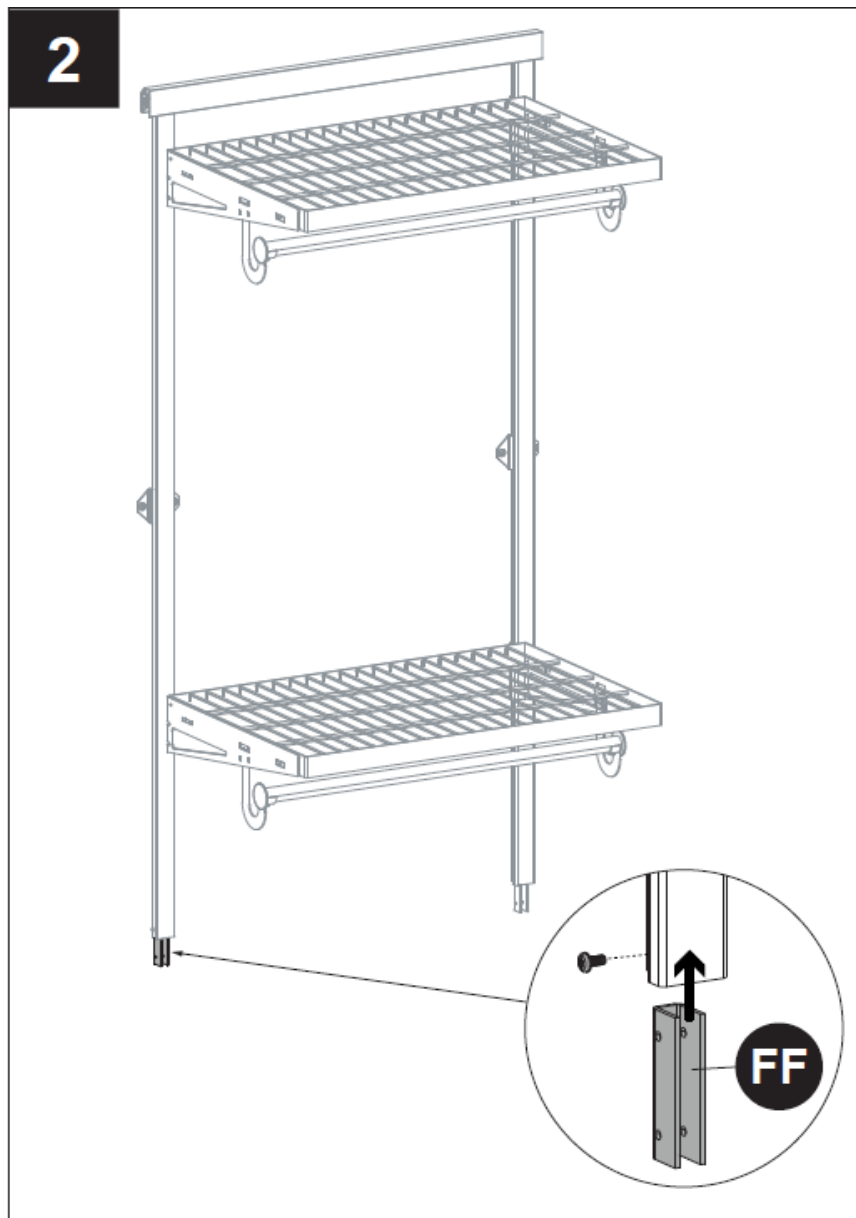
x 1

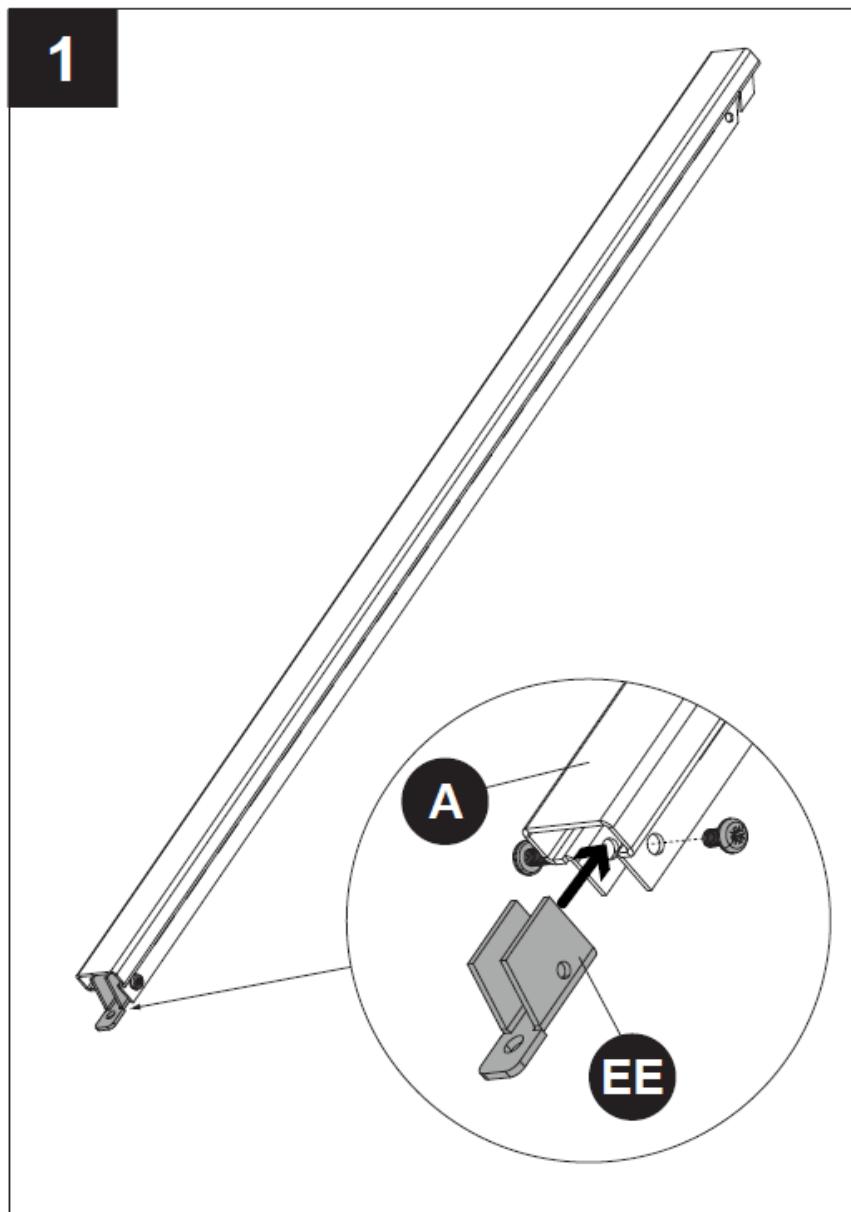

2. Insert the Extender Bracket (FF) into your existing Vertical Standard (sold separately). Fasten the Extender Bracket (FF) with a M4 x 8 screw (CC).

Hardware Used

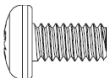
CC	M4 x 8		x 1
FF	Extender Bracket		x 1



NOTE:

Vertical Extender Kit can be used to extended an existing Vertical Standard or installed directly on to existing Horizontal Top Track as a shorter Vertical Standard.

3. With the Extender Bracket (FF) installed, mark the hardware hole location.

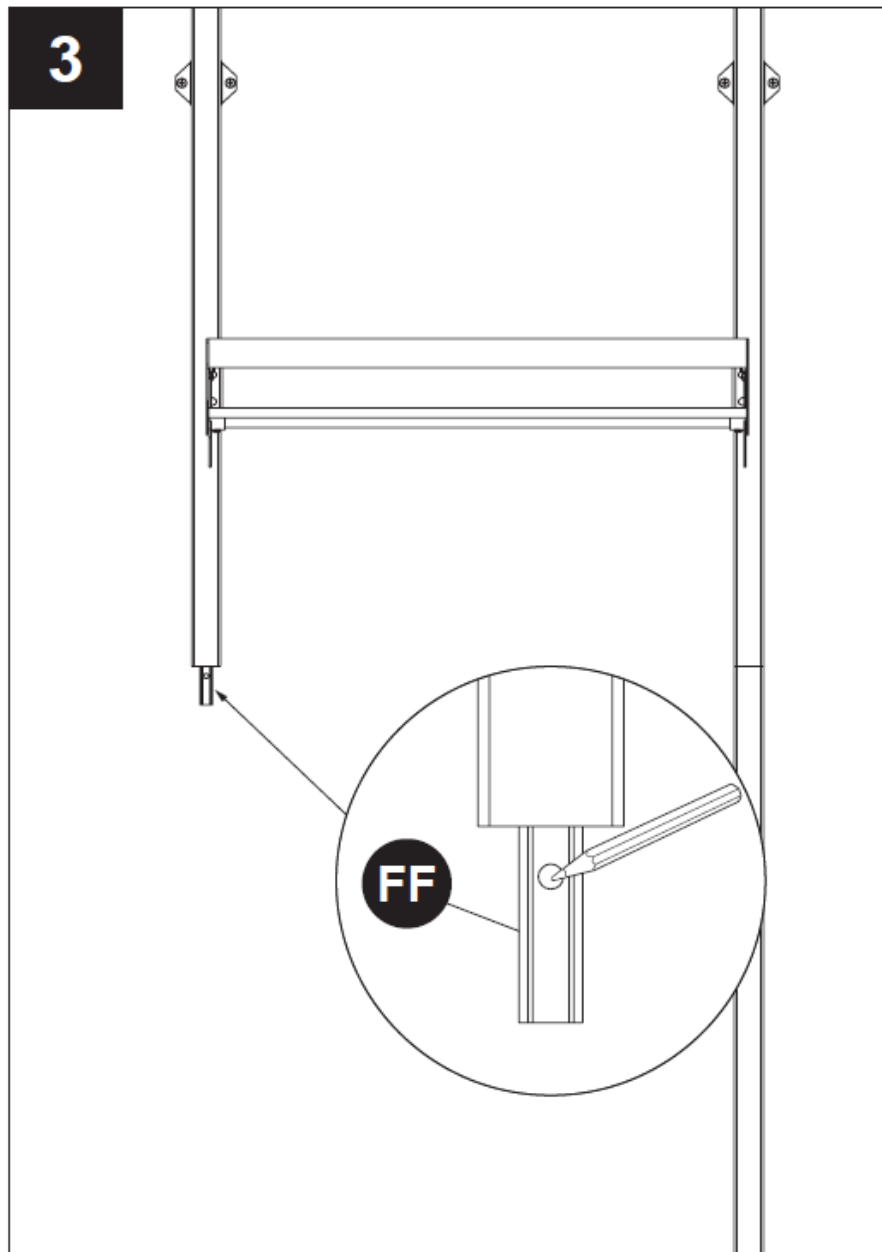


4. Remove the Extender Bracket (FF) and using 5/16" drill bit, pre-drill marked hole locations into drywall. Then install Drywall Anchor (AA) into pre-drilled drywall holes. Do not drill through the metal bracket.


Hardware Used



Drywall Anchor

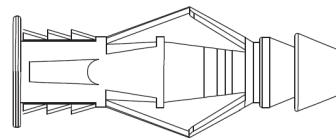

x 1

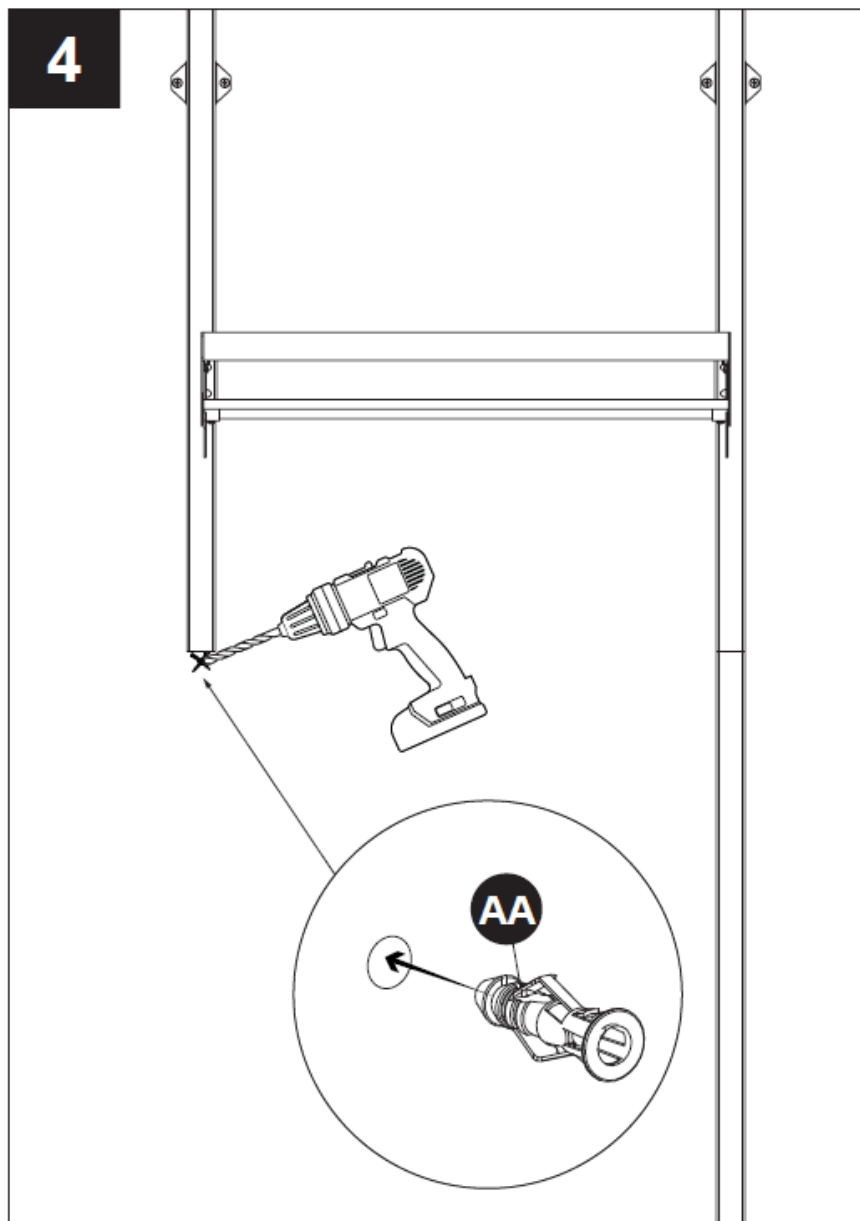


PRO TIP

- If you are unsure if a stud is located behind markings, use 1/8" drill bit to drill all holes. If no stud is present, then use 5/16" drill bit to make holes larger for drywall anchors.
 - Use a rubber mallet to lightly tap Drywall Anchors (AA) into the drywall.
5. Re-insert the Extender Bracket (FF) into your existing Vertical Standard (sold separately). Fasten the Extender Bracket (FF) with M4 x 8 screws (CC).

Hardware Used


CC M4 x 8  x 2


FF Extender Bracket  x 1

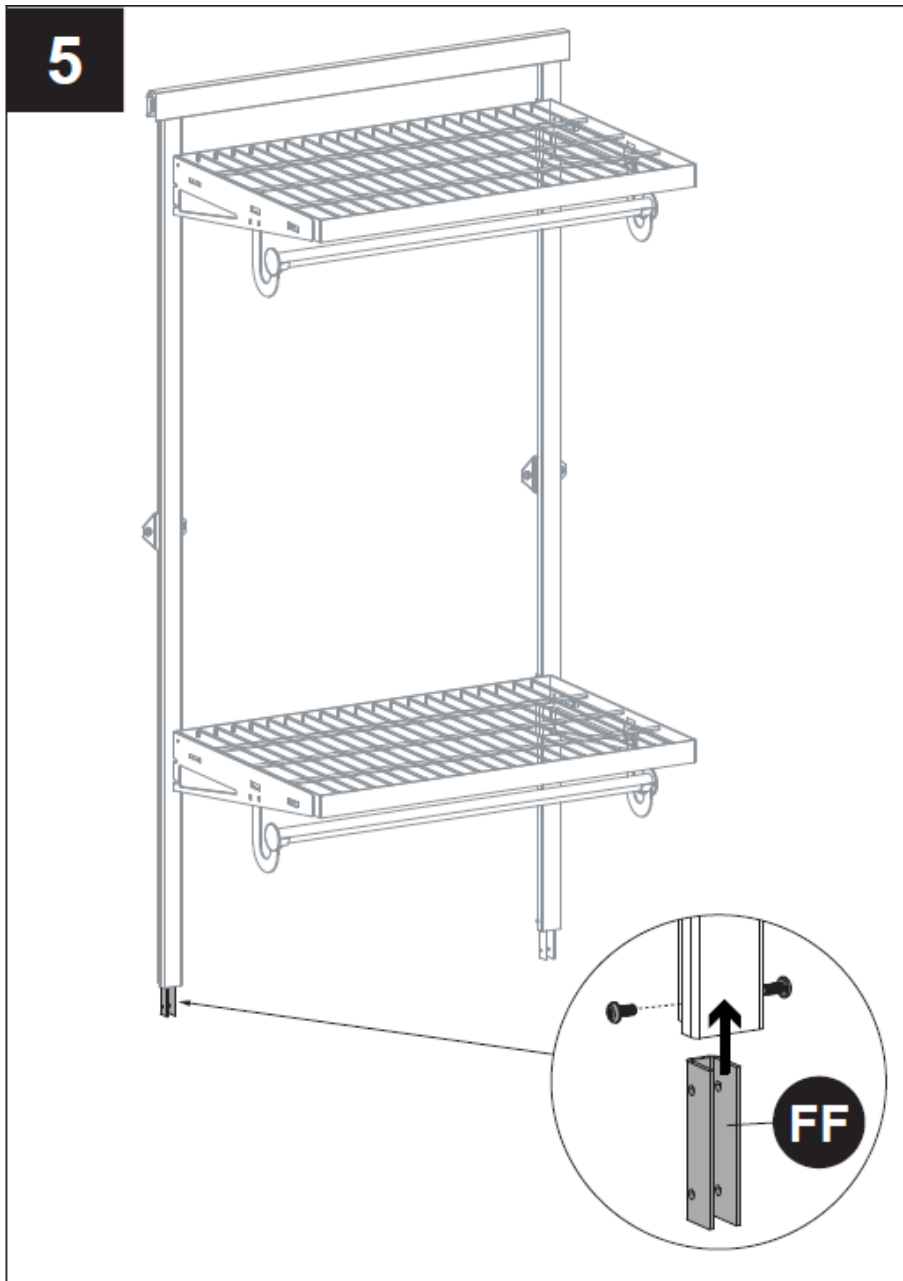

6. Secure the Vertical Standard Connector (FF) to wall using 4.8 x 38 Panhead Screw (BB), then slide the 26-IN Vertical Standard (A) onto the Extender Bracket (FF).


Hardware Used

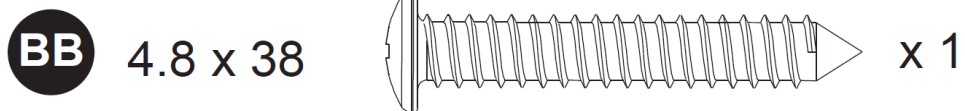

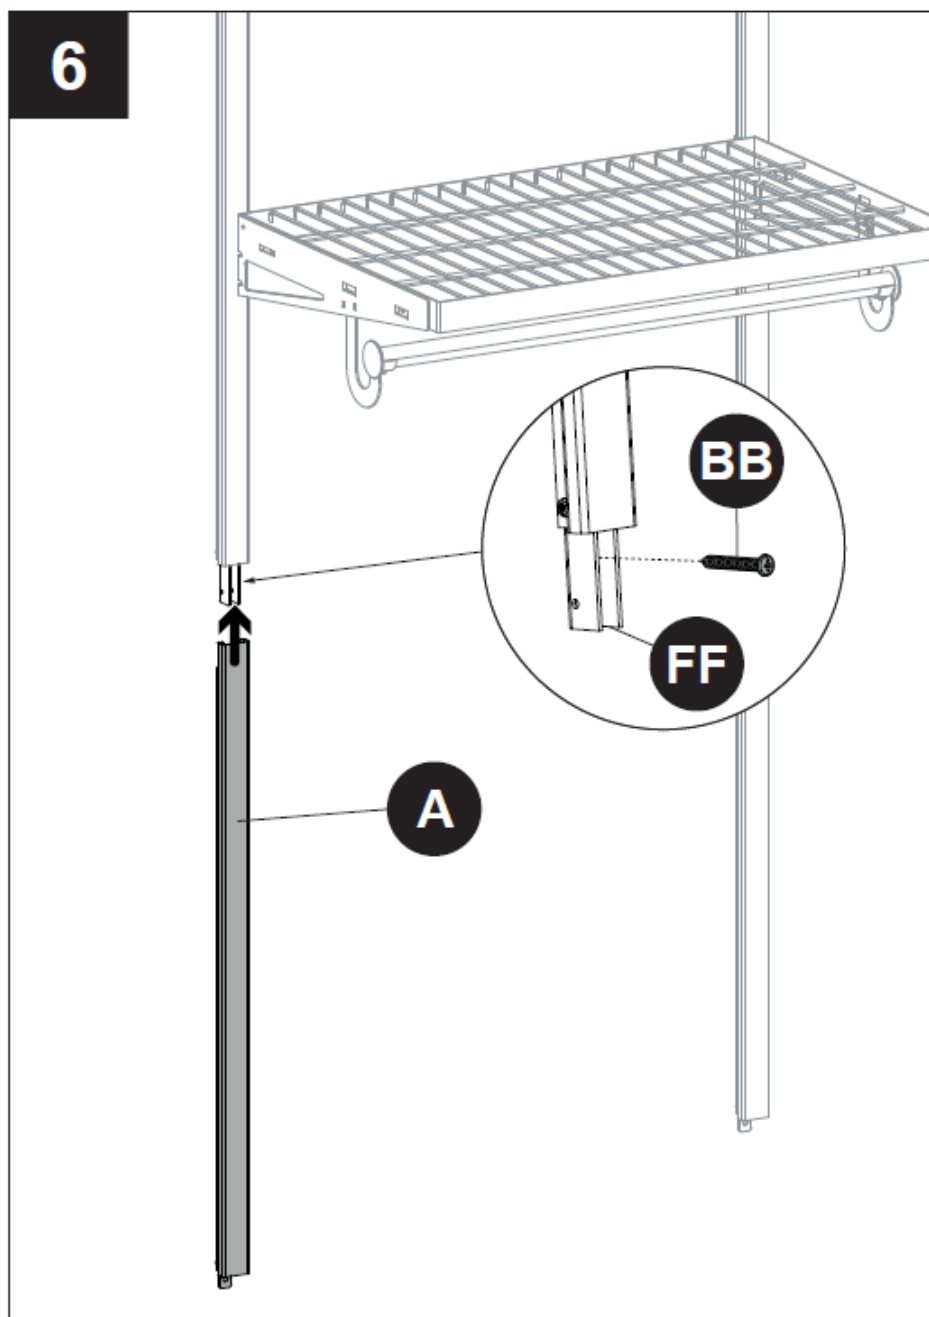

7. Use a Level to make sure the 26-IN Vertical Standard (C) are straight. Then mark hole locations of the Bottom Mount Wall Clips (EE).

7

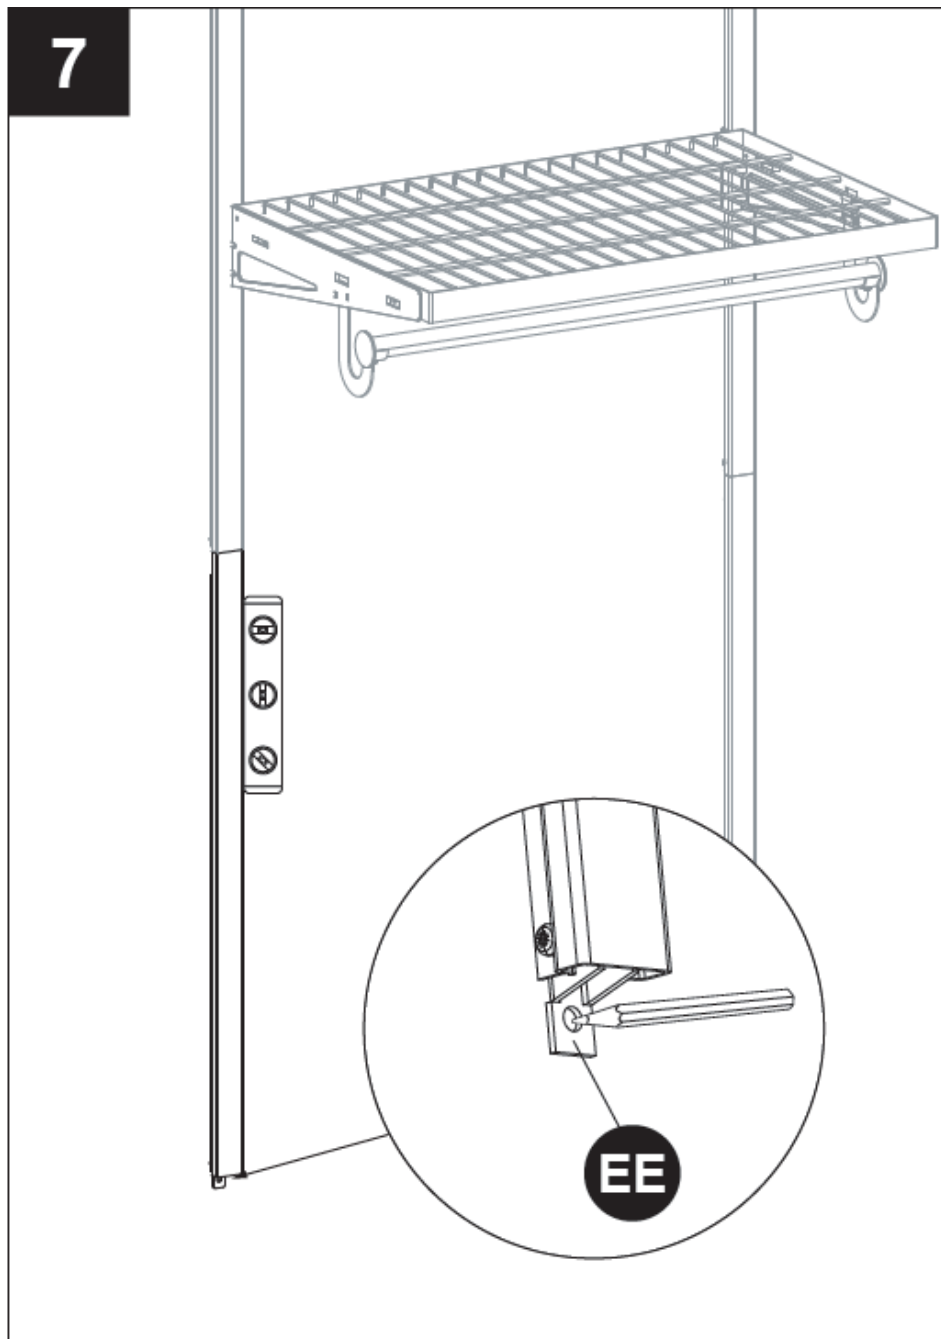


8. Remove the 26-IN Vertical Standards (A) to reveal the marks made in the previous step. Using 5/16" drill bit to pre-drill holes into drywall. Then, install Drywall Anchors (AA) into pre-drilled drywall holes.

Hardware Used


AA

Drywall Anchor

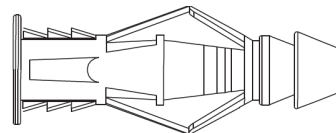

x 1

8

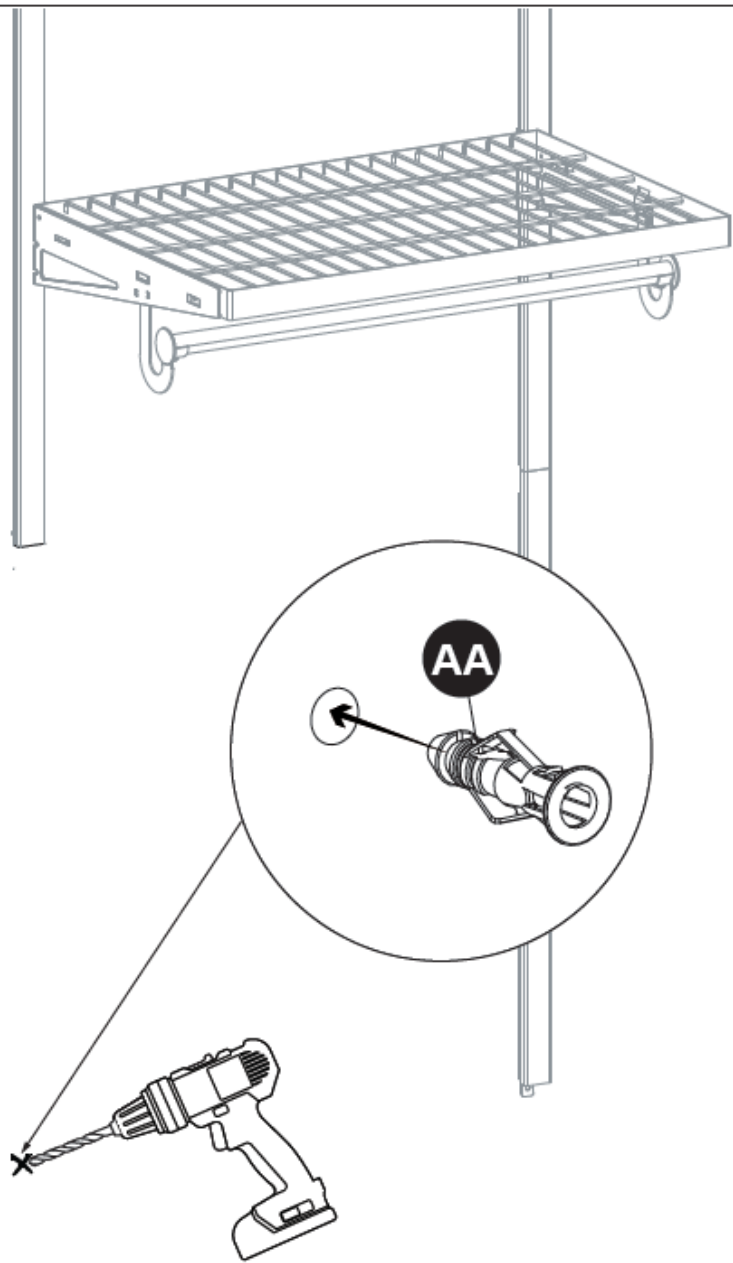


PRO TIP

- If you are unsure if a stud is located behind markings, use 1/8" drill bit to drill all holes. If no stud is present, then use 5/16" drill bit to make holes larger for drywall anchors.
- PRO TIP Use a rubber mallet to lightly tap Drywall Anchors (AA) into the drywall.

9. Fasten 26-IN Vertical Standard (A) to the Vertical Standard Connector (FF) with M4 x 8 screws (CC).




M4 x 8

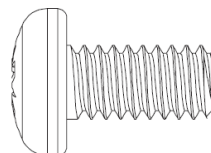


x 2

9

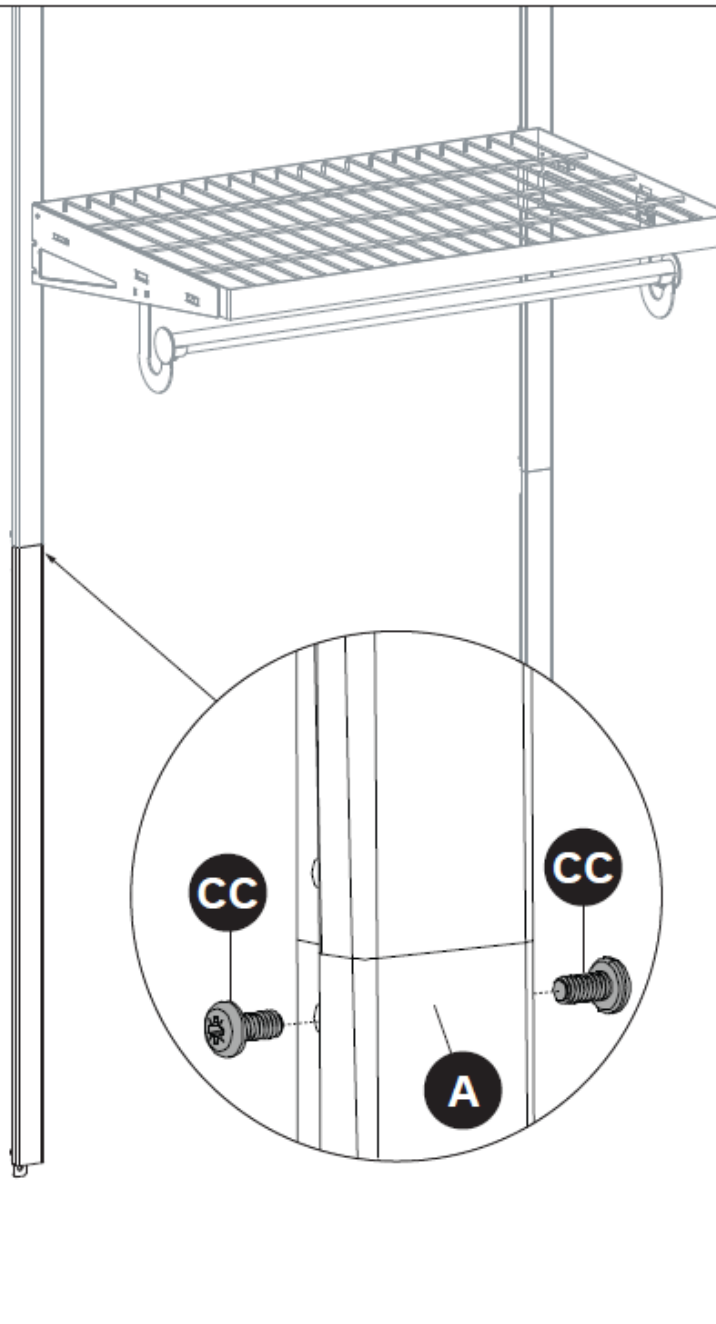


10. Secure the 26-IN Vertical Standard (A) to wall through the Bottom Mount Wall Clip (EE) using 4.8 x 38 Panhead Screw White (BB).

Hardware Used

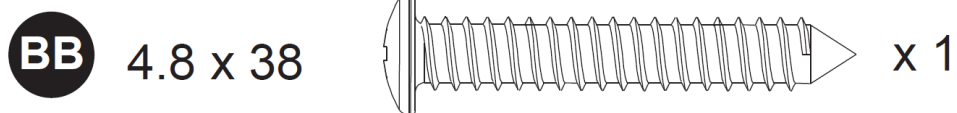

10

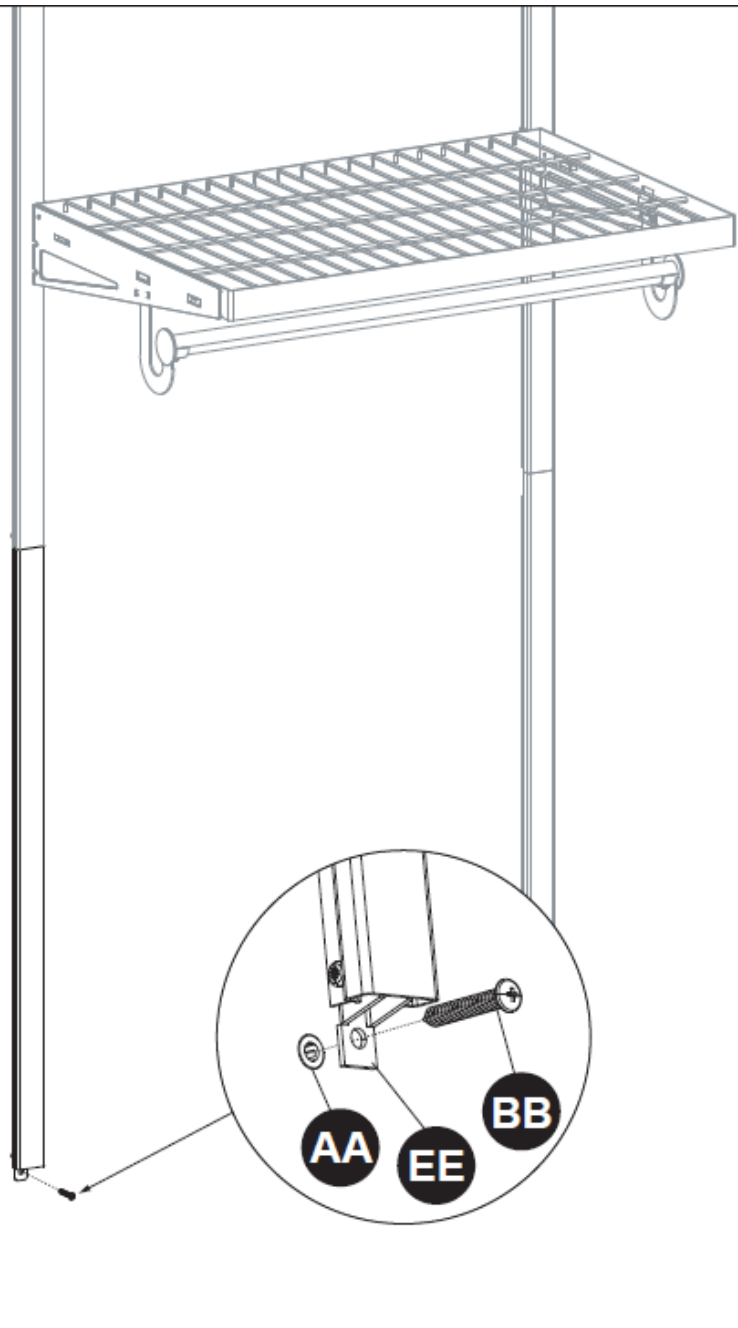


11. Insert the Universal Wall Clip (DD) into both sides of the 26-IN Vertical Standards (A) near its center point. Once inserted push clips up and mark the hardware hole locations.


Hardware Used

DD

Universal Wall
Clip

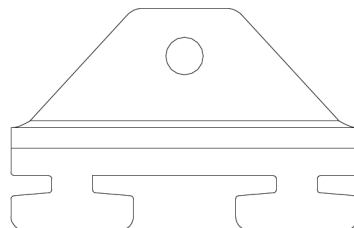


x 2

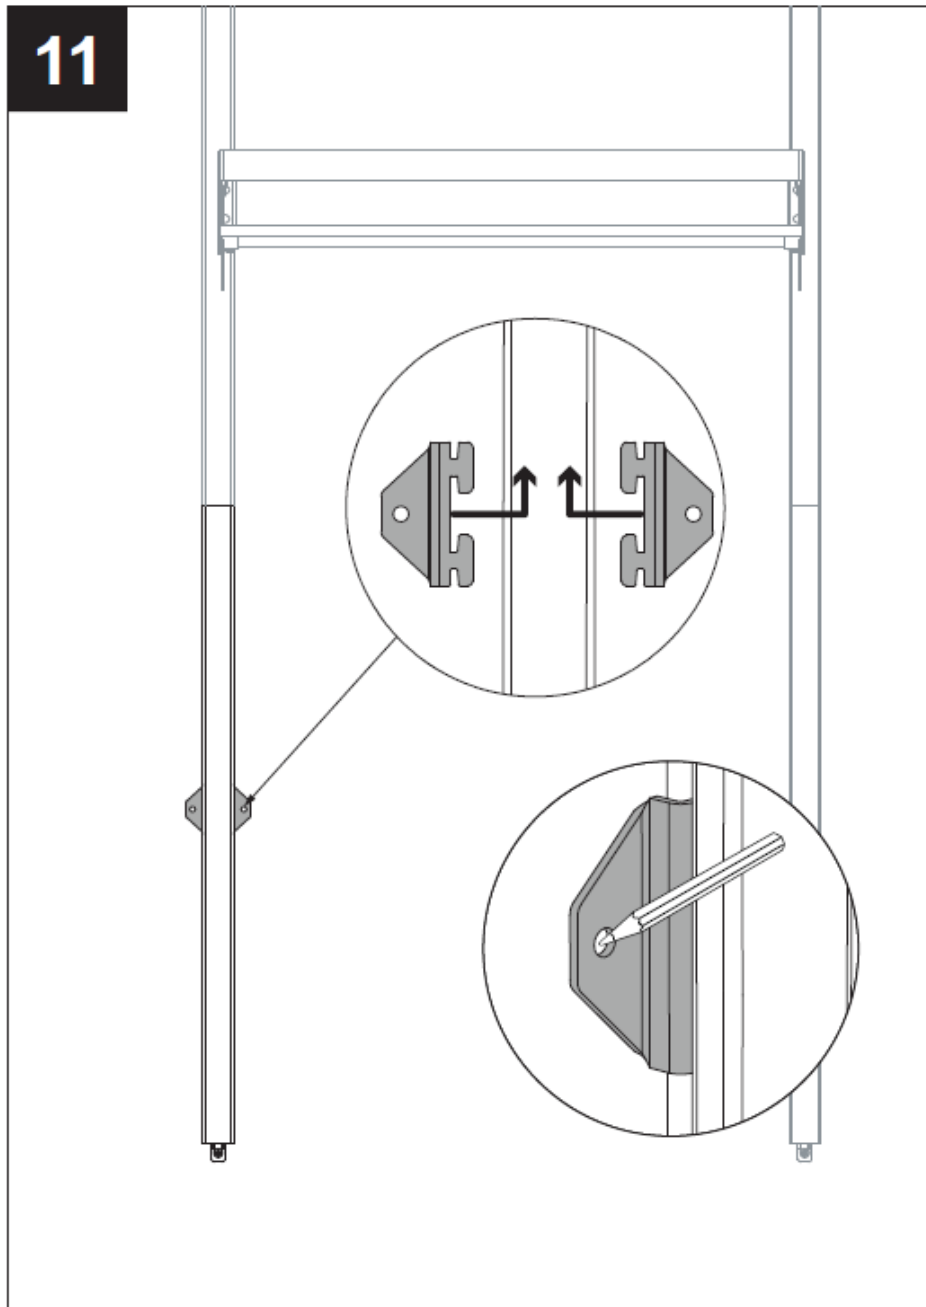**NOTE:**


Ensure Universal Wall Clip is installed in upward direction for maximum support.

12. Remove Universal Wall Clip (DD) and using 5/16" drill bit, pre-drill marked hole locations into drywall. Do not drill through the metal brackets.

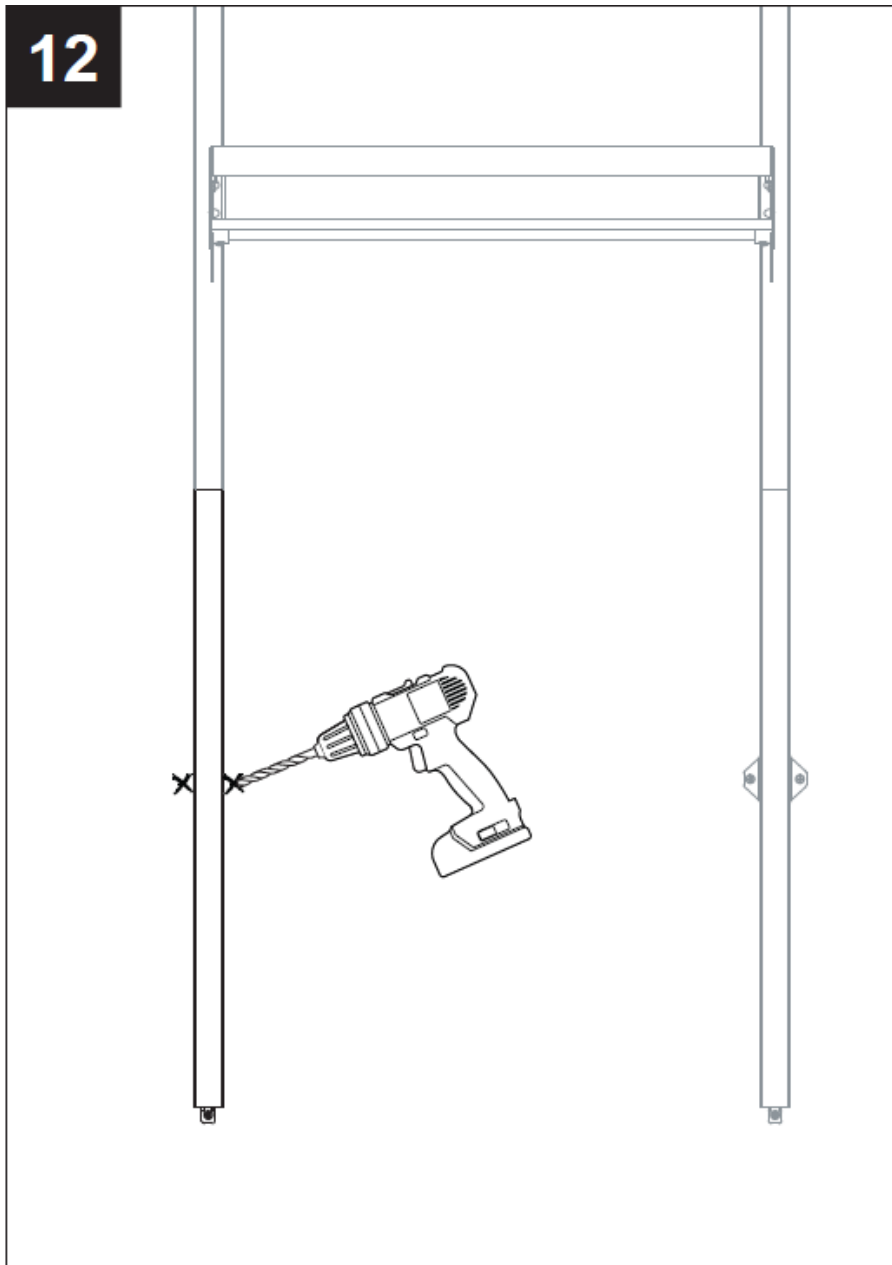
12**PRO TIP**

- If you are unsure if a stud is located behind markings, use 1/8" drill bit to drill all holes. If no stud is present, then use 5/16" drill bit to make holes larger for drywall anchors.

13. Install Drywall Anchors (AA) into pre-drilled drywall holes.

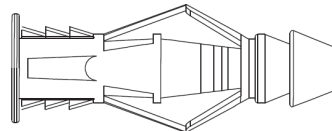AA**Drywall Anchor****x 2**

13

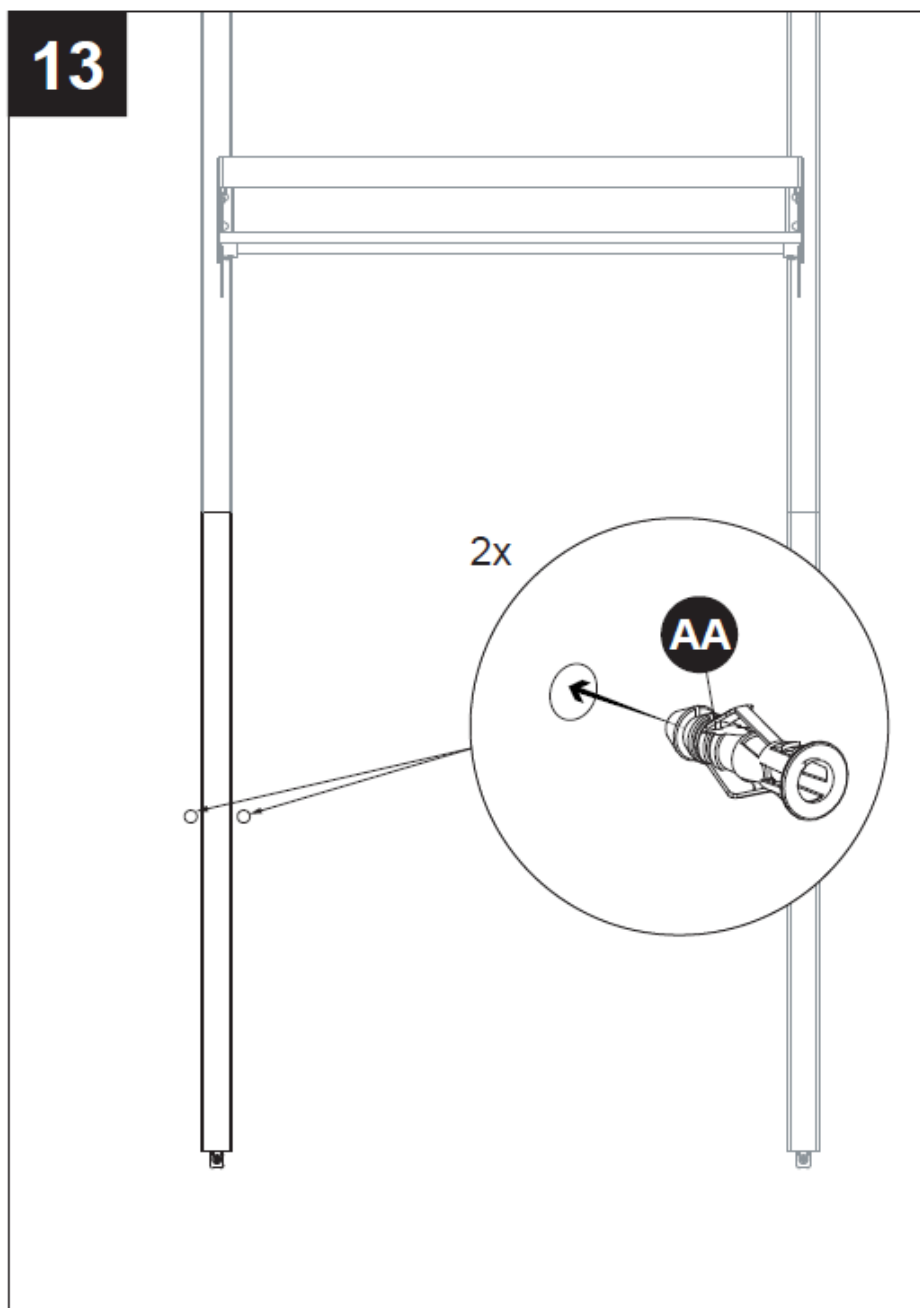

PRO TIP


- Use a rubber mallet to lightly tap Drywall Anchors (AA) into the drywall.

14. Re-install each Universal Wall Clip (DD) into the 26-IN Vertical Standard (A) at marked hole locations and secure Clips to wall using 4.8 x 38 Panhead Screw White (BB).

Hardware Used

DD


Universal Wall
Clip

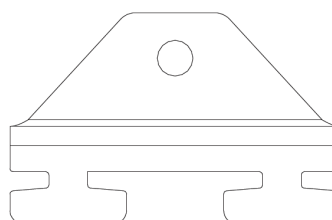


x 2

BB

4.8 x 38




x 2

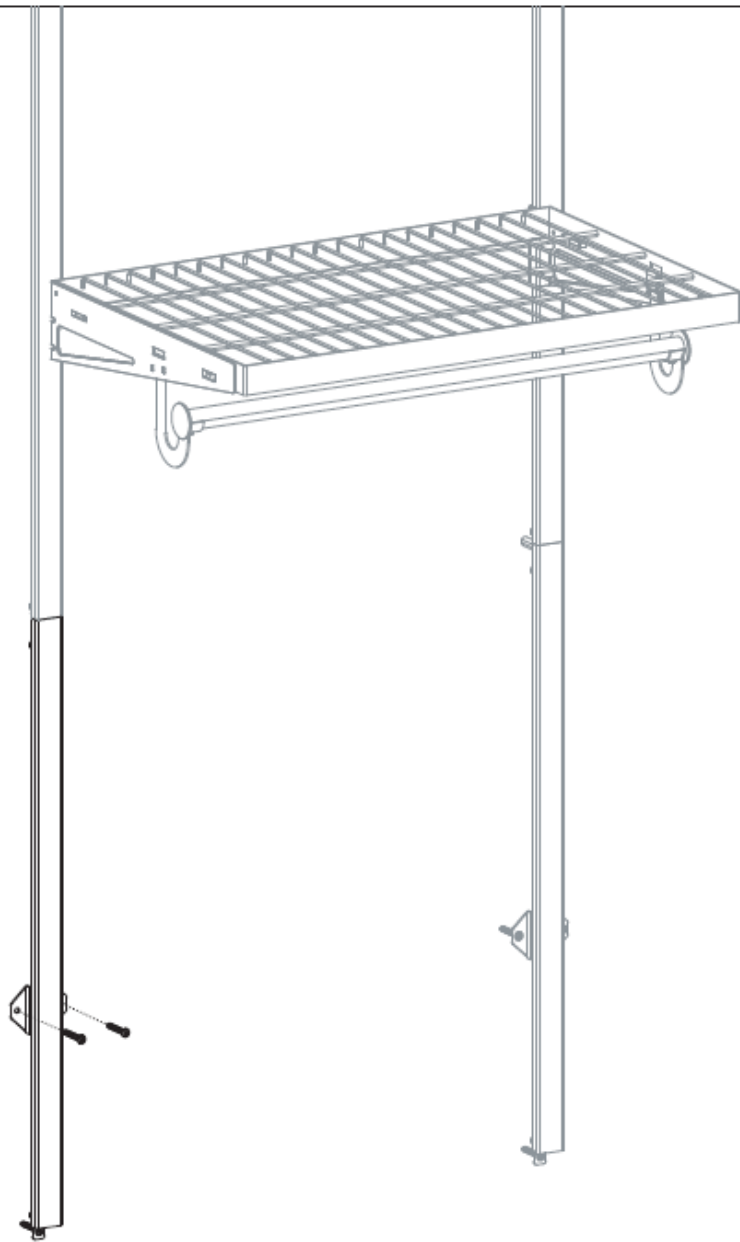

OPERATING INSTRUCTIONS

Example 26-IN Vertical Standard Kit Layouts

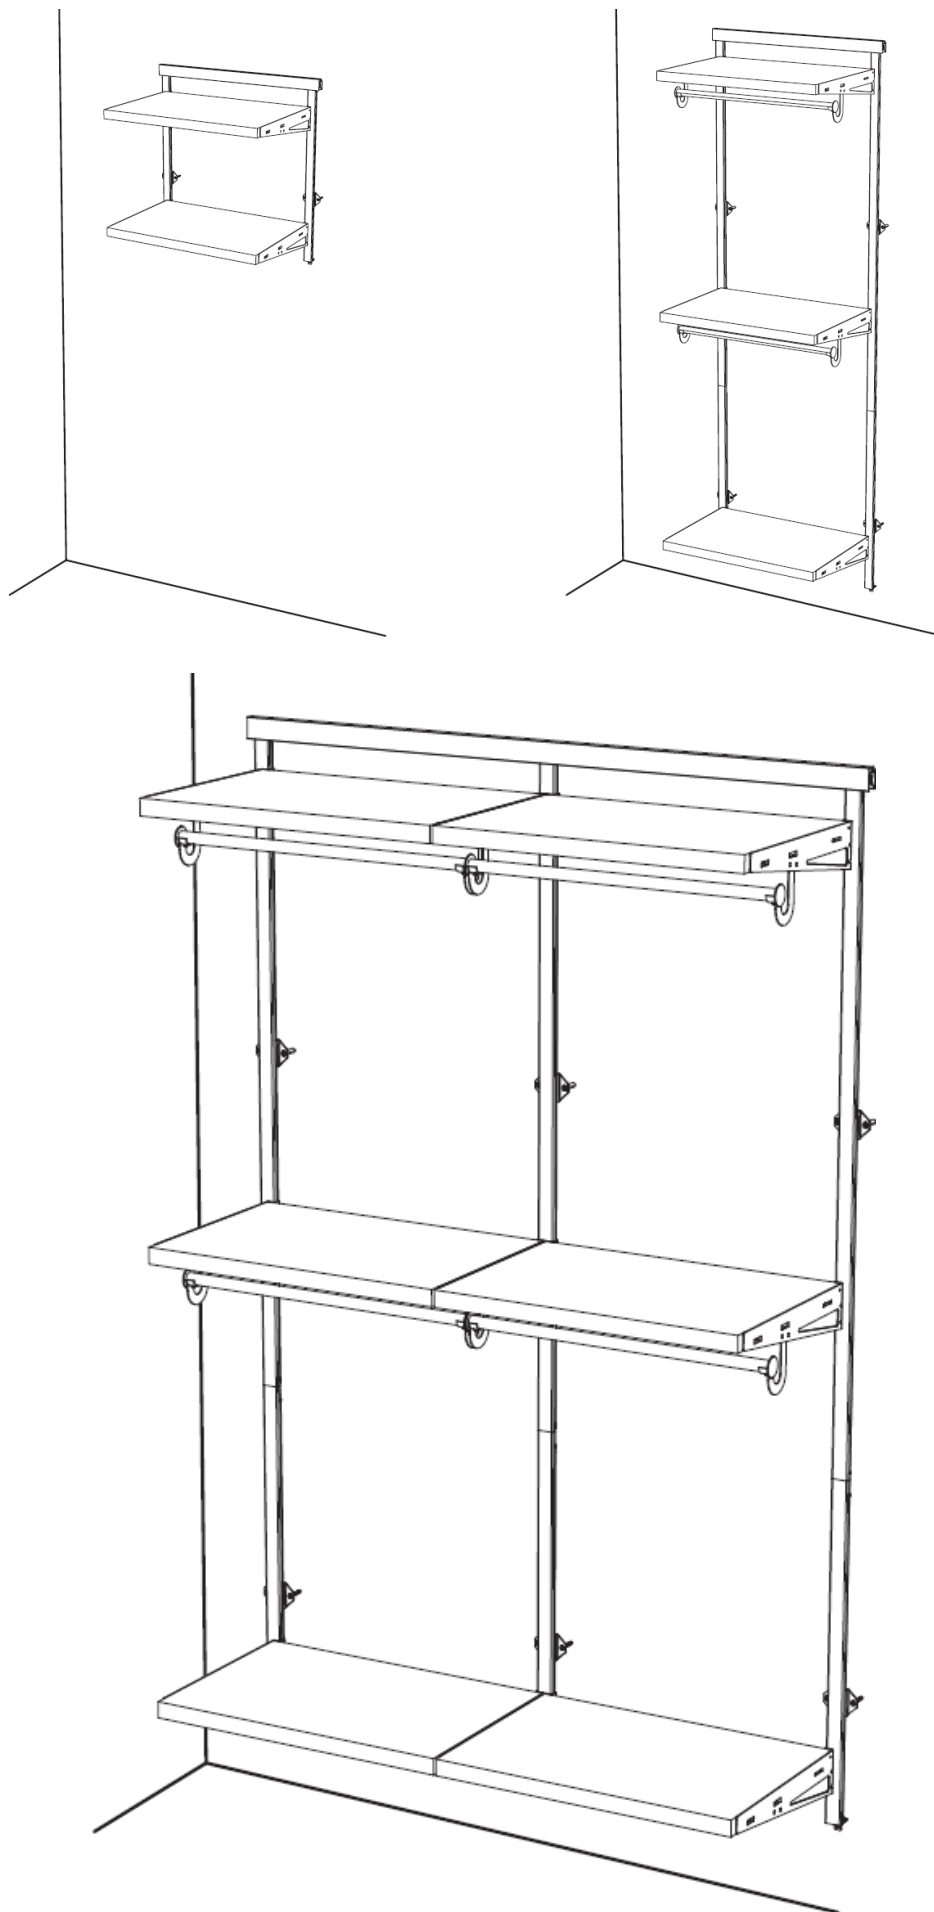

CARE AND MAINTENANCE

- Use a soft, clean cloth that will not scratch the surface when dusting.


- Make sure all bolts/screws are tightly fastened before the unit is used, check bolts/screws periodically and tighten them if necessary.

WARRANTY

This limited warranty covers the original purchase of this product used for normal personal or household use. Origin 21 warrants its products will be free from defects in materials and workmanship (normal wear and tear excepted), for a period of one (1) year from the date of purchase, except as provided below. As the exclusive remedy under this warranty, Origin 21 will repair or replace any defective component. This warranty does not apply to damage caused by fire, accident, negligence, misuse, use other than as stated in product instructions, improper cleaning or other circumstances not directly attributable to defects in materials and workmanship. Materials are warranted for one year from date of purchase. Proof of purchase is required in the form of a receipt (copy or original) to validate the warranty.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at 888-251-1026, 8 a.m. – 8 p.m., EST, Monday – Sunday. You could also contact us at partsplus@lowes.com.

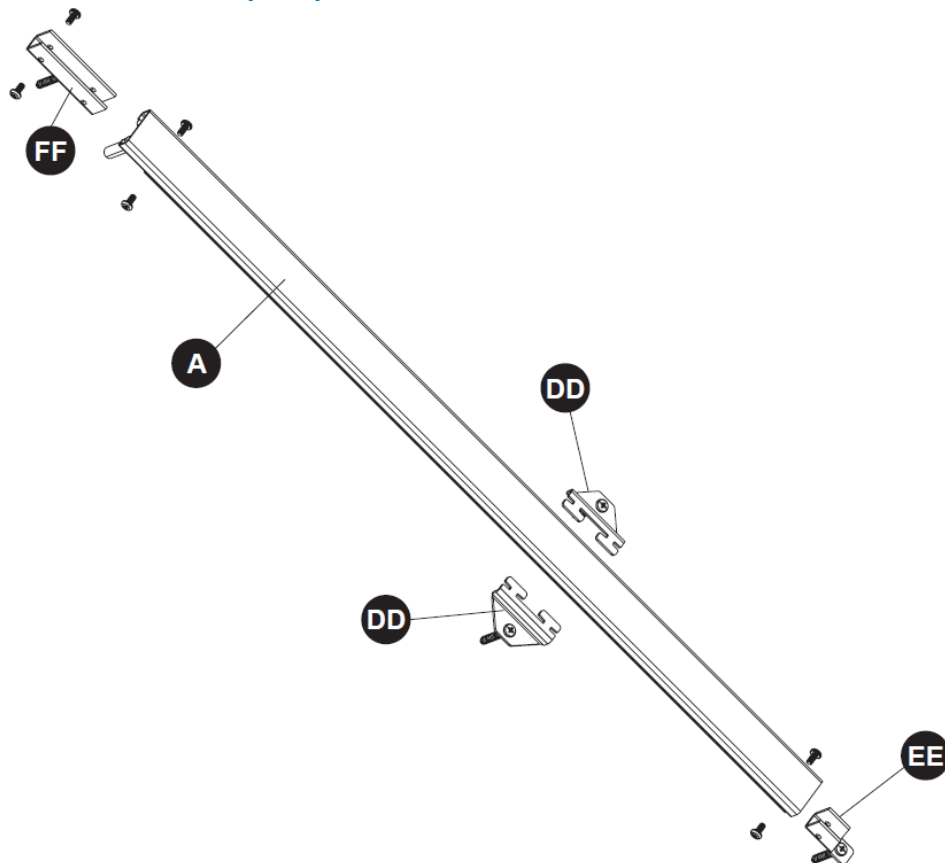

PART	DESCRIPTION	QUANTITY
A	26-IN Vertical Standard	1014540-A
DD	Universal Wall Clip	1014540-DD
EE	Bottom Mount Wall Clip	1014540-EE
FF	Extender Bracket	1014540-FF

	<p>Origin 21 VS26EK-W Vertical Standard Extender Kit [pdf] Instruction Manual VS26EK-W Vertical Standard Extender Kit, VS26EK-W, Vertical Standard Extender Kit, Standard Extender Kit, Extender Kit</p>
---	--