


## Orimade Adhesive Corner Shower Caddy Shelf with 2 Movable Hooks User Manual

[Home](#) » [Orimade](#) » Orimade Adhesive Corner Shower Caddy Shelf with 2 Movable Hooks User Manual 

Orimade Adhesive Corner Shower Caddy Shelf with 2 Movable Hooks

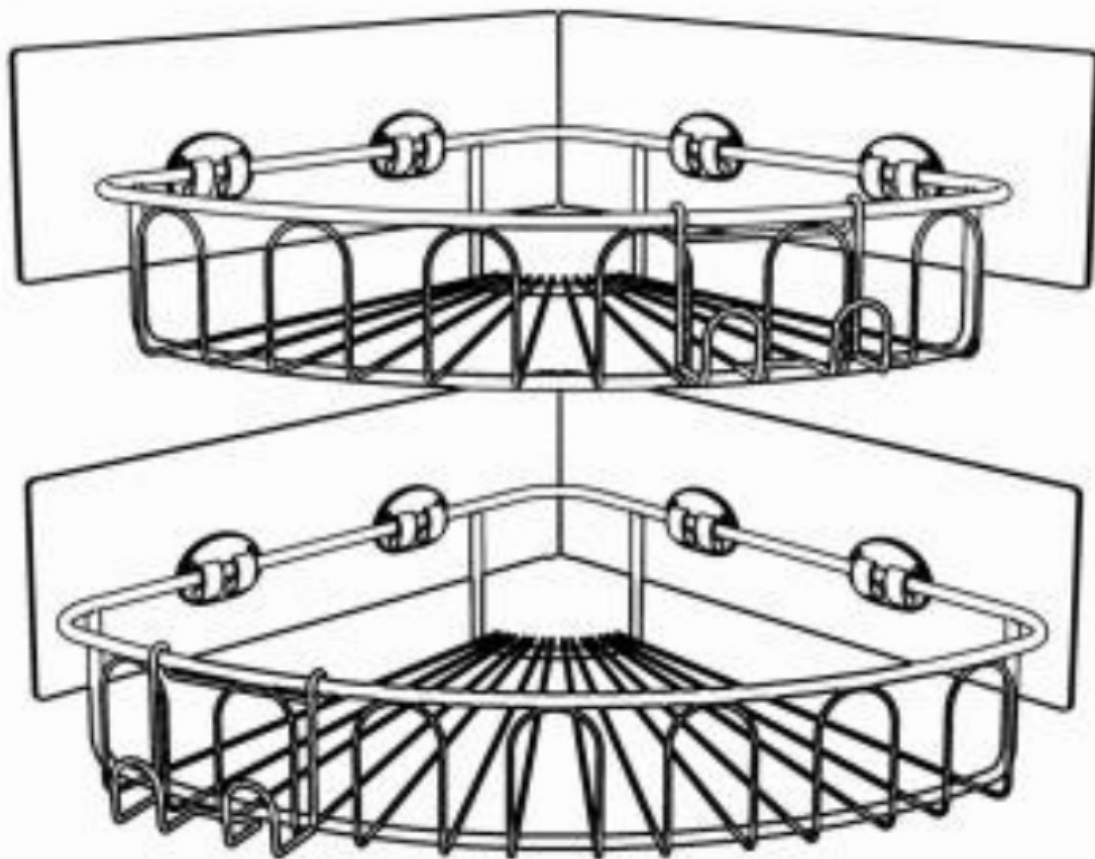

## Contents

### [1 Caution](#)

### [2 Installation Steps](#)

### [3 Documents / Resources](#)

#### [3.1 References](#)

### [4 Related Posts](#)

## Caution

**Please read this part carefully before your installation.**

- For 90° right angle corner only
- Please clean and dry the surface before the installation
- Please ensure the adhesive strips are attached smooth surface.
- Please squeeze out the air when applying the adhesivestrips.
- Please wait 24 hours before using the product.
- Please note that adhesive strip is for single use.
- If there is any need to remove the adhesive strip, a hairdryer will give you a hand.

**This product is not suitable for the following wall surfaces:**


Rough Surface Wall	Painted Wall	Wallpaper Wall
Limed Wall	Concrete Wall	Cement Wall

## Installation Steps

1. Clean the product installation surface, ensuring surface is clean and dry.




2. Prepare the pencil and the corner caddy, place the corner shower caddy in the 90-degree corner, draw the line with the pencil along the top two sides of the corner shower caddy.

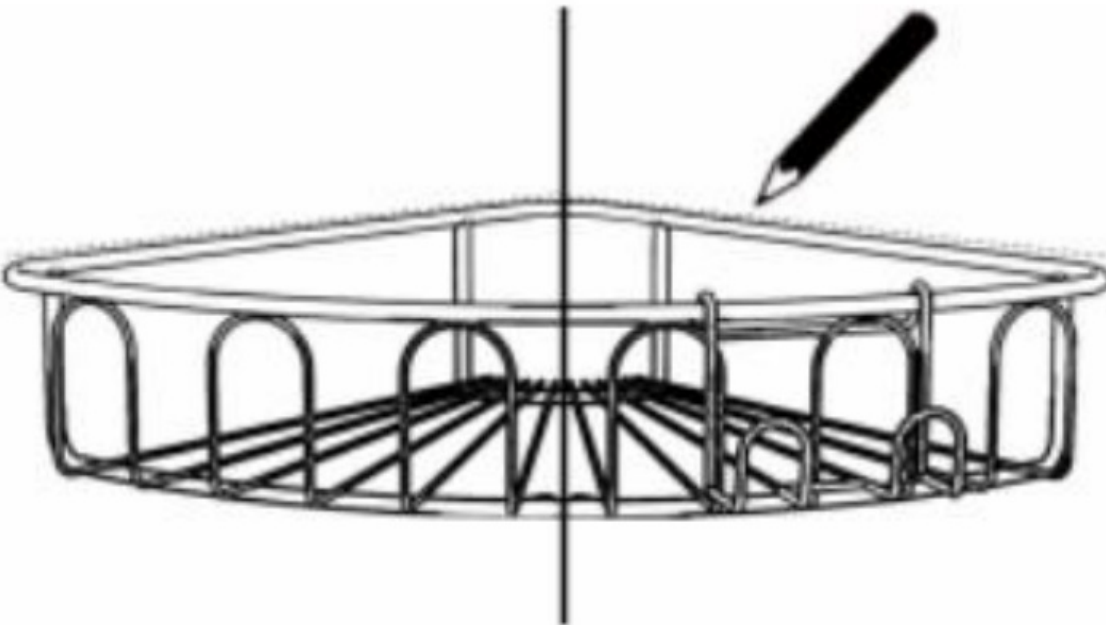

### Caution

Place the corner shower caddy evenly, so that they are not high on one side and low on the other.

3. Tear off the back cover of the adhesive, stick the adhesive on the dry surface and press the adhesive firmly to squeeze all the air out of the adhesive, especially the hook area.

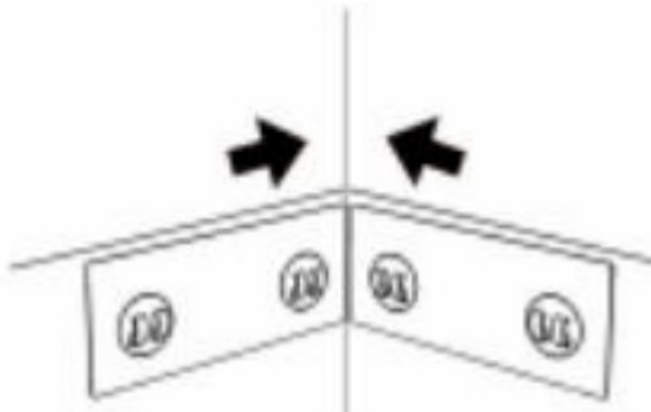


### Caution


Stick the adhesive from the most inside the corner to the outside, and don't leave any distance between corner

and adhesive.

4. Hang the corner shower caddy on the hooks on adhesive.

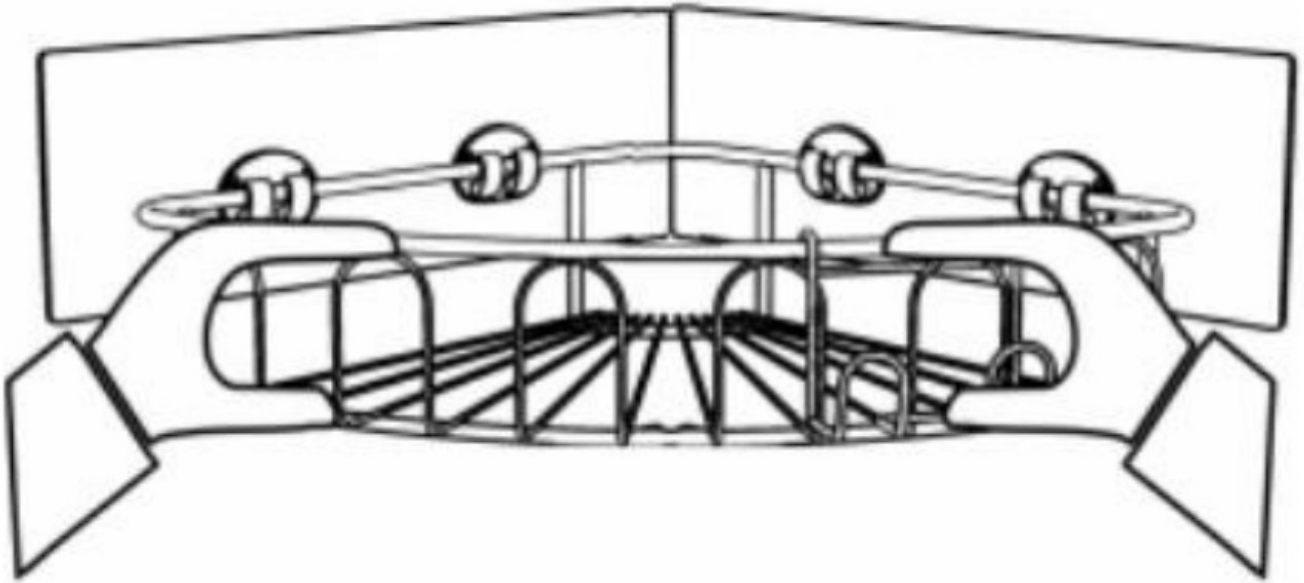

5. Hang the hooks on the corner shower caddy.

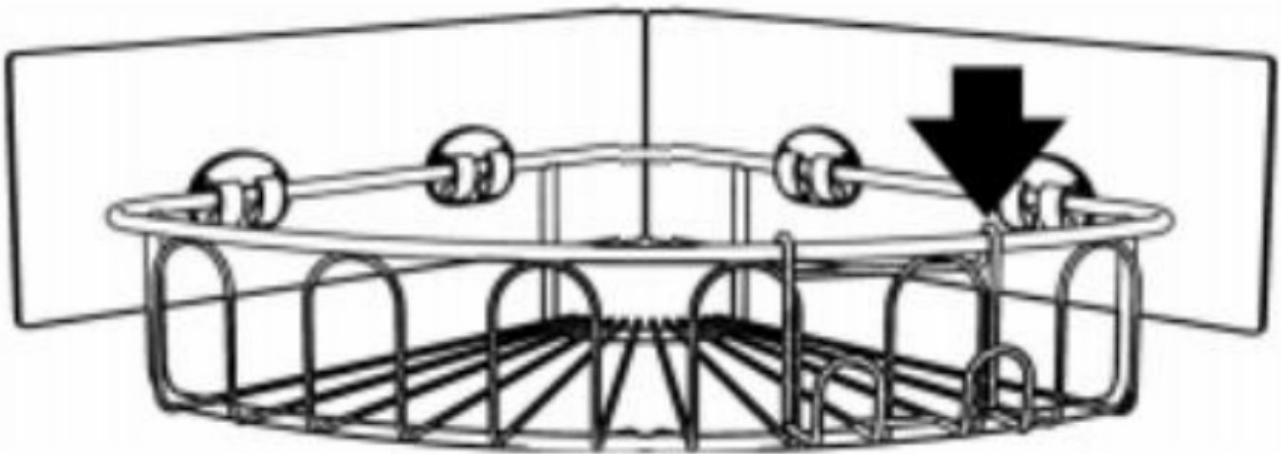


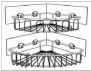
**Remove Tips:** Use hair dryer to heat the adhesive surface. After heating, the film will be taken off easily.

The traces of adhesive strips left on the wall can be wiped down with alcohol after pulling off the adhesive strips.

**Made In China**

---

**Documents / Resources**

<div><div></div><div>Instruction Manual</div><div></div><div>Shower Caddy</div></div>	<p><a href="#">Orimade Adhesive Corner Shower Caddy Shelf with 2 Movable Hooks</a> [pdf] User Manual Adhesive Corner Shower Caddy Shelf with 2 Movable Hooks, Adhesive, Corner Shower Caddy Shelf with 2 Movable Hooks, Caddy Shelf with 2 Movable Hooks, Shelf with 2 Movable Hooks, 2 Movable Hooks, Movable Hooks</p>
--	--

References

- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.