

oxygenics POWER MAX Installation Guide

Home » oxygenics POWER MAX Installation Guide



POWERMAX
EASY INSTALLATION INSTRUCTIONS




STEP 1Remove your existing shower head. To remove, turn the existing shower head in a counterclockwise direction.



STEP 2Remove any remnants of old plumber's tape and flush out shower pipe for 5 to 10 seconds.




STEP 3 Wrap plumber's tape clockwise3 or 4 turns around threaded end of shower arm.

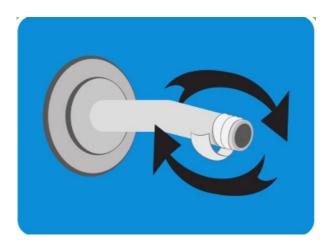


STEP 4

In a clockwise direction, screw your new shower head onto the taped portion of the shower arm. Hand tighten only.

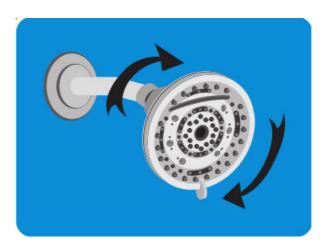

EASY TWIST SPRAY SELECTION

Enjoying multiple spray patterns during your shower has never been easier. With the PowerMax's easy twist design, simply rotate the easy spray selector for a quick spray change.

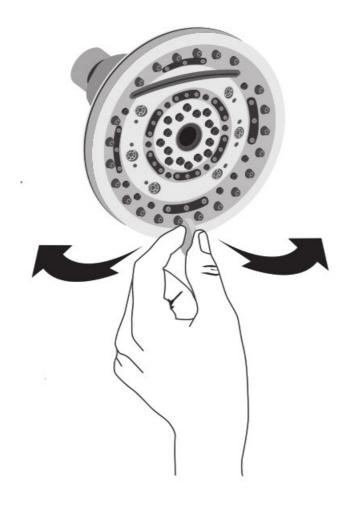

WHAT'S INCLUDED

- + Fixed Shower Head
- + Plumber's Tape

STOP! NEED HELP? PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE.

If you need installation assistance, replacement parts or have questions regarding our warranty, our Customer Service team can be contacted by:

PHONE:

1-866-440-9257 or 775-420-5600

LIVE CHAT:

www.oxygenics.com

EMAIL:

support@oxygenics.com

ONLINE:

www.oxygenics.com/claims

Business hours:

Monday – Thursday 7:00 am to 5:00 pm PST Friday 7:00 am to 4:30 pm PST*
*Closed on all nationally observed holidays



For use with automatic compensating valvesrated at 1.50 GPM (5.68 L/min) or less.



www.oxygenics.com

Contents [hide

- 1 Documents / Resources
 - 1.1 References
- **2 Related Posts**

Documents / Resources



oxygenics POWER MAX [pdf] Installation Guide POWER MAX

References

- Oxygenics Pure Shower Genius
- Submit a Warranty Claim Oxygenics

Manuals+, home privacy