



PDQ 6300D Dummy Exit Device Instructions

[Home](#) » [PDQ](#) » PDQ 6300D Dummy Exit Device Instructions 

PDQ 6300D Dummy Exit Device



Contents


- [1 DEVICE](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

DEVICE

MACHINE SCREWS:
USE #7 OR 13/64" DRILL AND 1/4-20 TAP

WOOD SCREWS:
USE 5/32" DRILL

SEX NUTS:
USE 3/8" DRILL PULL SIDE
USE 9/32" DRILL PUSH SIDE

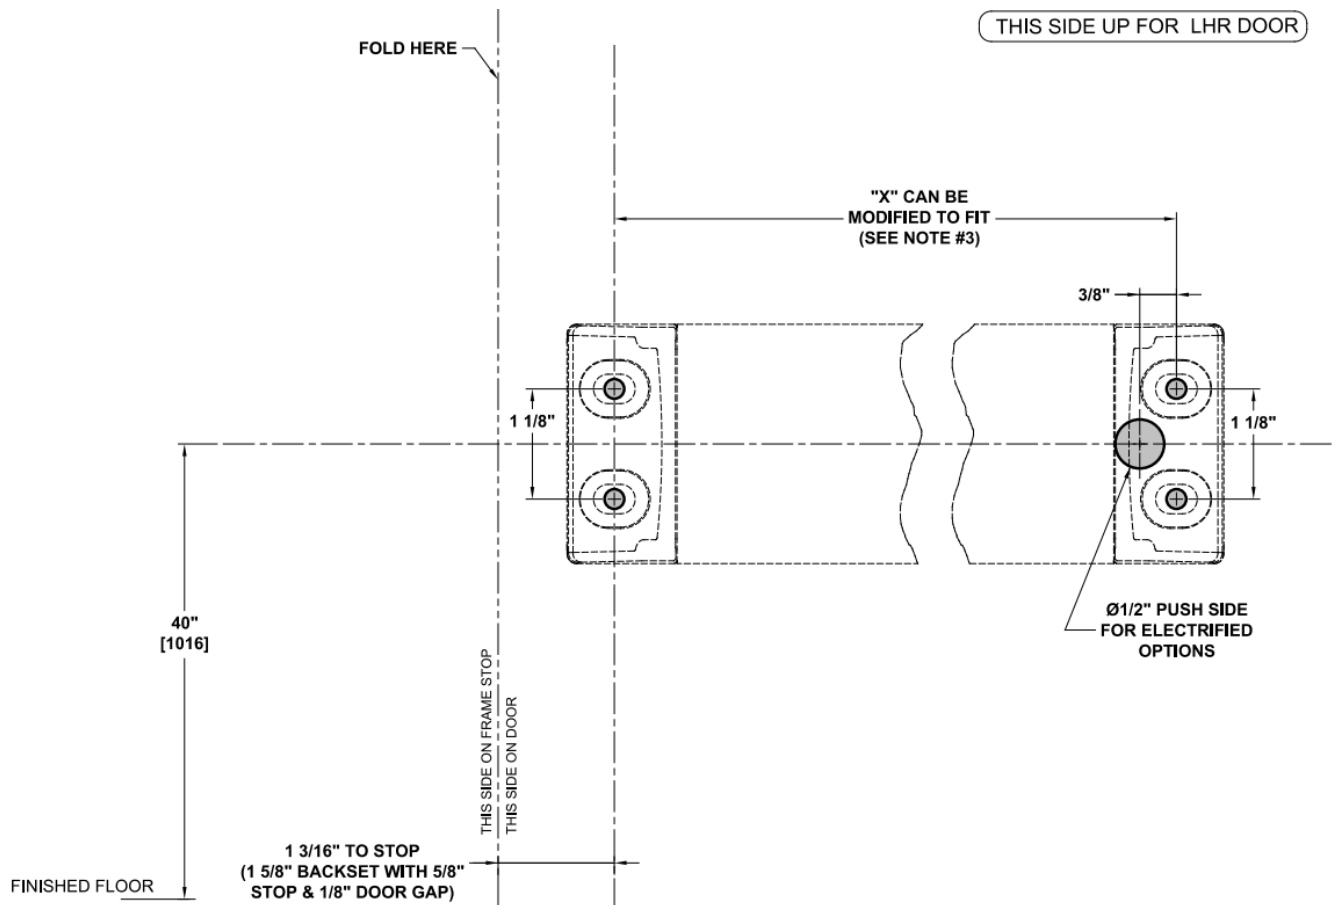

NOTES:


1. VERIFY PRINTED TO SCALE
2. SEX NUTS MAY BE REQUIRED
FOR UNREINFORCED DOORS OR COMPOSITE FIRE DOORS.
CONSULT DOOR MANUFACTURER'S RECOMMENDATIONS
3. DIMENSION "X" SIZED FOR DOOR.
REFER TO DEVICE INSTRUCTIONS WHEN CUTTING DOWN FOR NARROWER OPENING
4. MINIMUM STILE WIDTH: 3"
5. CHECK PDQ WEBSITE FOR MOST RECENT REVISION

WWW.PDQLOCKS.COM



PDQ Manufacturing
2230 Embassy Dr.
Lancaster, PA 17603
833-273-7832
833-2 PDQTECH
www.pdqlocks.com

Documents / Resources

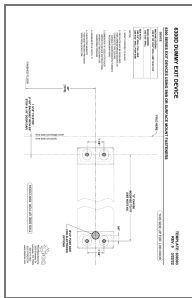

[PDQ 6300D Dummy Exit Device](#) [pdf] Instructions
6300D Dummy Exit Device, 6300D, Dummy Exit Device