



Perlick CR-ACC-D1N Dual Installation Kit With No Heater Instructions

[Home](#) » [Perlick](#) » Perlick CR-ACC-D1N Dual Installation Kit With No Heater Instructions 

Perlick CR-ACC-D1N Dual Installation Kit With No Heater Instructions




Contents


- [1 Installation Instruction](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

Installation Instruction

STEP #1: OPEN THE DOORS TO THE CABINETS. GRAB BOTH SIDES OF THE FRONT GRILL PLATE AND PULL STRAIGHT OUT IN ORDER TO POP THE CLIPS OUT OF THE LATCHES. DO THIS TO BOTH CABINETS

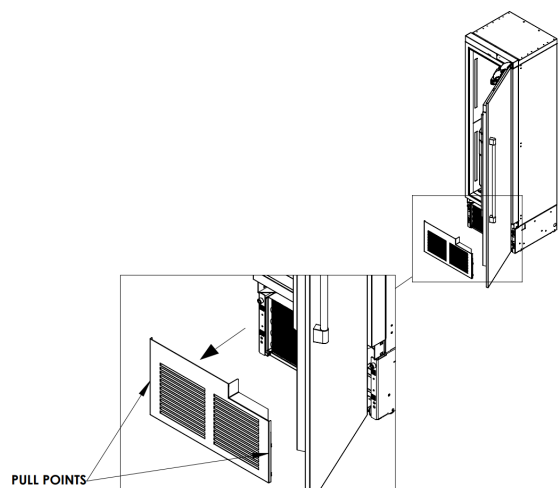

STEP #2: SELECT THE CABINET THAT WILL BE PLACED ON THE RIGHT SIDE. SECURE (1) 1013719-1 TO THE FRONT BASE WITH (2) 1008781 SCREWS.

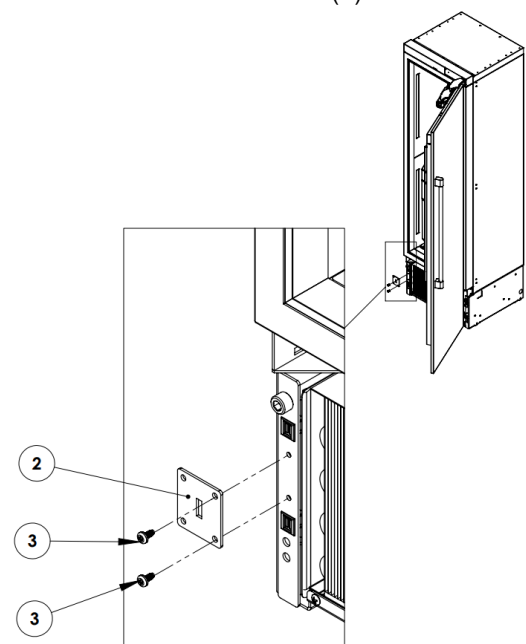


ITEM NO	PART NUMBER	DESCRIPTION	Default/QTY
1	1015035-1	CENTER TRIM, SIDE BY SIDE INSTALL, COLUMN	1
2	1013719-1	BRACKET, ATTACHING, COLUMN, FOR SIDE BY SIDE INSTALLS	4
3	1008781	SCREW, M6 X 12MM, THRD	8
4	M50050-466	#10 X 1/2" PH Truss Head SMS #410 S.S., Type "AB",	8
5	1010546	M5x10 MACH SCR, LOW HEAD, NBK PART NO: SSH-M5-10	6
8	1006628-4R	OVERLAY, SOLID SS, 4" TOE KICK, RH, 24" COLUMN	1

ADDED TITLE & HANDLE VIE		
C	1/17/2019	KDS
1017886		
B	1/17/2019	KDS
NEW RELEASE		
A	5/26/2018	
REVISIONS		


STEP #3: REMOVE ALL PROTECTIVE FILM FROM THE CENTER TRIM (1015035-1).

STEP #4: ATTACH THE CENTER TRIM TO LEFT SIDE OF THE CABINET THAT WILL BE ON THE RIGHT, WITH (6) 1010546. BEFORE FULLY TIGHTENING SCREWS, MAKE SURE THE CENTER TRIM SITS FLUSH WITH THE CABINET FACE.

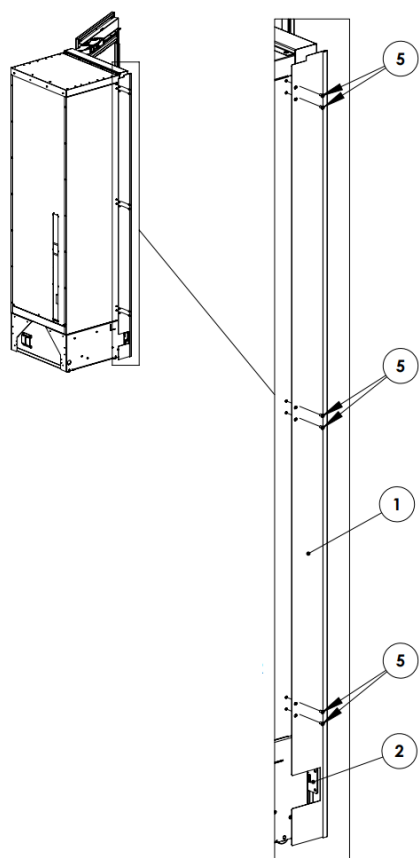


STEP #5: MOVE BOTH CABINETS DIRECTLY NEXT TO EACH OTHER SO THAT THE LEFT CABINET COMES IN CONTACT WITH THE CENTER TRIM.

STEP #6: SECURE BOTH CABINETS TOGETHER BY SECURING THE "ATTACHING BRACKET (1013719- 1)," PREVIOUSLY SECURED TO THE RIGHT CABINET, TO THE LEFT CABINET WITH (2) 1008781 SCREWS.

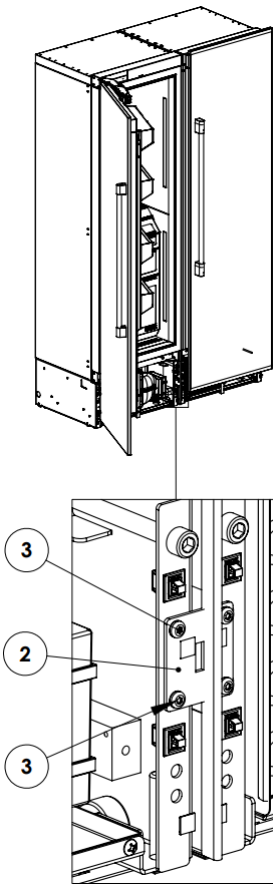


STEP #7: SECURE BOTH CABINETS TOGETHER AT THE TOP WITH (2) 1013719-1 AND (8) M50050-466
STEP #8: SECURE BOTH CABINETS TOGETHER AT THE BACK WITH (1) 1013719-1 AND (4) 1008781
STEP #9: ONCE ALL BRACKETS HAVE BEEN SECURED IN PLACE, ATTACH THE FRONT GRILLS BACK ONTO THE UNT.

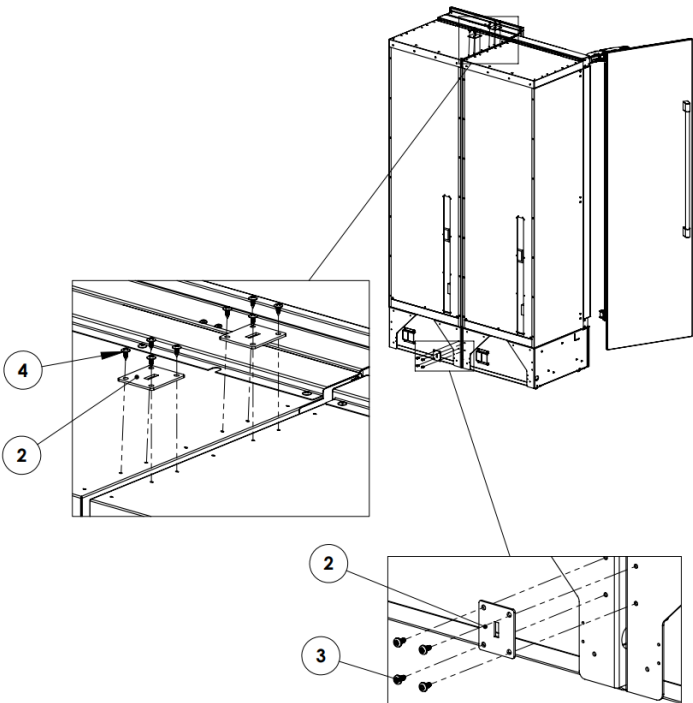

SCALE: 1:50
DR.: KDS
DATE: 5/26/2018
1017886
SHEET 2 OF 2



Documents / Resources

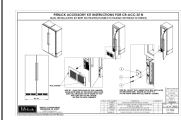

[Perlick CR-ACC-D1N Dual Installation Kit With No Heater](#) [pdf] Instructions
CR-ACC-D1N Dual Installation Kit With No Heater, CR-ACC-D1N, Dual Installation Kit With No Heater, Kit With No Heater, No Heater, Heater

Manuals+.