

PF Jones TDAC4 Crossbar Tow Trust Towbars Installation Guide

Contents

- [1 PF Jones TDAC4 Crossbar Tow Trust Towbars](#)
- [2 Specifications](#)
- [3 FAQs](#)
- [4 PARTS DESCRIPTION](#)
- [5 Product Usage Instructions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



PF Jones TDAC4 Crossbar Tow Trust Towbars

Specifications

- Product: Tow-Trust Towbars
- Model: TDAC4
- Compatibility: Dacia Sandero & Logan inc Stepway Models 2020>

FAQs

Q: What are the torque settings for this Towbar installation?

A: For Torque settings, refer to the general notes provided overleaf in the manual.

Q: What should be observed regarding nose load limits and vehicle manufacturer's trailer/caravan weight limits?

A: Nose load limits and vehicle manufacturer's trailer/caravan weight limits must be observed for safe towing practices.

Q: Any recommendations for couplings?

A: We recommend the use of PRO-TOW Couplings with all our products for optimal performance and safety.

PARTS DESCRIPTION

TDAC4 Dacia Sandero & Logan Inc. Stepway Models 2020>					
Item	Qty	Description	Item	Qty	Description
A	1	TDAC4 Crossbar	F	2	M16 x 50 Bolts & Nyloc Nuts
B	2	Side Arms	G	2	M12 x 40 Bolts & Nyloc Nuts
C	4	Chassis Spacers	H	1	M12 x 120 Bolt (10.9) & Nyloc Nut
D1	1	Left Hand Internal Mounting Bracket	J	4	M6 x 20 Self Tapping Bolts
D2	1	Right Hand Internal Mounting Bracket	K	4	M6 x 15 Bolts & Nyloc Nuts
E	1	Extension	L	4	M12 x 45 Bolts & Nyloc Nuts
T1	1	30 O/D x 60 mm Long Tube	M	4	M12 x 45 Bolts & S/P Washers
			N	12	6 x 20 Flat Washers
			P	12	12 x 25 Flat Washers
			Q	4	12 x 30 Flat Washers

Product Usage Instructions


Bumper Removal

1. Remove the rear light clusters one fixing each side.
2. Remove the two fixings in the wheel arch from each side, then remove the four fixings along the bumper's lower edge.
3. Pull bumper out sideways then rearwards to remove, unplugging any wiring looms to separate the bumper.
4. Drill out the rivets securing the internal plastic bumper reinforcement to the impact beam (Retain as this will be reinstalled later) then remove them impact beam, and four fixings, (This is not reused with the Towbar assembly), then refit the fixings back into the panel.
5. Remove the tape covering the two mounting points in the chassis from each side.

Towbar Installation

1. Loosely attach items B to the chassis using items M and items Q with items C.
2. Loosely attach item A to item B using item L with item P.
3. Loosely attach items D1 and D2 to item A using items J and items N.
4. Fully tighten all the fixings ensuring the Towbar is rigid, square, and secure.
5. Loosely attach the internal plastic bumper reinforcement to items D1 and D2 using items K and items N as shown in Figure 1 and mount as far to the nearside as possible and fully tighten the fixings.
6. Cut the bumper in the lower face where the pre-marked area is using Figure 2 as a guide then remount onto the vehicle.
7. Loosely attach item E to item A using items G with items P and item H with items P ensuring item T1 is fitted in-between the lower mounting point.
8. Using item F secure your desired ball bracket and wiring plate (Not supplied in this kit) to item E.


9. Fully tighten all the fixings ensuring the Towbar is rigid, square, and secure.

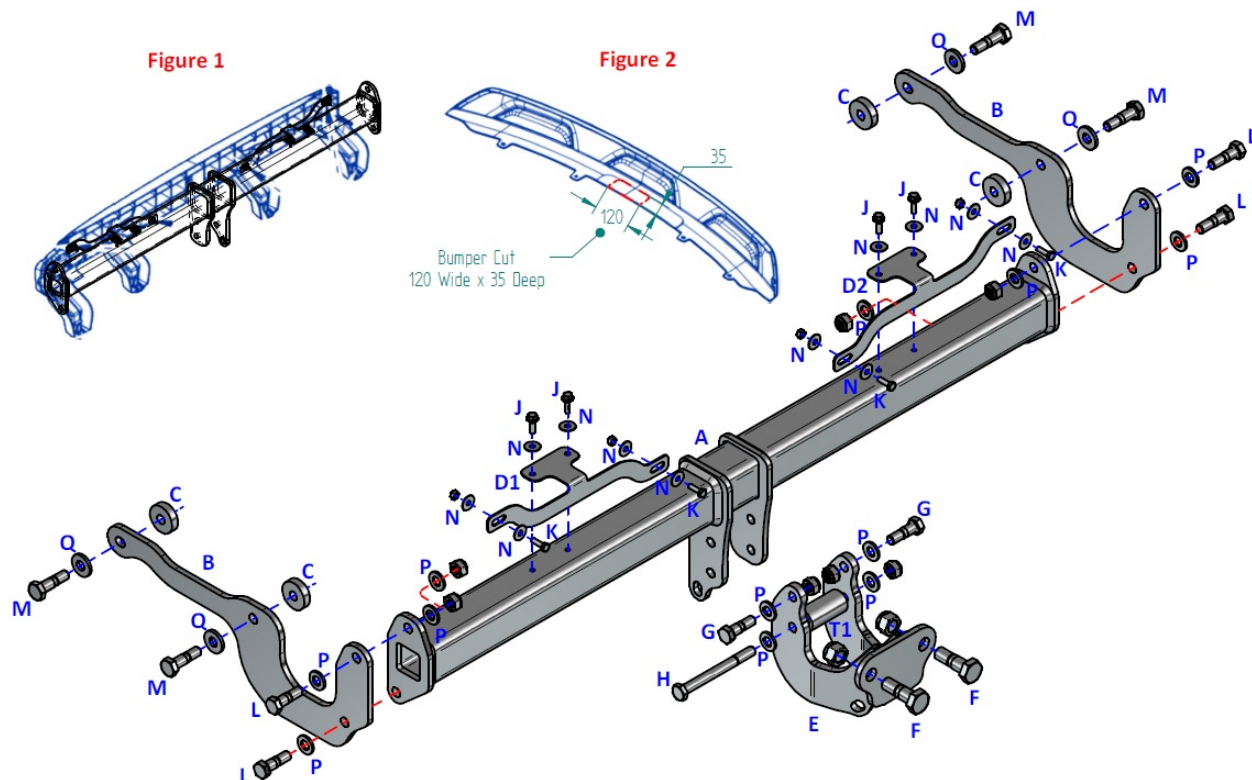

Notes:

1. For Torque settings see general notes overleaf.
2. Nose load limits and vehicle manufacturer's trailer/caravan weight limits must be observed.
3. We recommend the use of PRO-TOW Couplings with all our products.

Documents / Resources

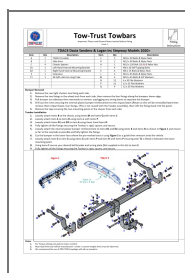

[PF Jones TDAC4 Crossbar Tow Trust Towbars \[pdf\] Installation Guide](#)

TDAC4 Crossbar Tow Trust Towbars, TDAC4, Crossbar Tow Trust Towbars, Tow Trust Towbars, Trust Towbars, Towbars

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.