



POLARIS TIF01 2020 Toyota 79 Series Reverse Camera Integration Instructions


[Home](#) » [Polaris](#) » POLARIS TIF01 2020 Toyota 79 Series Reverse Camera Integration Instructions 



Contents

- [1 TIF01 2020 Toyota 79 Series Reverse Camera Integration](#)
- [2 Documents / Resources](#)

TIF01 2020 Toyota 79 Series Reverse Camera Integration

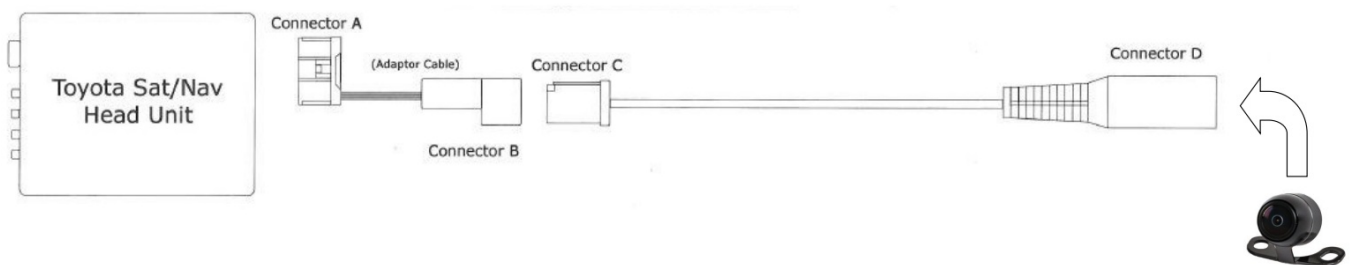

1. Plug connector A directly into the back of the head unit
2. Plug connector B & C together
3. Plug Polaris miniature camera into connector D
4. Locate the 28 pin plug in the head unit (See Figure A)

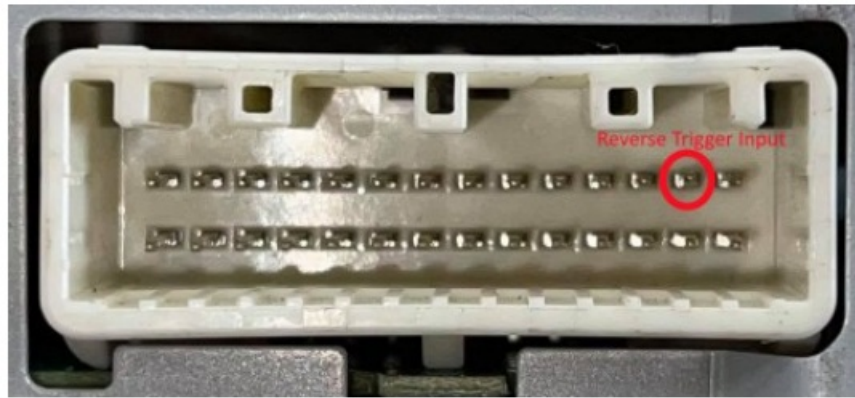



Figure A

5. There is a GREEN wire from this pin that runs to a coil of black tubing. You should see a clip on the end of the GREEN wiring and this is needs to run to your reverse power.
6. Attach the clip to your reverse power which is a RED wire with BLACK stripe located in the DRIVERS SIDE KICK PANEL OR THE STEP PANEL
7. Put vehicle in reverse to test.

Note: If you do not have the camera plugged in when testing then nothing will happen on the screen



Documents / Resources

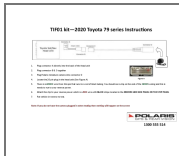

[POLARIS TIF01 2020 Toyota 79 Series Reverse Camera Integration](#) [pdf] Instructions
TIF01, TIF01 2020 Toyota 79 Series Reverse Camera Integration, 2020 Toyota 79 Series Reverse Camera Integration, Reverse Camera Integration, Camera Integration, Integration