



PG-LF Custom Dynamics ProGLOW Lower Fairing Inserts Instruction Manual

[Home](#) » [ProGLOW](#) » PG-LF Custom Dynamics ProGLOW Lower Fairing Inserts Instruction Manual 

Contents

- [1 PG-LF Custom Dynamics ProGLOW Lower Fairing Inserts](#)
- [2 Package Contents](#)
- [3 Installation](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



PG-LF Custom Dynamics ProGLOW Lower Fairing Inserts



We thank you for purchasing the Custom Dynamics® ProGLOW™ Lower Fairing Inserts. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during the installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: PG-LF

Package Contents

- ProGLOW™ Lower Fairing Inserts (pair)
- 6" Black Wire Tie Wrap (12)
- 7" Y Harness (1)

Batwing Fitment: 2014-2019 Harley-Davidson® Ultra Classic (FLHTCU), 2015-2016 Ultra Classic Low (FLHTCUL), 2014-2022 Ultra Limited (FLHTK), 2015-2019 Ultra Limited Low (FLHTKL), 2014-2021 CVO™ Ultra Limited (FLHTKSE), 2015-2019 Street Glide CVO™ (FLHXSE), 2014-2022 Tri Glide Ultra and 2020-2022 Tri Glide CVO™ (FLHTCUTGSE).

Road Glide Fitment: 2016-2019 Road Glide Ultra (FLTRU), 2020-2022 Road Glide Limited (FLTRK), 2015-2016 CVO™ Road Glide Ultra (FLTRUSE), 2022 Road Glide Limited CVO™ (FLTRKSE),

Replaces OEM 57100151 (Left) & 57100152 (Right)


Note: Requires ProGLOW™ Bluetooth Controller (sold separately) and ProGLOW™ App download for control of color-changing LEDs.

ATTENTION

- Please read all information below before Installation
- **Warning:** Disconnect the negative battery cable from the battery; refer to the owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure the negative battery cable away from the positive side of the battery and all other positive voltage sources on the vehicle.
- **Safety First:** Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure the vehicle is on a level surface, secure and cool.
- **Important:** This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

Installation

1. Remove the grills from the Lower Fairings with a flat nonmarking tool.
2. Disconnect the large ProGLOW™ connector end from the Lower Fairing Light harness as shown in Photo 1.

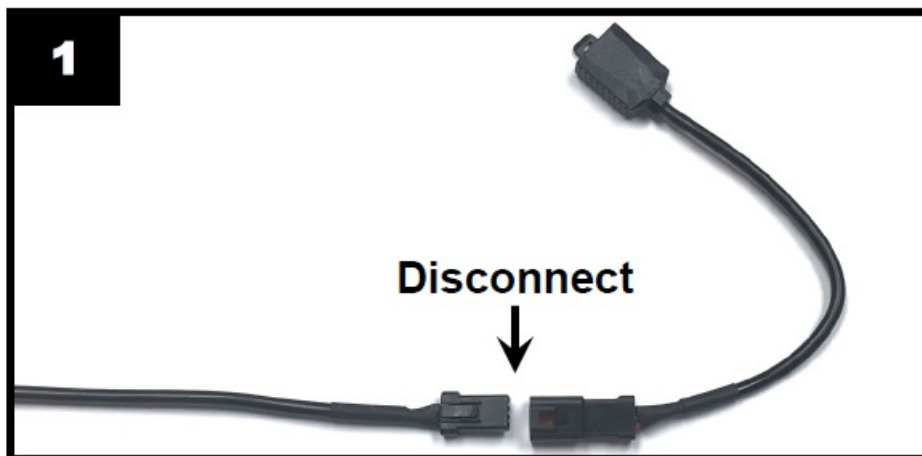


3. With the large connector end removed from the Lower Fairing wiring harness, route the Lower Fairing wiring harness through the front side of the Lower Fairing as shown in Photo 2.



4. Gently pull back on the inside of the rear Lower Fairing cover and pull the Lower Fairing wiring harness through the lower Fairing. Refer to Photos 3 and 4.



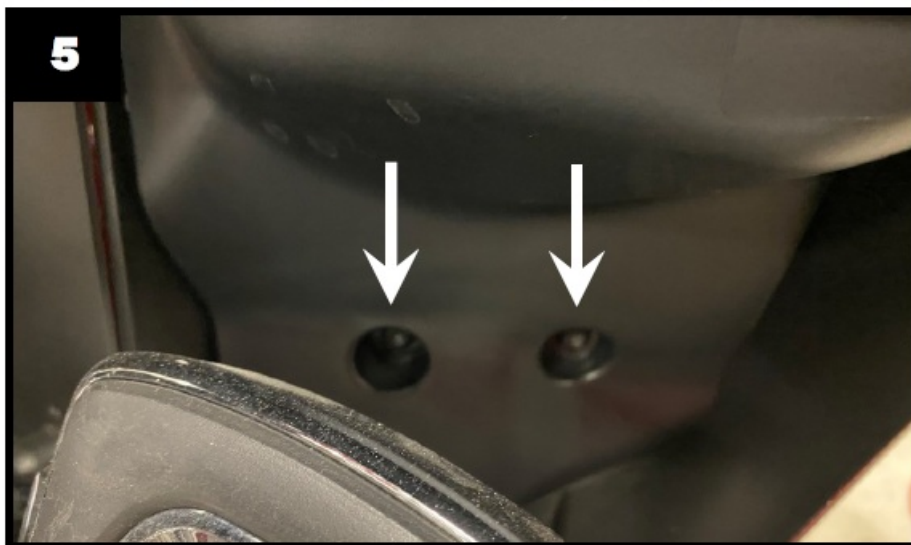

5. If necessary, the 2 cover mounting screws can be removed from the back of the Lower Fairing to allow easier access. Refer to Photo 5.
6. Route the wiring harness of the lower fairing light back to the ProGLOW® Bluetooth Controller. Route wires such that they do not interfere with the normal operation of the bike.
7. Once the wiring has been completed, secure any remaining wires with tie wraps.
8. Power the ProGLOW Bluetooth Controller (sold separately) OFF. Connect the lower fairing harnesses to the Y harness. Now connect the Y harness to Channel 1 of the Controller. Use caution when connecting the mating ProGLOW™ Wheel Light connector, confirm the mating connector is connected correctly or damage will occur to the lighting accessories. The locking tab should slide onto the lock and lock into position. Refer to Photo 6.



9. Power up the ProGLOW™ Bluetooth Controller and test the lower fairing light for proper operation.

Questions?

Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 8:30AM-5:30PM EST

Documents / Resources



[ProGLOW PG-LF Custom Dynamics ProGLOW Lower Fairing Inserts](#) [pdf] Instruction Manual

PG-LF Custom Dynamics ProGLOW Lower Fairing Inserts, PG-LF, Custom Dynamics ProGLOW Lower Fairing Inserts, Dynamics ProGLOW Lower Fairing Inserts, ProGLOW Lower Fairing Inserts, Lower Fairing Inserts, Fairing Inserts, Inserts