



## PROGRESS LIGHTING P8771-30 Mixed Material Linear Inline Connector Instruction Manual

[Home](#) » [PROGRESS LIGHTING](#) » PROGRESS LIGHTING P8771-30 Mixed Material Linear Inline Connector Instruction Manual 


PROGRESS LIGHTING P8771-30 Mixed Material Linear Inline Connector Instruction Manual



### Contents

- [1 Assembly Installations Instructions](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

## Assembly Installations Instructions

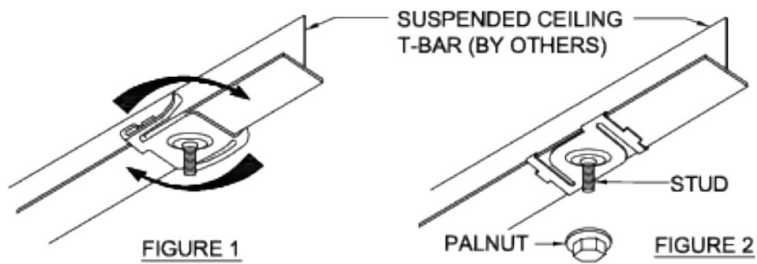

1. Slip CLIP with STUD over T-BAR at desired location. (SEE FIGURE 1)
2. Rotate CLIP 90° CLOCKWISE until it snaps onto T-BAR. (SEE FIGURE 1)
3. PALNUT (on STUD) can now be used to mount TRACK to T-BAR.

## Documents / Resources



[PROGRESS LIGHTING P8771-30 Mixed Material Linear Inline Connector](#) [pdf] Instruction Manual

P8771-30, Mixed Material Linear Inline Connector, Linear Inline Connector, Mixed Material Inline Connector, Inline Connector, Connector