

ProOne Under Counter Inline Conversion Kit Instruction Manual

Home » ProOne » ProOne Under Counter Inline Conversion Kit Instruction Manual





Counter Inline Conversion Kit Instruction Manual

Under Counter Inline Conversion Kit

This kit is used specifically for converting a single-stage countertop unit to an under-counter unit that runs in line with the existing cold water line.


Contents

- 1 Contents
- 2 Installing Your Kit
- 3 Documents /

Resources

4 Related Posts


Contents

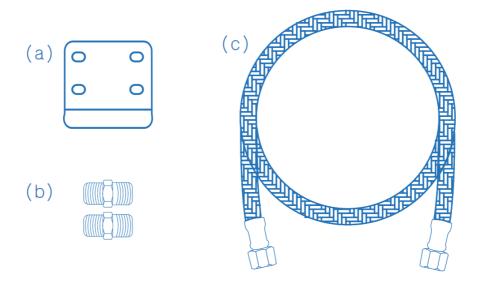

Your kit includes the following:

- (a) bracket w/4 screws
- (b) brass fittings (2)
- (c) stainless steel 30" flex hose with 3/8" female ends

Installing Your Kit

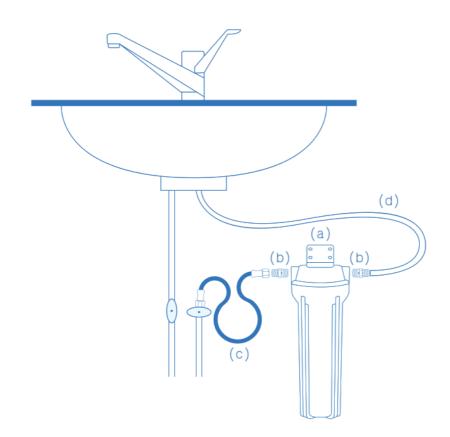

- 1. Uninstall the countertop unit from the faucet.
- 2. Remove the base from the countertop unit.
- 3. Install bracket(a) in place of countertop base.
- 4. Remove spout and existing inlet fitting.
- 5. Install new lead-free brass fittings(b) using Teflon tape (about 2 wraps per fitting)
- 6. Turn off cold water supply under the sink.
- 7. Remove the existing line from shutoff valve.

- 8. Install flex hose(c)
- 9. Reconnect line (d) *Periodically check the installation for any leaks.



1(800)544-3533 or email

support@prooneusa.com

Documents / Resources



ProOne Under Counter Inline Conversion Kit [pdf] Instruction Manual

Under Counter Inline Conversion, Counter Inline Conversion Kit, Counter Inline Conversion, Inli ne Conversion

Manuals+,