



PUTCO ELS-1-24-23 Element Sky View Instruction Manual

[Home](#) » [PUTCO](#) » PUTCO ELS-1-24-23 Element Sky View Instruction Manual 

PUTCO ELS-1-24-23 Element Sky View Instruction Manual



Contents

- [1 INSTALLATION INSTRUCTIONS](#)
- [2 No Tools Needed!](#)
- [3 Installation Instructions:](#)
- [4 ROOF PANEL CARE INSTRUCTIONS](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

INSTALLATION INSTRUCTIONS

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-247-3974 Monday-Friday 8:00 a.m. – 5:00 p.m. (Central Standard Time) Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

No Tools Needed!

Description	Qty.
Element Sky View Panel	1
Foam Weather Seal	2
Velcro Strip	2

Installation Instructions:

1. Remove the front section of the factory hard top.



2. Remove the Velcro strip from the foam seal and attach to the vehicle above the door frame.




3. Attach the foam seal to the Velcro on the vehicle.




4. Place the Sky View roof panel on the vehicle



5. Turn the front wing latches then close the two front clamps.

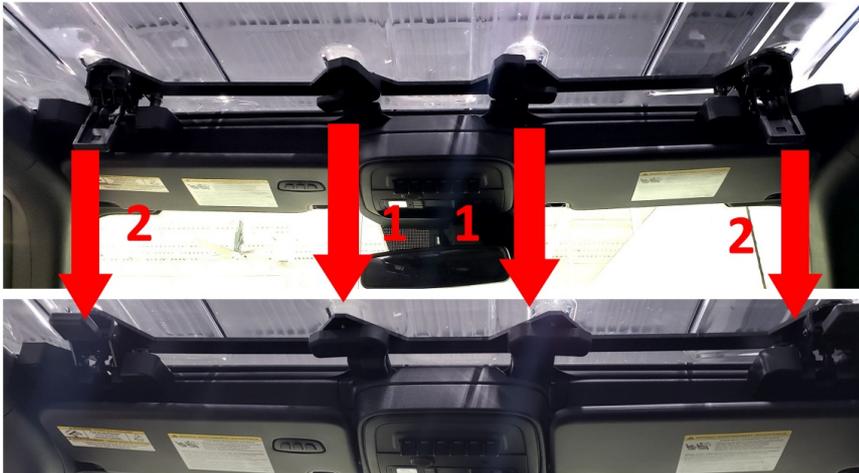

6. Turn the Rear wing clamps starting with the center two clamps

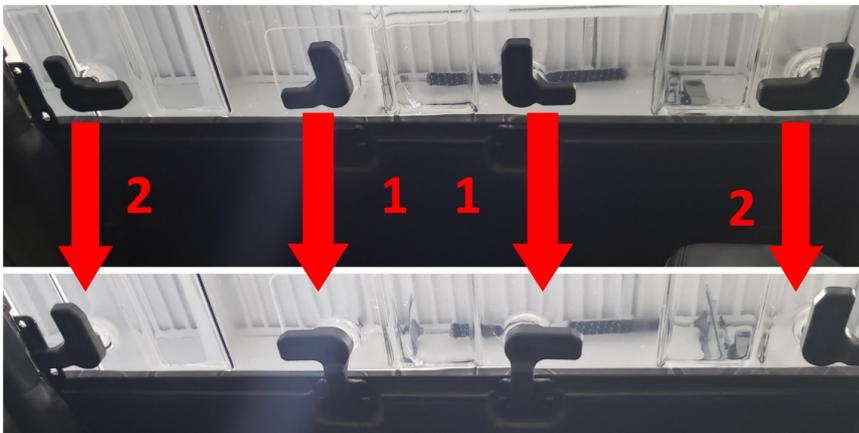

Your new Element Sky View is now successfully installed on your vehicle!

ROOF PANEL CARE INSTRUCTIONS

- Do NOT use chemicals or abrasives on the clear roof panel.
- Use only water and wipe GENTLY with a microfiber towel for cleaning. Applying too much pressure can scratch the Element Sky View roof panel.
- When taking the Element Sky View roof panel through a car wash, use only a TOUCHLESS car wash. The brushes in a regular car wash can scratch the Element Sky View roof panel.



PUTCO

Documents / Resources

	<p>PUTCO ELS-1-24-23 Element Sky View [pdf] Instruction Manual ELS-1-24-23, 581001I, ELS-1-24-23 Element Sky View, Element Sky View, Sky View</p>
--	---

[Manuals+](#)