


## Q-TRAN ANYBEND Q-CAP Flexible Fixtures Instructions

[Home](#) » [Q-TRAN](#) » Q-TRAN ANYBEND Q-CAP Flexible Fixtures Instructions 


Q-TRAN ANYBEND Q-CAP Flexible  
Fixtures Instructions

# INSTALLATION


Q-CAP Flexible Fixtures: ANYBEND




### VHB MOUNTING

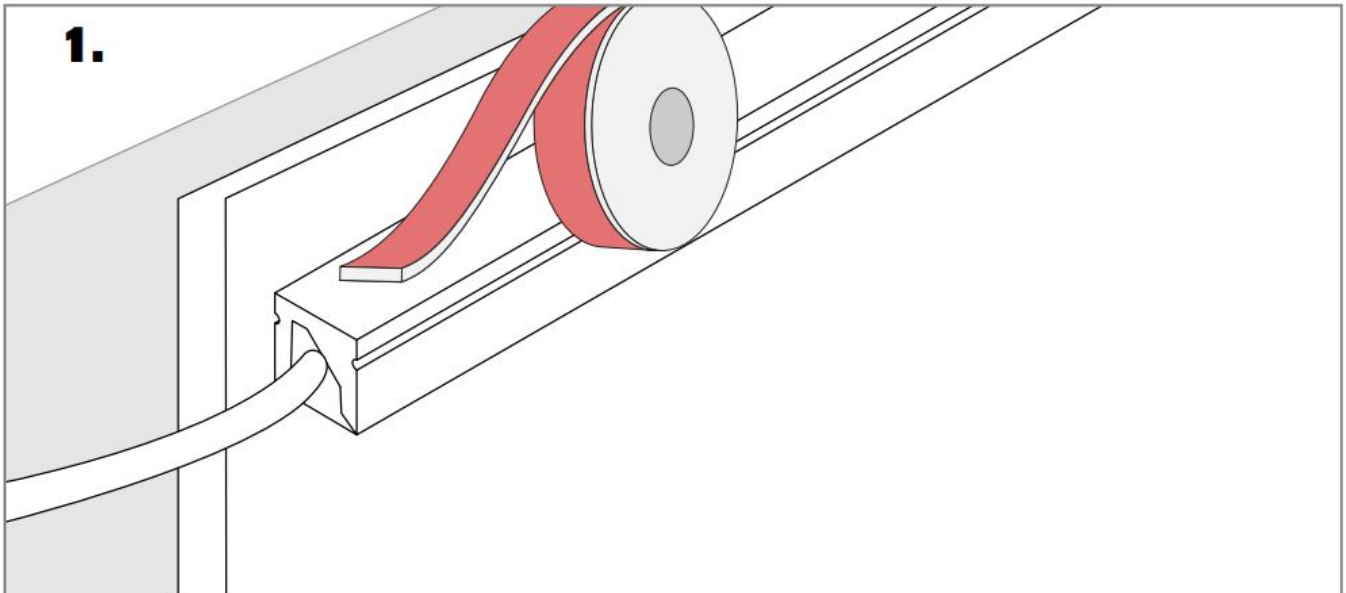

Remove the backing from the adhesive and apply firm pressure to the bonding surface.

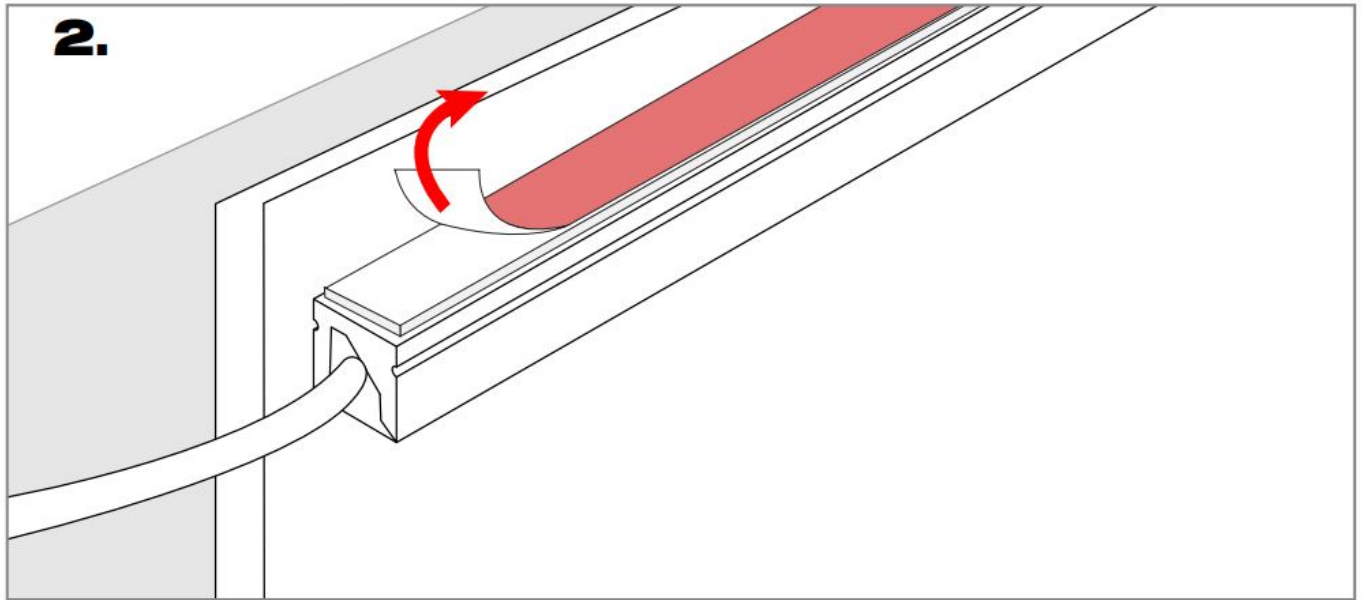

Peel off secondary backing.

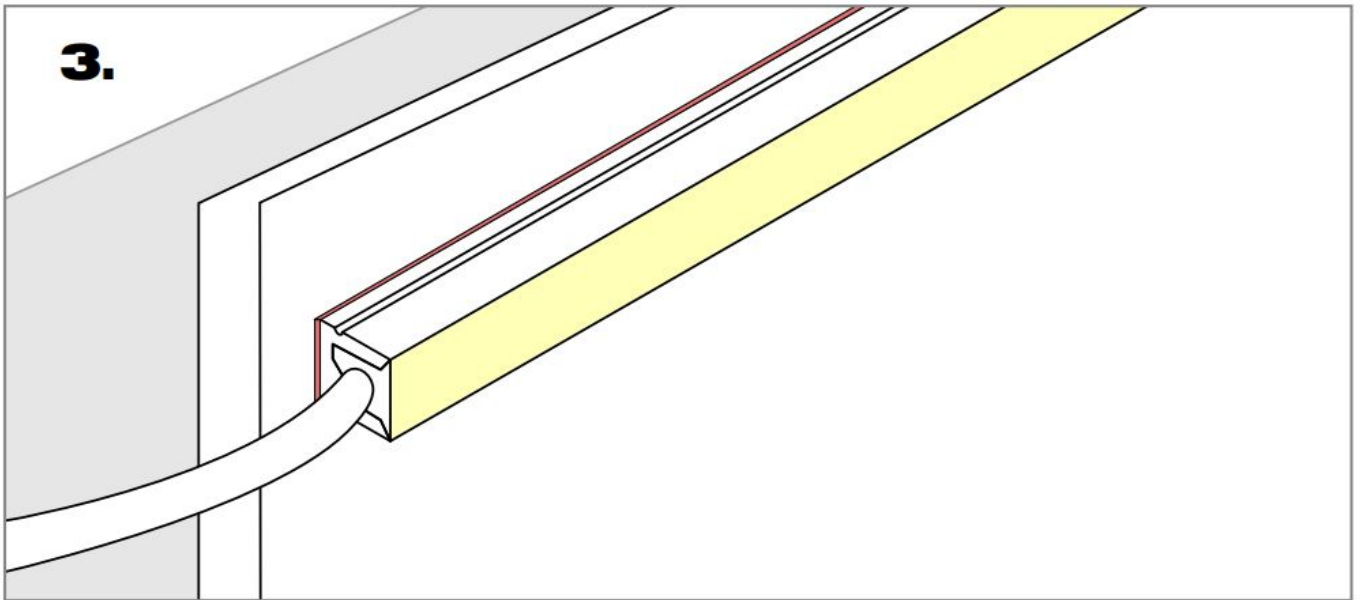



Adhere to mounting surface.

**WHITE SNUG CLIP**

## WSC-02


## INCLUDED HARDWARE

**NOTE:** White snug clip should be placed every 12"

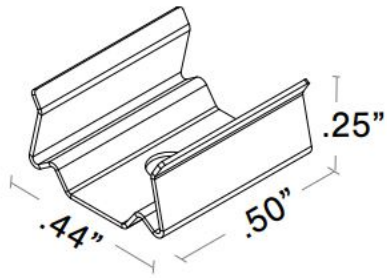


#4x5/8" Flat head screw

**1.**

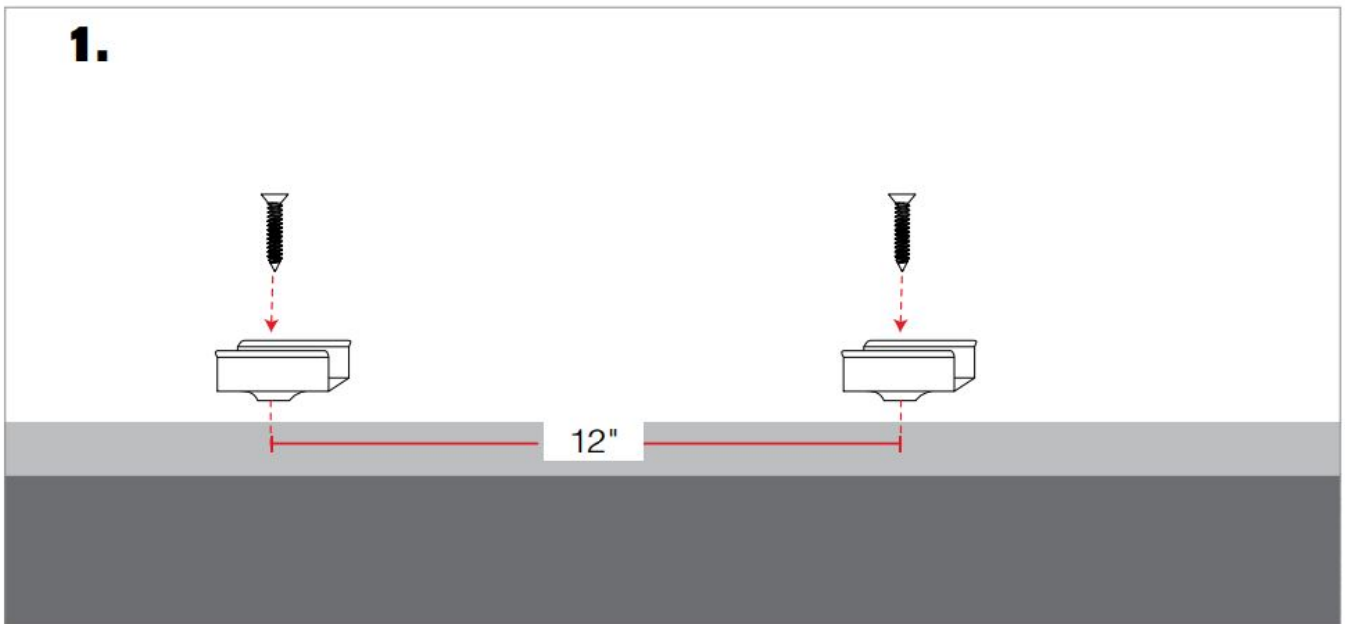


Mount white snug clip with provided flat head screw.

**2.**

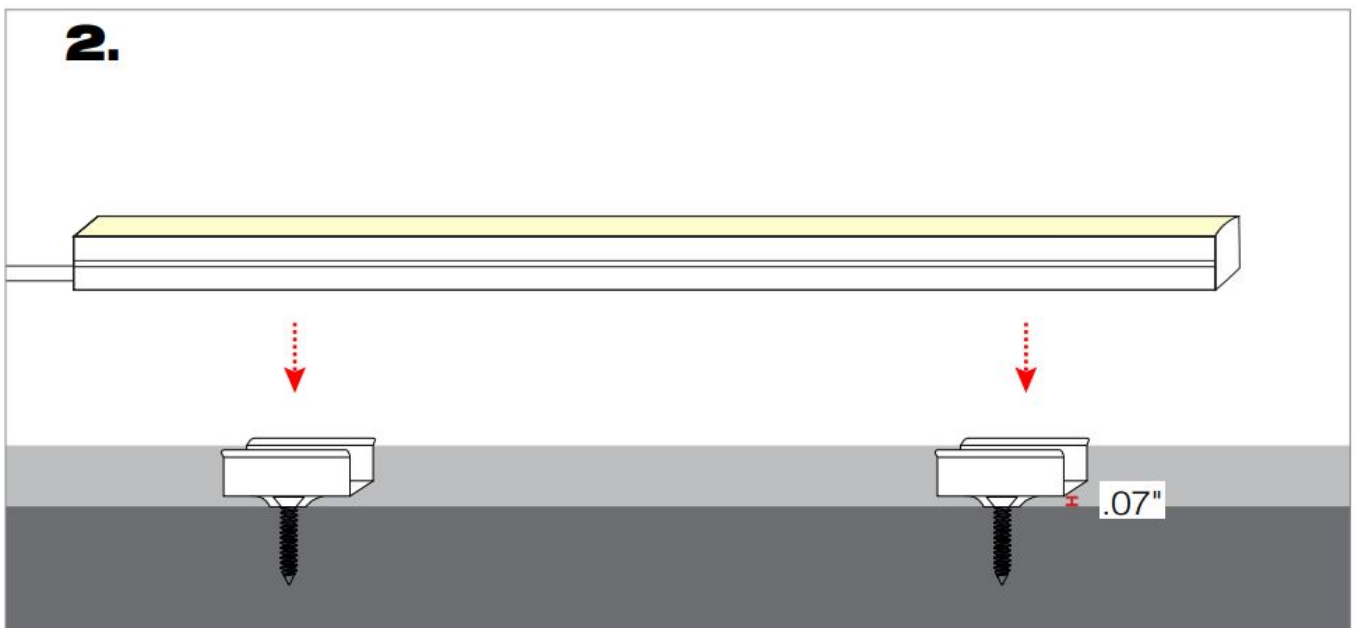

Align fixture to white snug clips matching distances.


**3.**

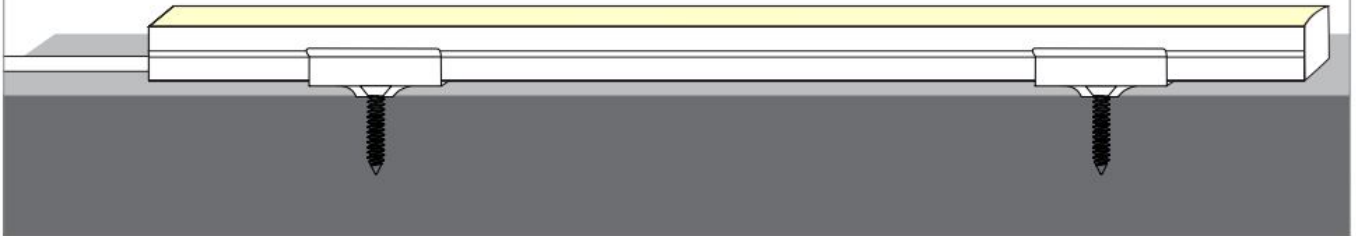


Press fixture into white snug clips.

**PVC MOUNT CLIP:** Connects two fixtures


### MICRO5-PPS-2

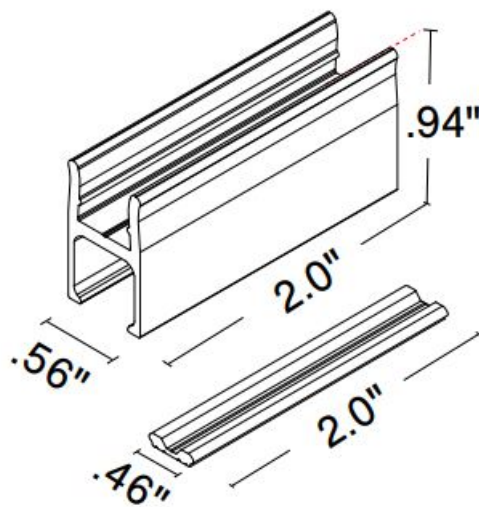


**Mounting Feed**

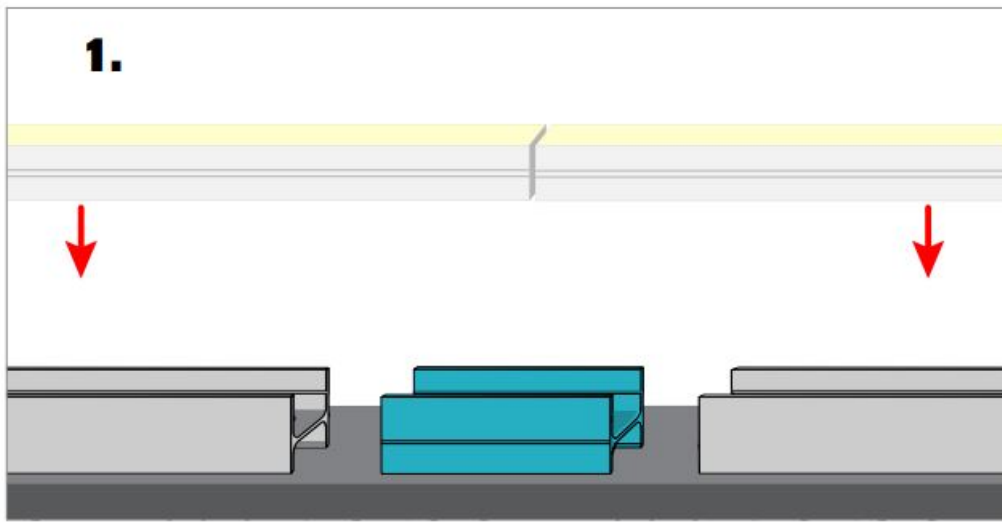

Snap in 2" channel

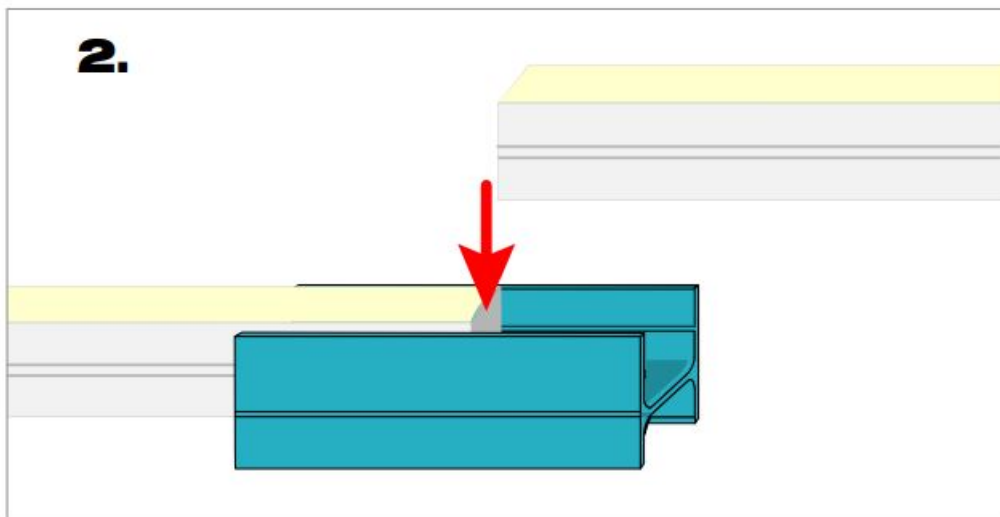


Press in fixtures

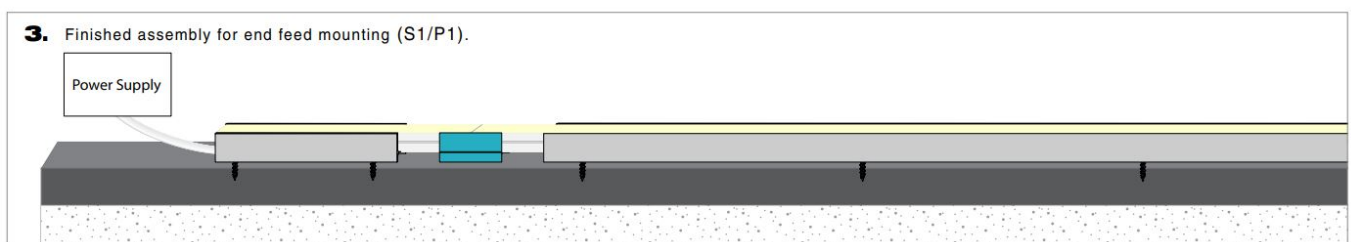


**LOW PROFILE PVC MOUNT CLIP:** Connects two fixtures


## MICRO5-PPS-LP-2

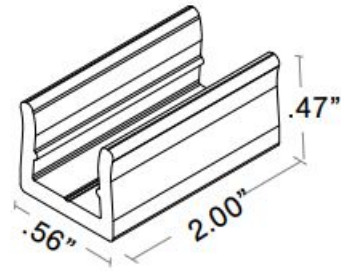


### Mounting Feed

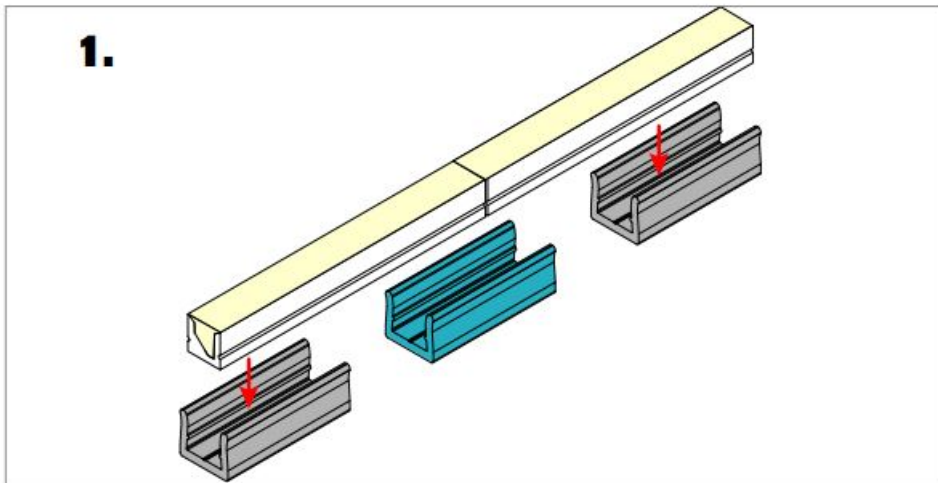

Snap in 2" channel

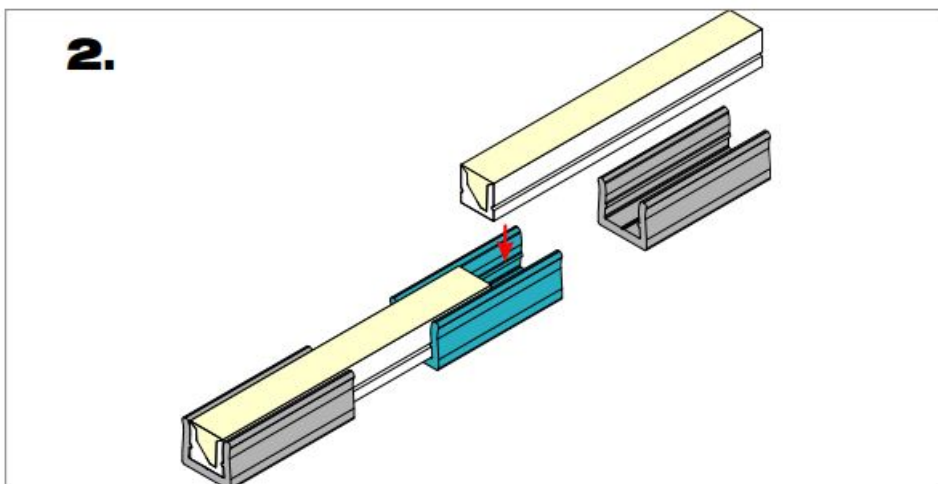


Press in fixtures

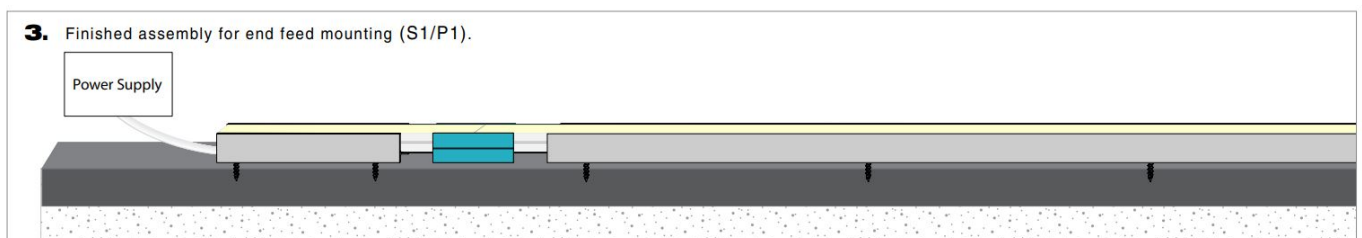


**PVC MOUNT CHANNEL:** Support for the fixture

## MICRO5-PPS-96 & MICRO5-PPS-FT


- 96" (PPS-96) or custom length (PPS-FT)

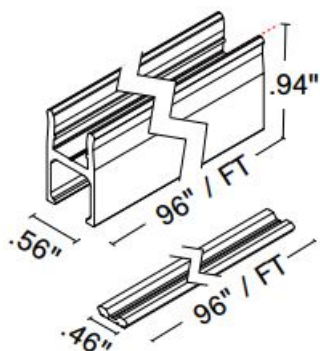

### INCLUDED HARDWARE

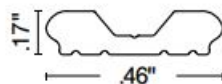


PPS - BRACKET:  
Sold in full length of 96"  
or custom length (FT)

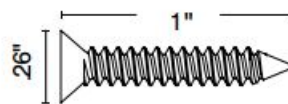


#6 Flat head screw

### Built in wireway:


The PPS-BRACKET allows you to create a wire way under the PPS channel without any screws interfering

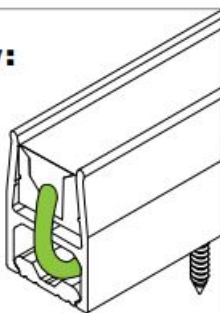


### Millwork install

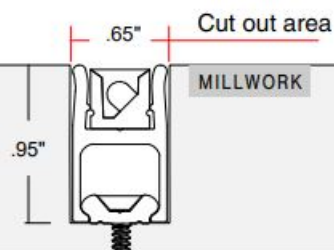

**1.**

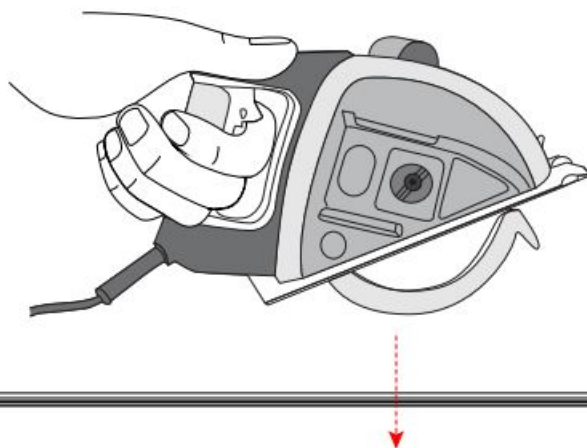


The PPS-BRACKET can be field cuttable and cut to whatever length your application requires. The PPS-BRACKET can be installed as a full length of 96", multiple smaller pieces, or end to end.

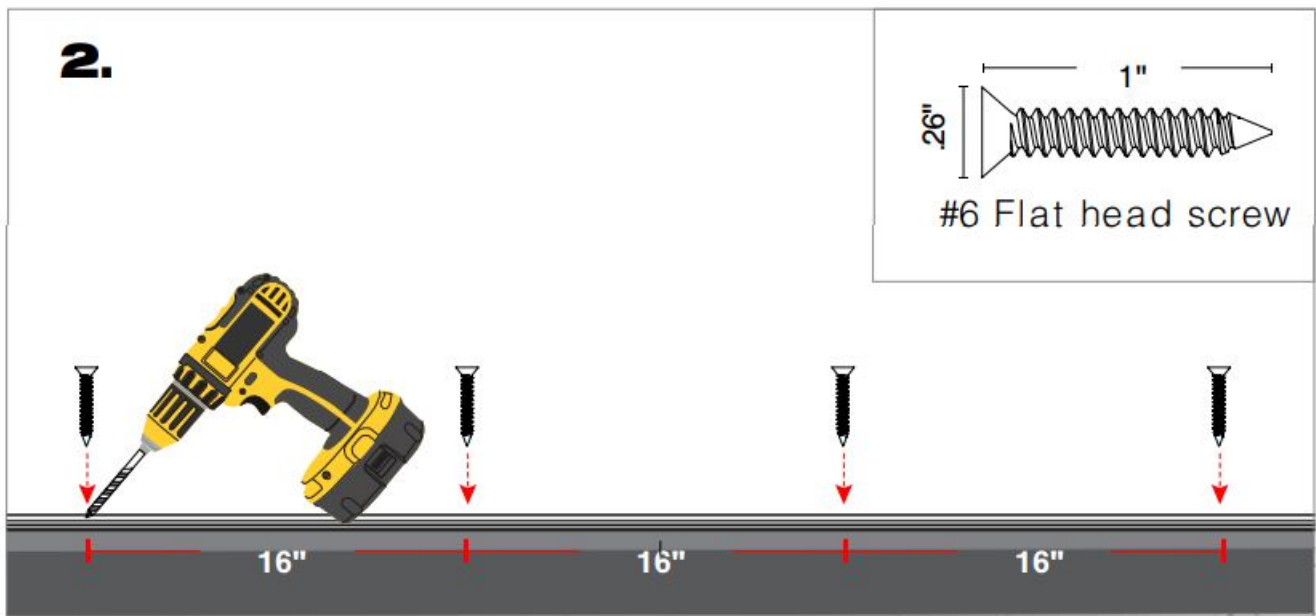

Using pre-drilled pilot holes screw the #6 flat head screws to mount the PPS-BRACKET (1 screw every 16").

**NOTE :** For drywall applications mount directly into a stud.

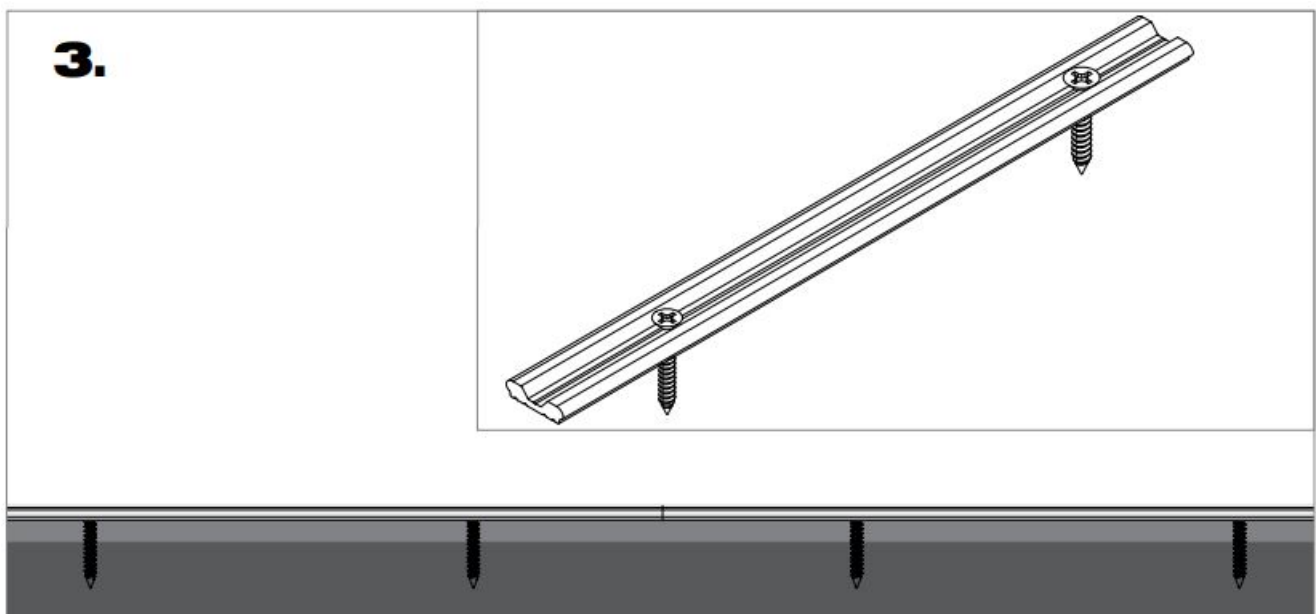


Using pre-drilled pilot holes, use the #6 flat head screws to mount the PPS-BRACKET.









## MICRO5-PPS-LP-96 & MICRO5-PPS-LP-FT


- 96" (PPS-96) or custom length (PPS-FT)

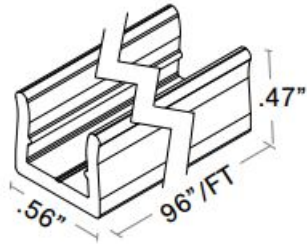


### INCLUDED HARDWARE

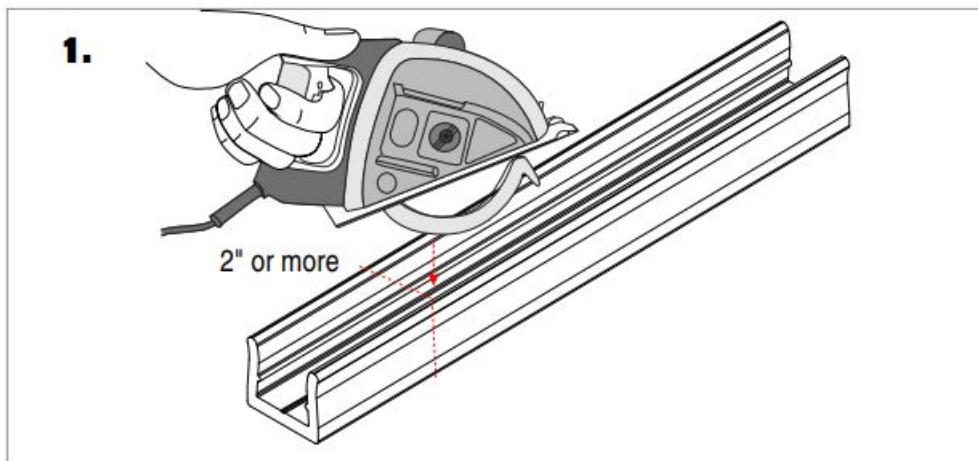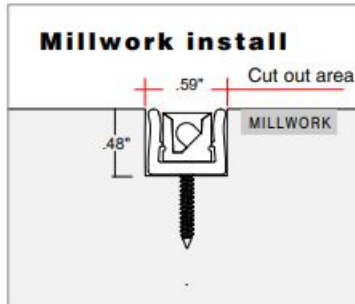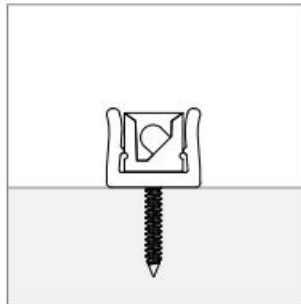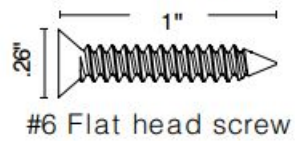

The PPS-LP-96 or PPS-LP-FT can be field cuttable and cut to whatever length your application requires. The PPS-96 or PPS-FT can be installed as a full length of 96", multiple smaller pieces, or end to end for longer seamless runs.

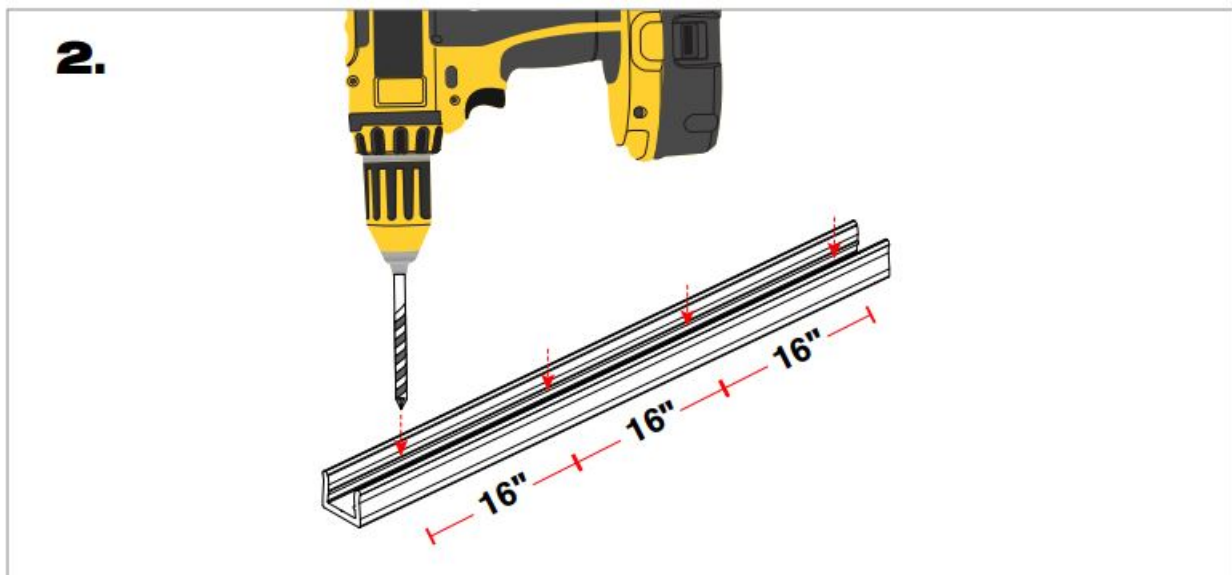


Drill holes (1 hole/screw every 16") into the PPS-LP.

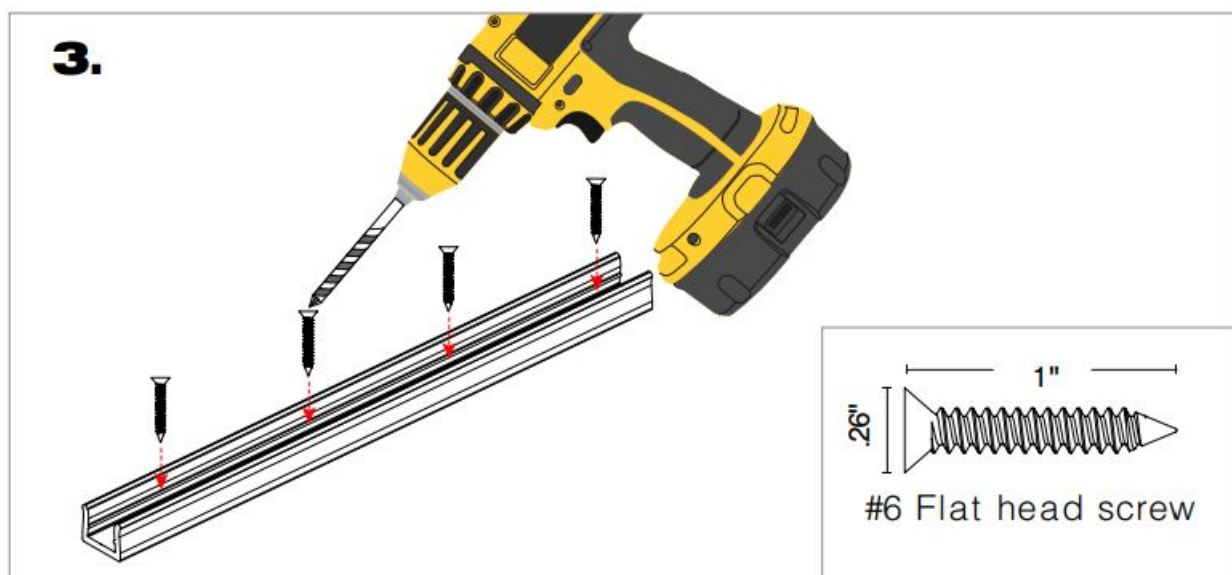

Using pre-drilled holes, use the #6 flat head screws to mount the PPS-LP.

**NOTE :** For drywall applications mount directly into a stud.

**4.**

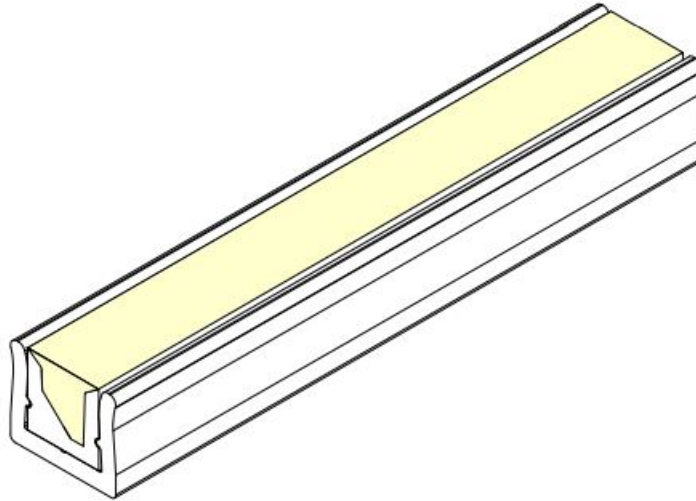

Snap fixture into PPS-LP.

© 2021 Q-Tran Inc. All rights reserved | 155 Hill St. Milford, CT 06460 | 203-367-8777 | [sales@q-tran.com](mailto:sales@q-tran.com) | [www.q-tran.com](http://www.q-tran.com) Specification subject to change. Rev-08-10-21


## Contents

### [1 Documents / Resources](#)

#### [1.1 References](#)

#### [2 Related Posts](#)

## Documents / Resources

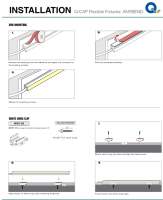	<p><a href="#">Q-TRAN ANYBEND Q-CAP Flexible Fixtures</a> [pdf] Instructions ANYBEND Q-CAP Flexible Fixtures, ANYBEND, Q-CAP Flexible Fixtures, Flexible Fixtures, Fixtures</p>
---	---

## References

- [RealNames | A more meaningful email address](#)

- [Q-LED Lighting Systems, Linear LED Lights, LED transformers | Q-Tran](#)

Manuals+