

**QuickBOLT**  
**17667DF 3 Inch**  
**Low Profile**  
**Microflashing**



## QuickBOLT 17667DF 3 Inch Low Profile Microflashing Installation Guide

[Home](#) » [QuickBOLT](#) » QuickBOLT 17667DF 3 Inch Low Profile Microflashing Installation Guide 

### Contents

- [1 QuickBOLT 17667DF 3 Inch Low Profile Microflashing](#)
- [2 Production Information](#)
- [3 Specifications](#)
- [4 FAQ](#)
- [5 RECOMMENDED MATERIALS](#)
- [6 INSTALLATION INSTRUCTIONS](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)



**QuickBOLT 17667DF 3 Inch Low Profile Microflashing**



## Production Information

- Locate the rafter and predrill the hole.
- Place a ring of sealant around the bottom of the flashing.
- Position the flashing over the hole.
- Secure the flashing with screws.
- Install the solar panel mount.
- Ensure all components are securely fastened.

## Specifications

<b>Product</b>	17667DF
<b>Application</b>	Asphalt, EPDM, & TPO Roofs
<b>Patent Number</b>	8448407

## FAQ

- **What is the purpose of the Microflashing®?**
  - The Microflashing® provides a watertight seal to protect the roof from leaks.
- **Can this product be used on other types of roofs?**
  - This product is specifically designed for Asphalt, EPDM, and TPO roofs.
- **Is professional installation recommended?**
  - While the product can be installed by a skilled DIYer, professional installation is recommended for optimal

results.

## QuickBOLT

- A Division of Quickscrews International Corp
- Low Profile QB1 with 3" Microflashing® & Miniflashing® for Asphalt, EPDM, & TPO Roofs
- Patent # 8448407

## RECOMMENDED MATERIALS

- Rafter locator
- Chalk or a crayon
- Drill with a 3/16" drill bit
- M6 deep socket hex driver
- Tool for separating shingles
- 1/2" wrench
- NO SEALANT REQUIRED

## INSTALLATION INSTRUCTIONS

After locating the rafter and predrilling the hole

1. Place a ring of sealant around the bottom of the Microflashing® washer



2. Place the Microflashing® over the predrilled hole



3. Drive the bolt until it compresses the Microflashing®




4. Place the L-Foot and Nut



5. Insert the Miniflashing® under the shingles



6. Tighten the Nut to secure the Miniflashing®

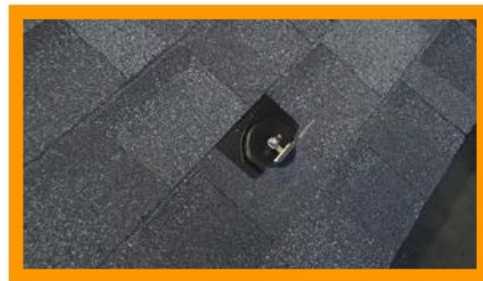

LOW PROFILE QB1 WITH 3" MICROFLASHING® & MINIFLASHING® FOR ASPHALT, EPDM, & TPO ROOFS  
PATENT # 8448407

## Documents / Resources



[QuickBOLT 17667DF 3 Inch Low Profile Microflashing](#) [pdf] Installation Guide  
17667DF, 17667DF 3 Inch Low Profile Microflashing, 3 Inch Low Profile Microflashing, Low Profile Microflashing, Profile Microflashing, Microflashing

## References

- [User Manual](#)

### Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.