

Raingler
NETS & GRIPS
Raingler 2017 Behind
Front Seats Barrier
Divider Net



Raingler 2017 Behind Front Seats Barrier Divider Net User Guide

[Home](#) » [Raingler](#) » Raingler 2017 Behind Front Seats Barrier Divider Net User Guide 

Contents

- [1 Raingler 2017 Behind Front Seats Barrier Divider Net](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Raingler
NETS & GRIPS

Raingler 2017 Behind Front Seats Barrier Divider Net



Product Information

Specifications

- Time: 1-2 hours
- Paw Level: Intermediate
- Tools Required (may vary by vehicle):
 1. Panel removal tools
 2. Ratchet Wrench or Air Wrench
 3. 10mm & 14mm Socket
 4. Panel Clip Pliers & Door Panel Remover OR Rubber Mallet
 5. Shop Towel
 6. Two Zip Ties or string
- Suggested Parts: (2) Honda 91561-TA0-A11 clips. Also available on the website.

Product Usage Instructions

1. Step 1: Prepare for Access

Open side doors and slide and tilt front seats forward for best access from the rear of the cab.
Slide upper front seat belt adjuster down and use a plastic trim panel removal tool to pop away the trim.
Release the side catch at the lower edge of the adjusting buttons.
2. Step 2: Remove Trim and Bolts

Gently pull lower trim edge away from B pillar and towards the center of the cab to release.
Remove the exposed 14mm bolt securing the upper seat belt adjuster.
3. Step 3: Remove B Pillar Cover

Lift up lower edge of upper B pillar cover to free the side tabs.
Use appropriate tools to remove the upper retaining clip.
4. Step 4: Install Hardware Piece

Remove the 10mm bolt near the headliner at the top of the B pillar.

Slide the C100G hardware piece supplied with your net onto this bolt.

5. Step 5: Finalize Installation

Reinstall side weatherstripping and bolt the seat adjuster back on.

Ensure there is no restriction with the seat belt webbing and reinstall the adjuster cover.

FAQ

Q: Can I use different clips than the suggested Honda 91561-TA0-A11 clips?

A: It is recommended to use the suggested clips for optimal fit and performance. Using different clips may affect the installation process and security of the net.

2017 – Newer Honda Ridgeline Behind Front Seat Barrier Net Installation

NOTE: Before beginning installation, please look at the installation documents below and make sure that you have the necessary hardware (if any) tools and patience to perform the job. While these are designed as a DIY product some basic automotive and tool experience is helpful. We are here to assist you if you do run into questions too. Please reach out via email or text us! Please know that while we supply helpful tips and suggested process, it is up to the installer to make final determination as to installation and the end user regarding use of the product. Vehicles can and are sometimes different than the examples provided so proceed with attention to detail and patience. Now to the fun part, installing your new Raingler Net!

IMPORTANT: READ INSTRUCTIONS FULLY BEFORE STARTING

Time: 1-2 hours



Tools

(may vary by vehicle)

1. Panel removal tools
2. Ratchet Wrench or Air Wrench
3. 10mm & 14mm Socket
4. Panel Clip Pliers & Door Panel Remover OR Rubber Mallet
5. Shop Towel
6. Two Zip Ties or string



Suggested Parts: (2) Honda 91561-TA0-A11 clips. Also available [HERE](#)

1. Step 1

Open side doors and slide and tilt front seats forward for best access from rear of cab. Slide upper front seat

belt adjuster down and using plastic trim panel removal tool, insert at top to fit under edge and carefully pop away from inside edge:

- We find it's easier to use a second to release the side catch at the lower edge of the adjusting buttons:
- Press the side buttons in while lifting catches off top and one side at a time:
- It takes a bit of patience but go slow. The second one will be easy once you've got the technique down.



- Remove the exposed 14mm bolt securing the upper seat belt adjuster:



2. Step 2

At edge by weatherstripping, grasp and gently pull lower trim edge away from B pillar and towards center of cab to release:




3. Step 3

Lift up lower edge of upper B pillar cover to gently pull back the side weatherstripping to free the side tabs:
It is somewhat difficult to remove the green upper retaining clip. You can see it with a flashlight – look up a few inches from the top of the panel.






The service manual says that this clip should be considered a “one use” clip and to use a rubber mallet and a towel to tap it in, breaking off the profusion tabs.

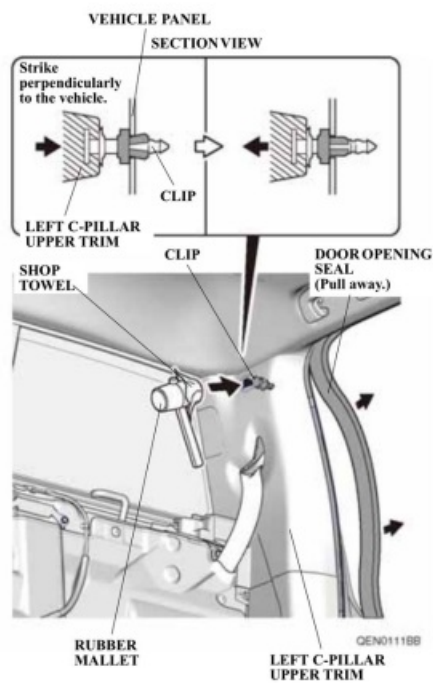

- *These are available at time of net purchase or from our website at the above Suggested Parts link. We were able to remove the clips without damage by using the Panel Clip Pliers and a Door Panel Removal Tool.

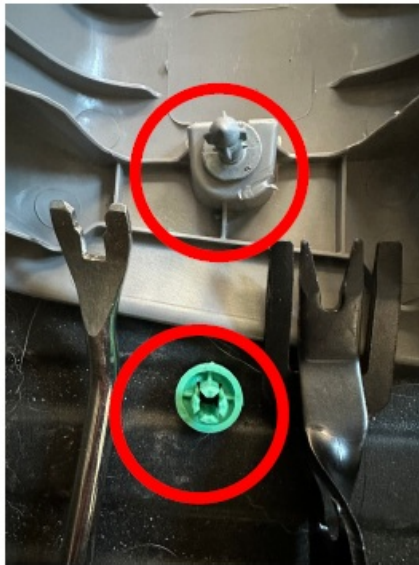

- Slide the two tools in at slightly offset angles in this position.



- Gently wiggle and pry towards inside of cabin. The whole clip assembly and cover can remove together:




- Slide the whole clip assembly down and out of the upper panel cover.

4. Step 4

Remove the 10mm bolt near the headliner at the top of the B pillar.



- Slide the C100G hardware piece supplied with your net onto this bolt. Reinstall and finger tighten to start the threads and then twist the tether and D ring oriented to the top:

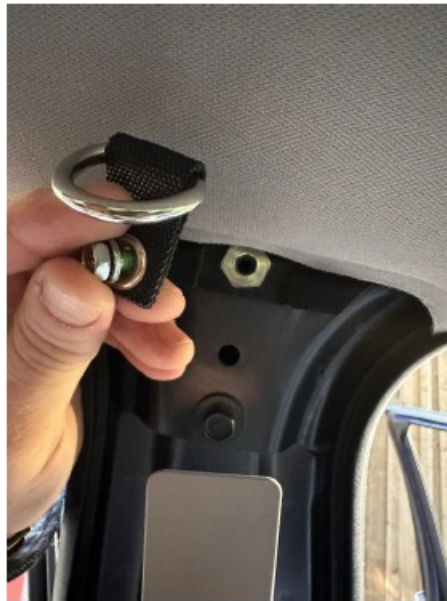

- We suggest a large zip tie or string to make sure the D ring won't fall back into the panel during reassembly:



- Remove the clip from the previous step by sliding down and off of the trim cover. You can then lift the side tabs of the green piece from the metal insert and reinstall the green receptor back into the B pillar opening hole:



- Put the metal part of the clip back into the channel location and realign so that the whole cover will line up correctly:



- Keep the D ring up and clear of the trim cover and press into position



5. Step 5

Reinstall the side weatherstripping and bolt the seat adjuster back on



- Ensure that there is no restriction with the seat belt webbing and reinstall the adjuster cover



- Test again for full and unrestricted movement



- Press the lower panel into place ensuring that all tabs line up correctly.

- Reinstall weatherstripping:
- Do not fully tighten straps yet. Just pull up so the net hangs up high.
- Slide the seats back to normal positions.



6. Step

Feed the lower straps under the seat bracket back into the cam buckle:



Tighten the top straps as desired while maintaining desired range of motion for the front seats. Finally draw the bottom straps tight just enough to not pull down the net past desired height position. Cover up the buckles and wrap up excess adjusting strap:

HERE's a quick and easy video showing how.




7. Step

Enjoy your new barrier net!



[866-905-7625](tel:866-905-7625) | Tech@RAINGLER.com | Raingler.com

Documents / Resources

	<p>Raingler 2017 Behind Front Seats Barrier Divider Net [pdf] User Guide</p> <p>2017 Behind Front Seats Barrier Divider Net, 2017, Behind Front Seats Barrier Divider Net, Front Seats Barrier Divider Net, Barrier Divider Net, Divider Net, Net</p>
--	---

References

-  [Cargo, barrier and dog safety nets - Raingler Nets](#)
- [User Manual](#)

Manuals+ Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.