





Boost Static Return Frame Instruction Manual

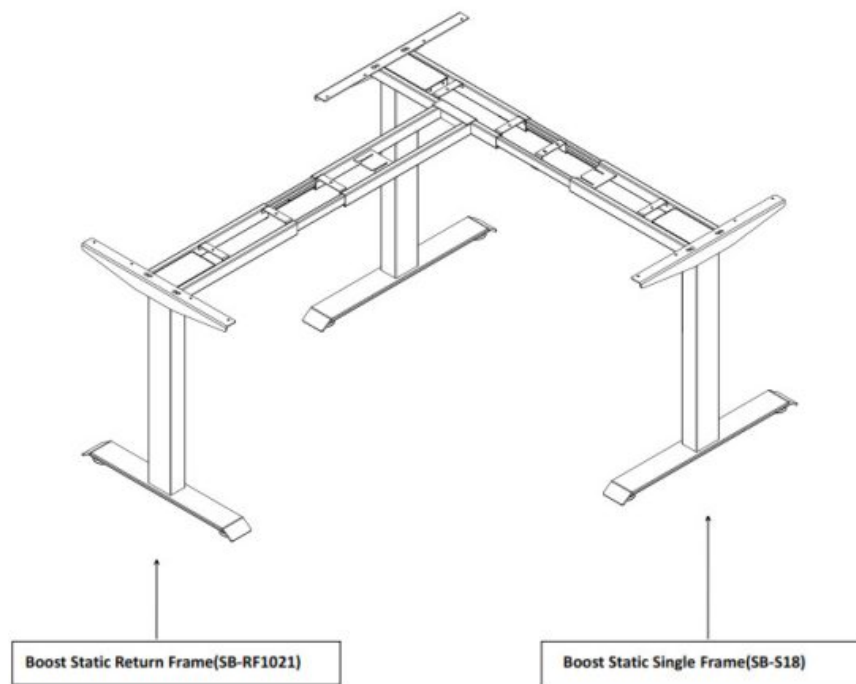

Contents [[hide](#)]

- 1 Component parts
- 2 Assembly Instructions
- 3 Cable tray installation
- 4 Documents / Resources
 - 4.1 References

Component parts

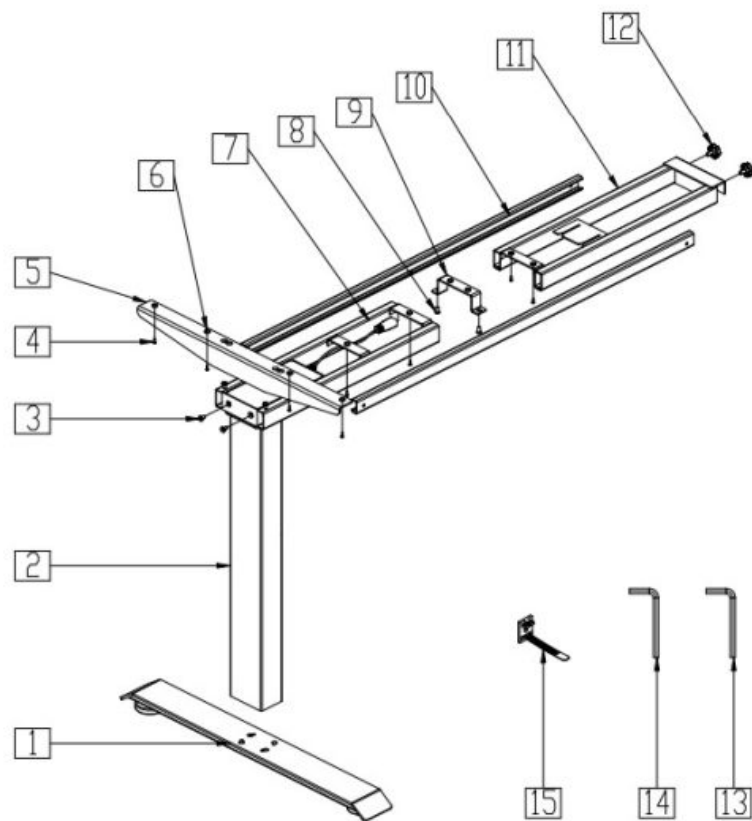


NO.	Component Name	PCS
1	Table feet	1
2	Column	1
3	Bolt: M6x12	2
4	Screw:ST4x20	13
5	Side brackets	1
6	Rubber pad	10
7	Top frame-1	1
8	Bolt: M6x10	3
9	Centre bracket	1

10	Center rails	2
11	Top frame-2	1
12	Hand bolts M6x10	2
13	Allen Wrench(4mm)	1
14	Allen Wrench(5mm)	1
15	Cable tie	2

Assembly Instructions


Step 1

Loosen the pre-installed bolts and Adjust the length of the top frame to match the size of the table top.

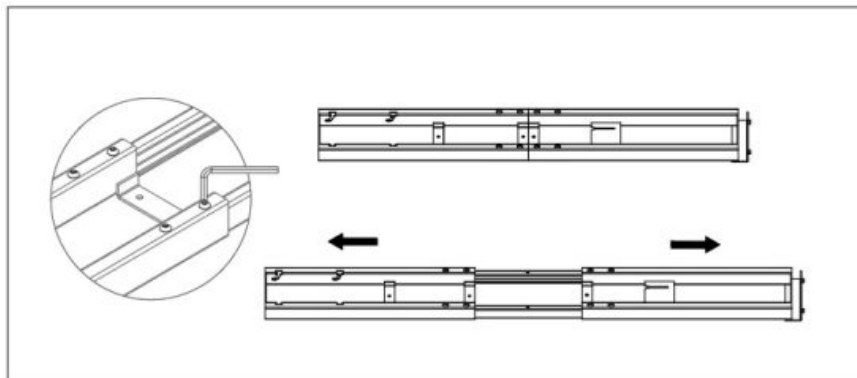


Step 2

Inset the Column to the top frame,fix lifting column with 4pcs screws M6x12 like.

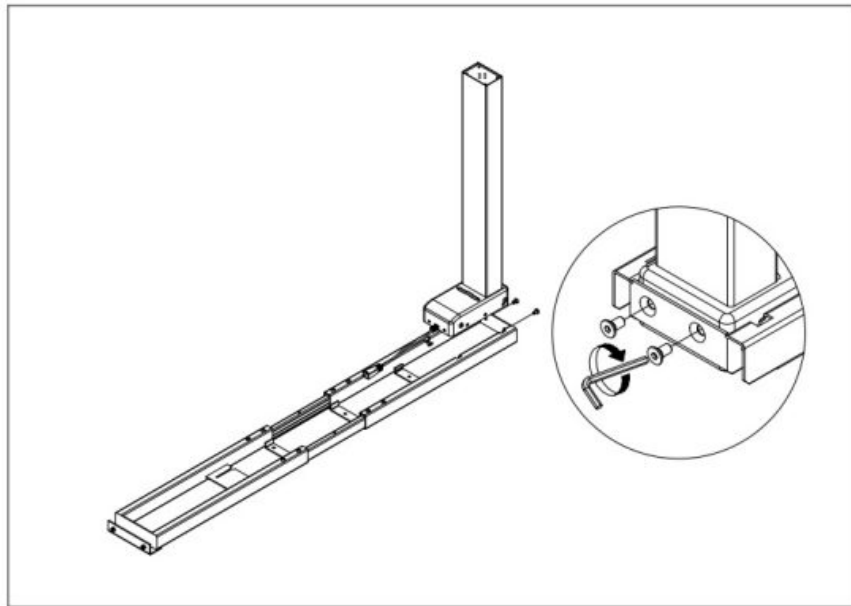


Step 3

Place the table feet on the column and rotate it and make it align, then tighten the pre-installed bolt.

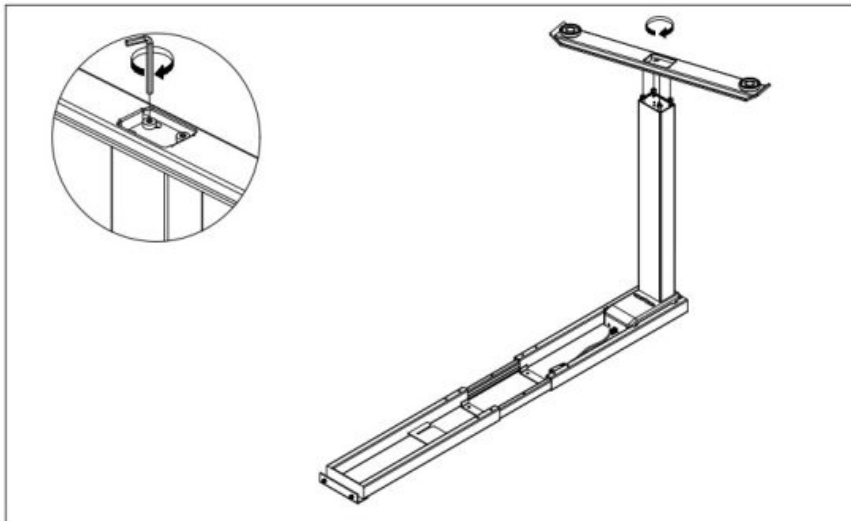


Step 4

Place the side bracket on the top frame and tighten the bolts.

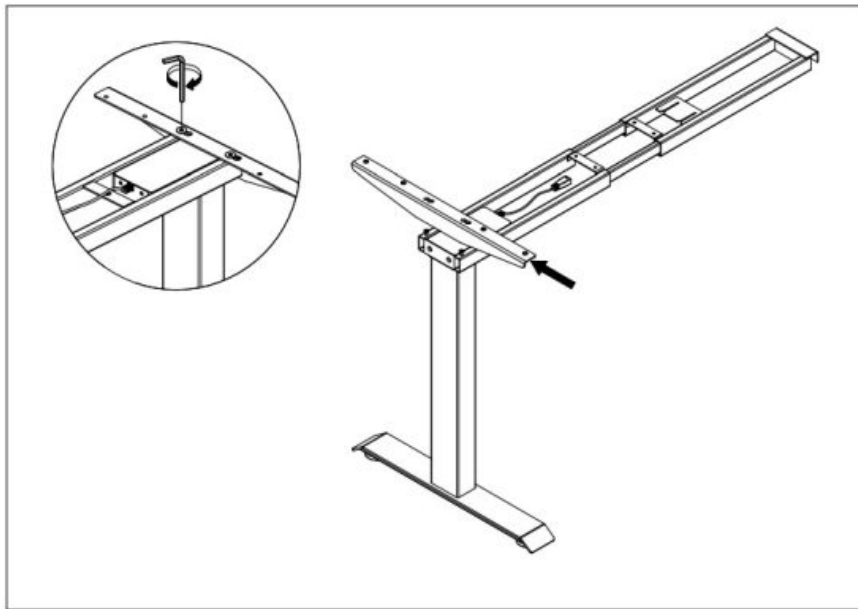


Step 5

Connect the return frame to the single workstation and fixed with 2 hand bolts.
Fix the centre brackets with 2pcs screws M6x10.

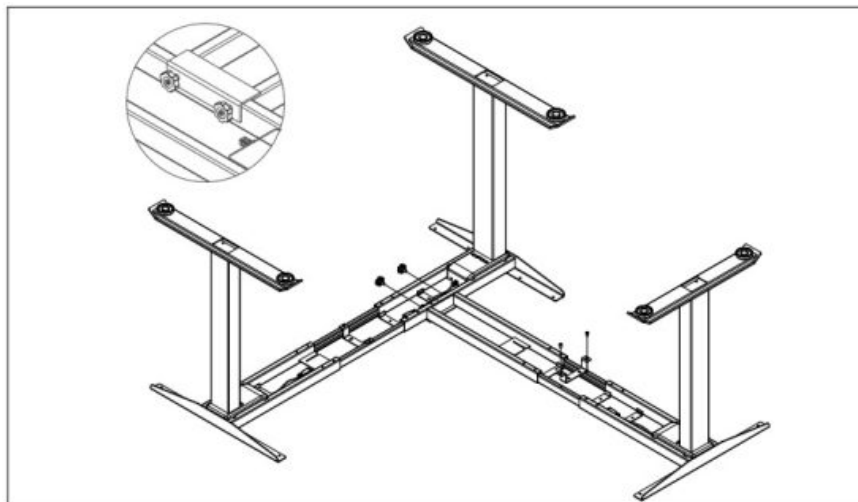

Step 6


Mount the tabletop and fix it with 24 pcs screws ST4x20;
Fix the centre bracket with 2 pcs screws M6x10

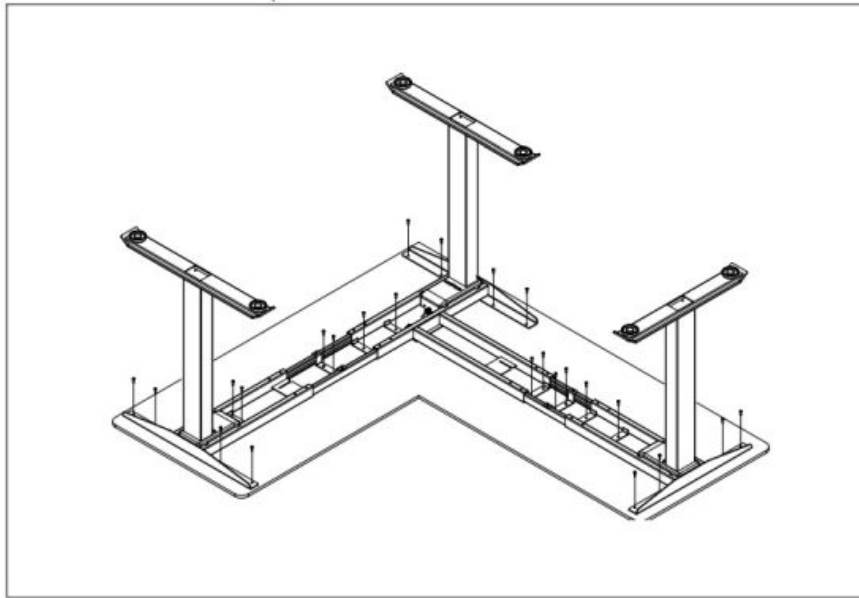

Cable tray installation


Step 1

- Fix the cable tray(B2-SSCT) to the cable tray arms(B2-SSARM) with 8 pcs M6x10 screws.

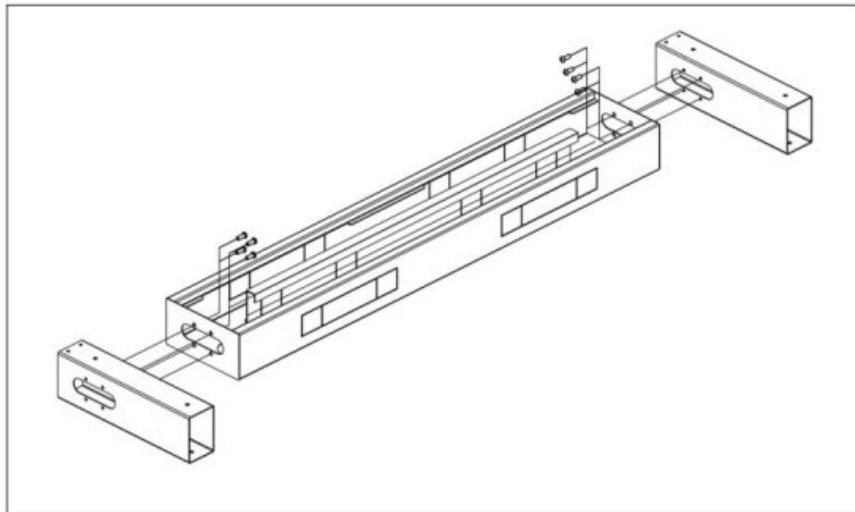

Step 2


- Install the U brackets to the desk frame with 4 pcs M8x10 screws.
- Mount the cable tray to the desk frame and fix it with 6 pcs M6x10 screws

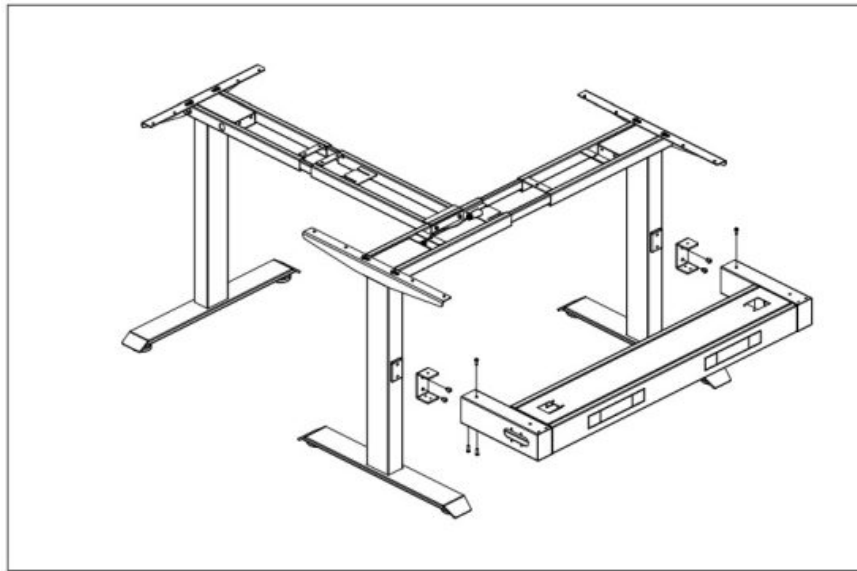

Screen panel installation (Shush30 Privacy Screen)


Step 1

- Insert the tapped plates to the screen panel (plates can be found in B2-SBRAC carton)

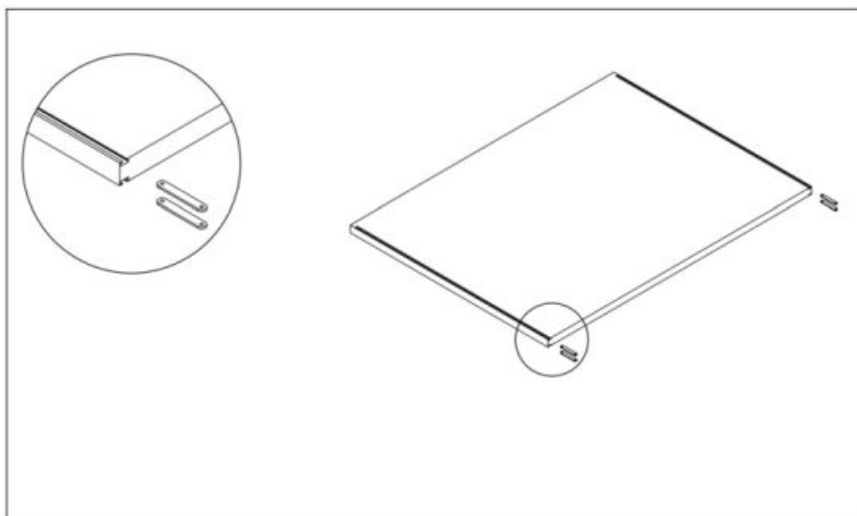


Step 2

- Install the screen brackets (B2-SBRAC)to the Shush30 Extrusion with 8 pcs M5x6 screws.

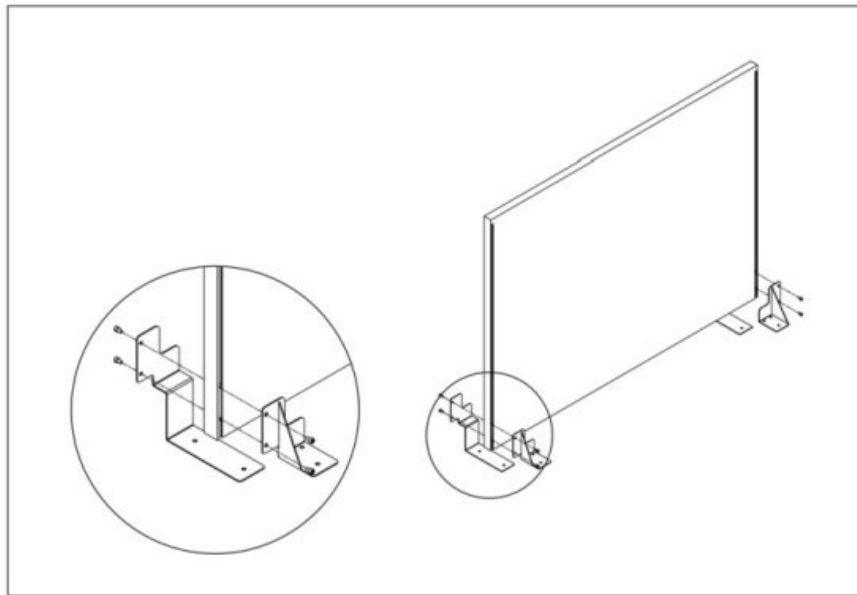

Step 3


- Fix the screen brackets (B2-SBRAC) to the desk frame with 10 pcs M6x10 screws.

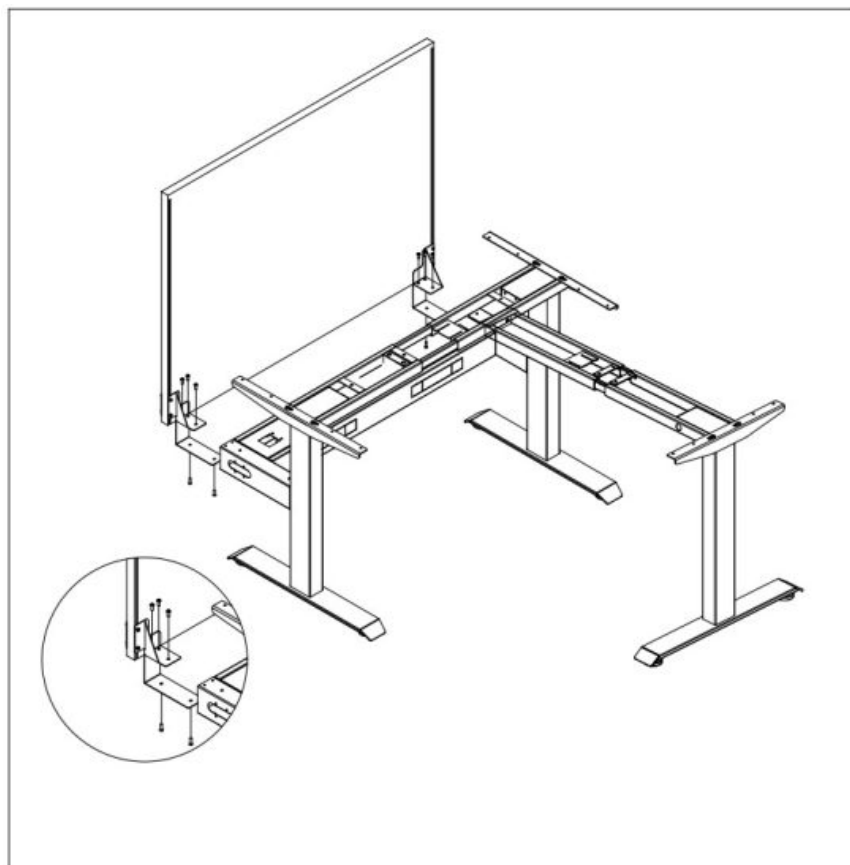

EPS (900mm H Eco Panel) Screen panel installation

Step 1

- Install the screen brackets(B2-SBRAC) on the cable tray arm (B2-SSARM)with 10 PCS M6x10 Screws The brackets direction as photos display.

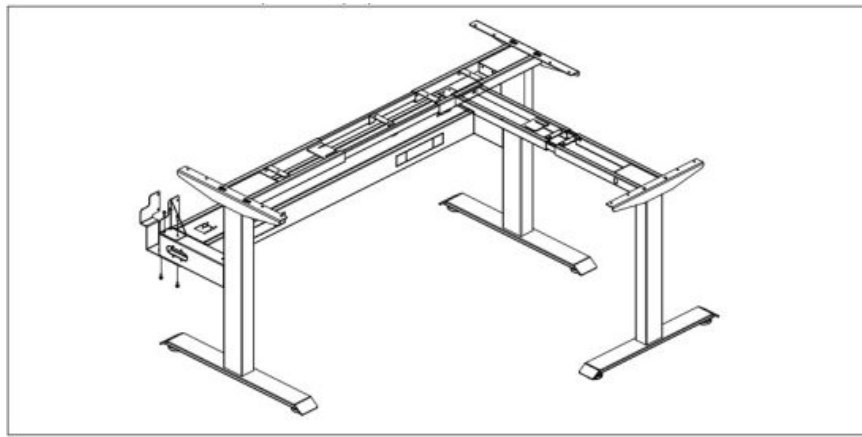


Step 2


– Place the EPS panel on the screen brackets

Using a 6mm drill bit (not included), drill out holes in Eco Panel Screen in line with back to back screen bracket holes (Note: Carbide Drill Bits Work Best For PET panel)

– Place 8 x Double Ended Bolts M5* 32mm – 6mm through The screen bracket (B2-SBRAC) holes and the holes you have created in the Eco Panel Screen. Tighten double ended bolt with Allen key.

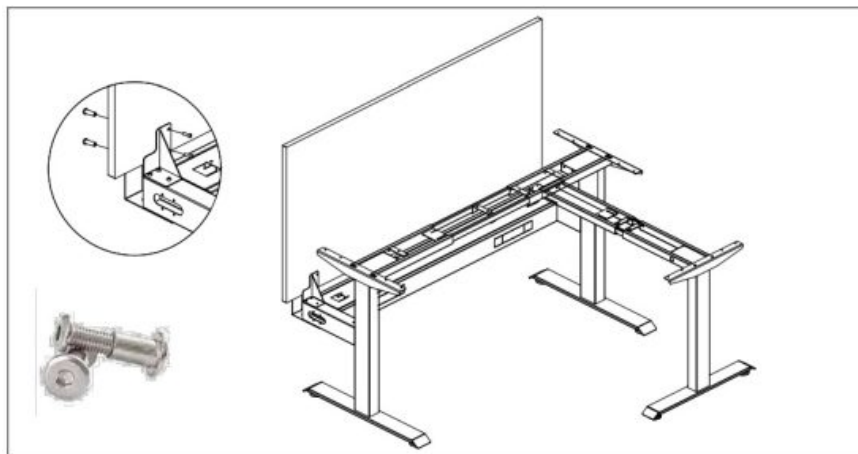

Documents / Resources

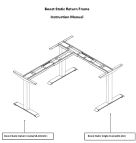	Rapidline SB-RF1021 Boost Static Return Frame [pdf] Instruction Manual SB-RF1021, SB-S18, SB-RF1021 Boost Static Return Frame, SB-RF1021, Boost Static Return Frame, Static Return Frame, Return Frame, Frame
---	--

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.