




Home » rapidline » Rapidline Static Single Sided Fixed Height Workstation Frame Instruction

Manual

Manual




Halo Static Single Sided Fixed
Height Workstation Frame
Instruction Manual

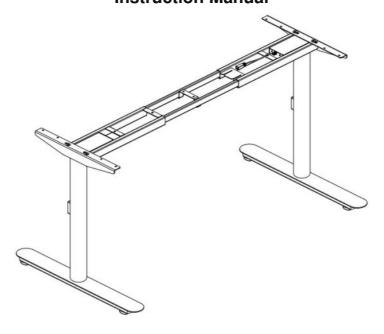

Contents [hide]

- 1 Component parts
- 2 Assembly Instructions
- 3 Cable tray installation
- 4 Screen panel installation (Shush30 Privacy Screen)
- 5 EPS (900mm H Eco Panel) Screen panel installation
- 6 Documents / Resources
 - 6.1 References

Component parts

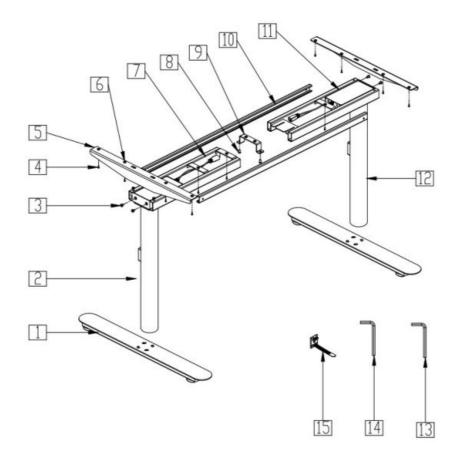


NO.	Component Name	PCS
1	Table feet	2
2	Column(right)	1
3	Bolt: M6x12	5
4	Screw: ST4x20	22
5	Side brackets	2
6	Rubber pad	14
7	Top frame-1	1
8	Bolt: M6x10	3
9	Centre bracket	1
10	Center rails	2
11	Top frame-2	1

12	Column(left)	1
13	Allen Wrench(4mm)	1
14	Allen Wrench(5mm)	1
15	Cable Tie	5


Assembly Instructions

Step 1

Loosen the pre-installed bolts and adjust the length of the top frame to match the size of the table top.

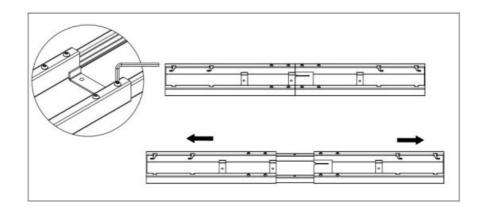


Step 2
Insert the Column to the top frame, fix the lifting column with 4pcs of screws M6x12 like.

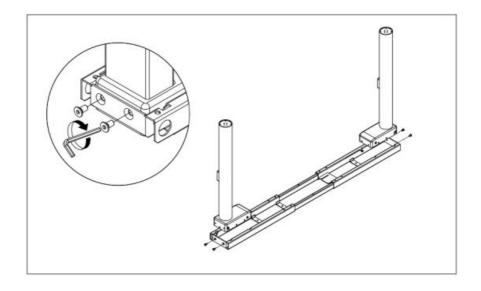


Step 3

Place the table feet on the Column and rotate it to align, then tighten the pre-installed

bolt.

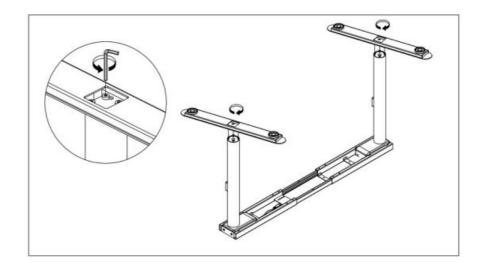

Step 4Place the side bracket on the top frame and tighten the bolts.

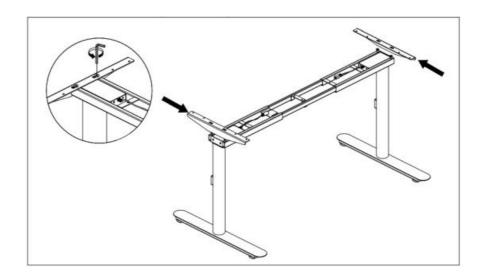


Step 5Mount the tabletop and f

Mount the tabletop and fix it with 14 pcs screws ST4x20;

Fix the centre bracket with 2 pcs of screws M6x10


Tighten the pre-installed bolts on the top frame

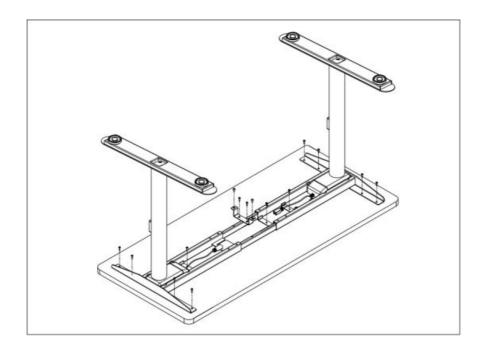

Cable tray installation


Step 1

- Fix the cable tray (B2-SSCT) to the cable tray arms (HP-SSARM) with 8 pcs M6x10 screws.

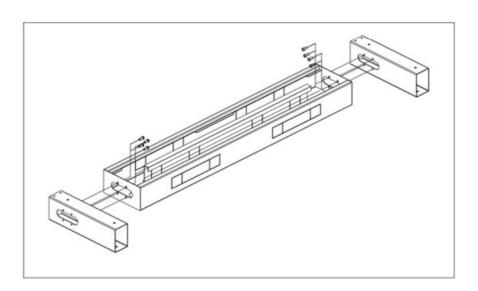

Step 2


- Install the U brackets to the desk frame with 4 pcs M8x10 screws.
- Mount the cable tray to the desk frame and fix it with 6 pcs M6x10 screws

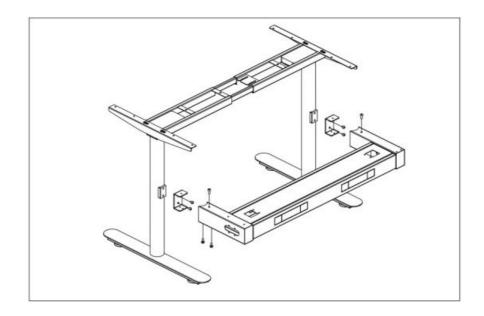

Screen panel installation (Shush30 Privacy Screen)


Step 1

Insert the tapped plates to the screen panel (plates can be found in the B2-SBRAC carton)

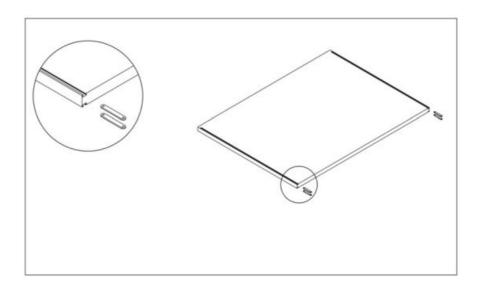


Step 2

Install the screen brackets (B2-SBRAC) to the Shush30 Extrusion with 8 pcs M5x6 screws.

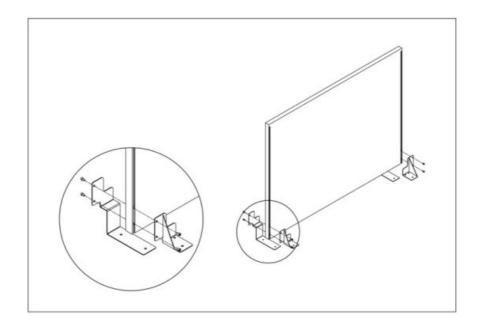

Step 3


- Fix the screen brackets (B2-SBRAC) to the desk frame with 10 pcs M6x10 screws.

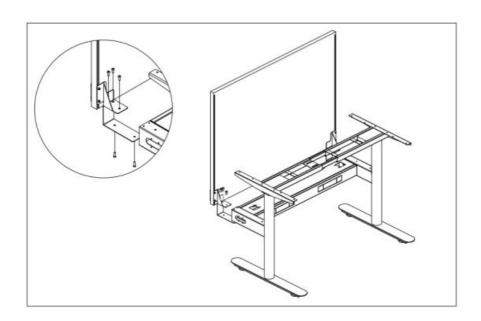

EPS (900mm H Eco Panel) Screen panel installation

Step 1

Install the screen brackets (B2-SBRAC) on the cable tray arm (HP-SSARM)with 10
 PCS M6x10 Screws. The direction as the photos display.

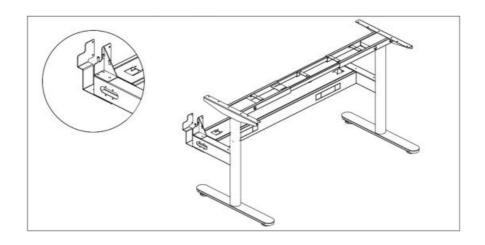


Step 2

- Place the EPS panel on the screen brackets

Using a 6mm drill bit (not included), drill out holes in the Eco Panel Screen in line with the back-to-back screen bracket holes (Note: Carbide Drill Bits Work Best For PET panel)

– Place 8 x Double Ended Bolts M5* 32mm – 6mm through the screen bracket (B2-SBRAC) holes and the holes you have created in the Eco Panel Screen. Tighten the double-ended bolt with the Allen key.

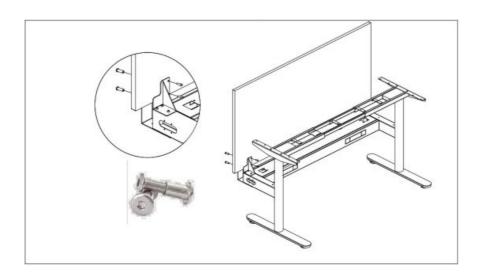



Documents / Resources



Rapidline Static Single Sided Fixed Height Workstation Frame [pdf] Instruction Manual

Static Single Sided Fixed Height Workstation Frame, Single Sided Fixed H eight Workstation Frame, Sided Fixed Height Workstation Frame, Fixed H eight Workstation Frame, Height Workstation Frame, Workstation Frame, Frame

References

- User Manual
- rapidline
- Fixed Height Workstation Frame, Frame, Height Workstation Frame, rapidline, Sided Fixed Height Workstation Frame, Single Sided Fixed Height Workstation Frame, Static Single Sided Fixed Height Workstation Frame, Static Single Fixed Height Workstation Frame, Static Fixed Height Workstation Frame, Fixed Height Workstation Frame, Static Fixed Height Workstation Frame, Fixed Height Workstatio

Leave a comment

Your email address will not be published. Required fields are marked*
Comment *
Name
Freeil
Email
Website
Email Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.