



# RemotePro Receiver to Merlin P2600 Installing Instruction Manual


[Home](#) » [RemotePro](#) » RemotePro Receiver to Merlin P2600 Installing Instruction Manual 

## Contents

- [1 Installing Receiver to Merlin P2600](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)

## Installing Receiver to Merlin P2600

1. TURN OFF POWER FROM THE POWERPOINT
2. View the diagram below and ensure that it matches the back of your motor.
3. Loosen each of the two on the back of your motor.
4. Connect the black receiver cable to the top screw and tighten it.
5. Connect the blue receiver cable to the bottom screw and tighten.
6. Connect the AC adapter to a PowerPoint.
7. Turn the power back on and ensure the receiver powers up.
8. All of the new remotes have been pre-programmed to the receiver. Press button 1 on your new remote to ensure it can operate the door.

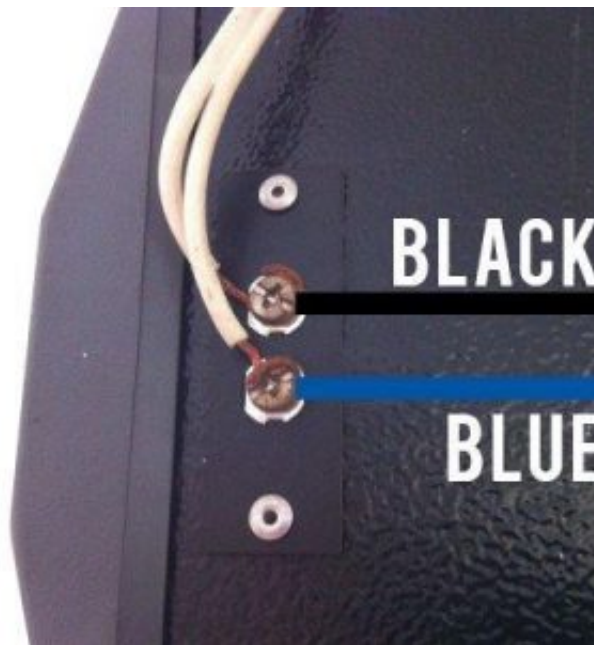


### Coding new remotes

**Please Note: Your original remotes will continue to work**

1. Press the black to learn button inside the receiver located next to the LED light until the LED illuminates then releases.
2. Press and hold any button on your new remote until the LED flashes.
3. The remote is now coded, please test the remote to ensure it can operate the motor.
4. If you have more than one new remote, please repeat steps 1-3.

[www.remotepro.com.au](http://www.remotepro.com.au)

### WARNING

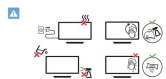

To prevent possible **SERIOUS INJURY** or **DEATH**:

- Battery is hazardous: **NEVER** allow children near batteries.
- If the battery is swallowed, immediately notify a doctor. **CD** To reduce risk of fire, explosion or

chemical burn:

- Replace **ONLY** with the same size and type battery
- **DO NOT** recharge, disassemble, heat above 100° C, or incinerate Battery will cause **SEVERE** or **FATAL** injuries in 2 hours or less if swallowed or placed inside any part of the body.

### Documents / Resources

	<p><a href="#">RemotePro Receiver to Merlin P2600 Installing</a> [pdf] Instruction Manual RemotePro, Receiver to Merlin, P2600, Installing</p>
--	--