

**RIVAL WB-CR171BD Overland Slider Drop Steps**



# RIVAL WB-CR171BD Overland Slider Drop Steps Instruction Manual

[Home](#) » [RIVAL](#) » RIVAL WB-CR171BD Overland Slider Drop Steps Instruction Manual 

## Contents

- [1 RIVAL WB-CR171BD Overland Slider Drop Steps](#)
- [2 Product Specifications](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 PARTS LIST](#)
- [6 Installation Instruction](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)



**RIVAL WB-CR171BD Overland Slider Drop Steps**



## Product Specifications

- Product Name: RS6 Overland Slider Drop Steps
- Compatibility: 2019-2024 Silverado 1500, 2019-2022 Sierra 1500 Crew Cab, 2022 Silverado 1500 LTD, 2022 Sierra 1500 Limited, 2020-2024 2500/3500 Silverado/Sierra Crew Cab (includes diesel models w/DEF)
- Part Number: WB-CR171BD

## Product Usage Instructions

### Parts List:

- 1 Driver/Left Tube
- 1 Passenger/Right Tube
- 4 Drop Steps
- 16 10mm Nylon Lock Nuts

### Installation Procedure:

1. Start the installation under the Passenger/Right side of the vehicle.
  1. For Early 2019 models, locate the 6 plugs along the bottom edge of the body. Mounting Brackets will bolt to specific threaded mounting holes.
  2. For Late 2019 models, all mounting locations will be used.

### Cleaning Instructions:

To protect your investment, do not use any type of polish or wax that may contain abrasives that could damage the

finish. Mild soap may be used to clean the Overland Steps.

### Periodic Inspections:


Do periodic inspections to the installation to make sure that all hardware is secure and tight.

### Frequently Asked Questions

- **Q: Can these drop steps be installed on models other than those listed in the compatibility section?**
  - A: The RS6 Overland Slider Drop Steps are specifically designed for the mentioned models. Installation on other models may not be compatible.
- **Q: How should I adjust the Overland Step for proper leveling?**
  - A: With assistance, line up the mounting tabs and rear faces of the Mounting Brackets to ensure proper alignment before tightening all hardware for proper leveling.

### PARTS LIST

1	Driver/Left Tube	16	10mm Nylon Lock Nuts
1	Passenger/Right Tube	8	8mm x 25mm Triangle Double Bolt Plates
4	Drop Steps	16	8mm x 30mm Hex Bolts
4	Driver/Left Mounting Brackets	32	8mm x 22mm OD x 2mm Flat Washers
4	Passenger/Right Mounting Brackets	16	8mm Lock Washers
16	10mm x 30mm Hex Bolts	16	8mm Nylon Lock Nuts
32	10mm x20mm OD x 2mm Flat Washers		

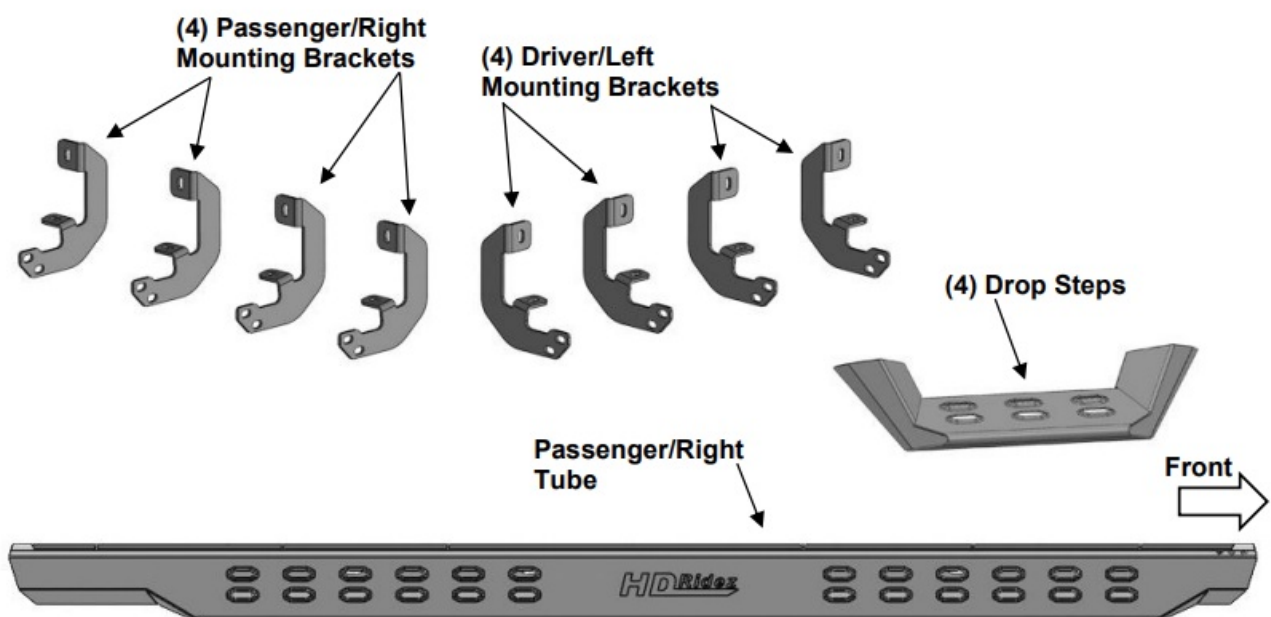

### Installation Instruction






PROCEDURE: REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ




INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. ASSISTANCE IS RECOMMENDED.

1. Start the installation under the passenger/right side of the vehicle.
  - a. For “Early” 2019 models, locate the 6 plugs along the bottom edge of the body. Mounting Brackets will bolt to the 1st, 3rd, 4th and 6th threaded mounting holes, (Figure 1).
  - b. For “Late” 2019 models, all (4) mounting locations will be used.
2. Remove the plastic plugs from the passenger/right front mounting location. Select (1) Mounting Bracket. Attach the Mounting Bracket to the factory threaded holes with (2) 8mm Hex Bolts, (2) 8mm Lock Washers and (2) 8mm Flat washers (Figures 2 & 3). Do not tighten hardware.
3. Repeat Steps 1 & 2 to attach (3) Mounting Brackets to the (3) remaining locations along the rocker panel, (Figures 4—7). Do not tighten hardware.
4. Select the passenger/right Tube. Insert (2) 8mm double Bolt Plates into the front (2) sets of (2) holes, (Figure 8). Attach (1) Drop Step to the (2) Double Bolt Plates with (4) 8mm x 22mm Flat Washers and (4) 8mm Nylon Lock Nuts, (Figure 9). Do not tighten hardware.
5. With assistance, line up the mounting tabs in the passenger/right Tube to the rear faces of the mounting Brackets. Secure the Tube to the Mounting Brackets with (8) 10mm Hex Bolts, (16) 10mm x 20mm Flat Washers and (8) 10mm Nylon Lock Nuts, (Figure 10). Do not tighten hardware.
6. Level and adjust the Overland Step, then tighten all hardware.
7. Repeat Steps 1—6 to attach the Driver/Left Overland Step.
8. Do periodic inspections to the installation to make sure that all hardware is secure and tight

To protect your investment, Do not use any type of polish or wax that may contain abrasives that could damage the finish. Mild soap may be used also to clean the Overland Steps.

#### **Passenger/Right side Installation Pictured**

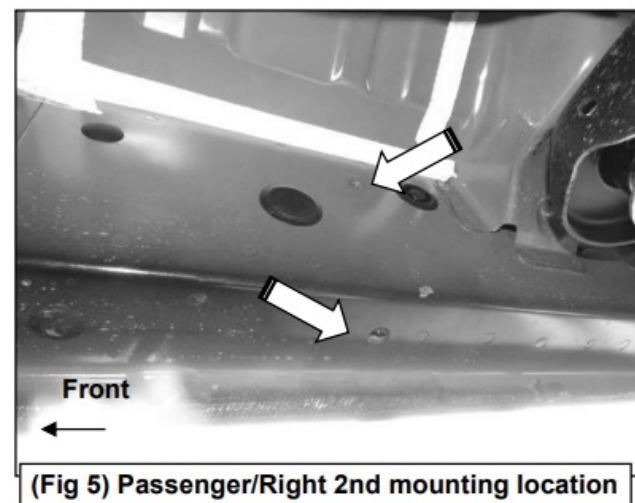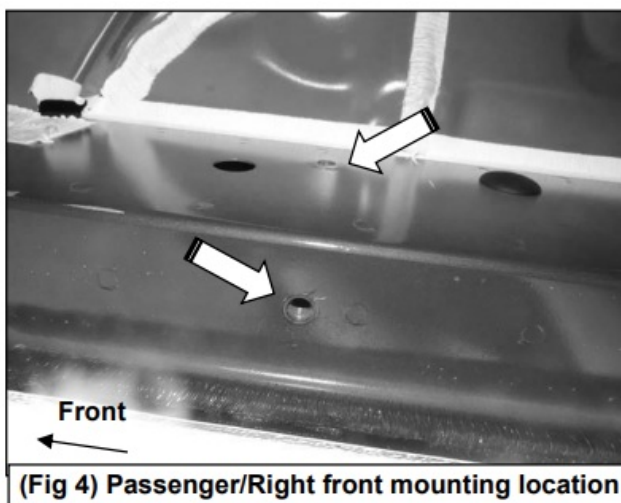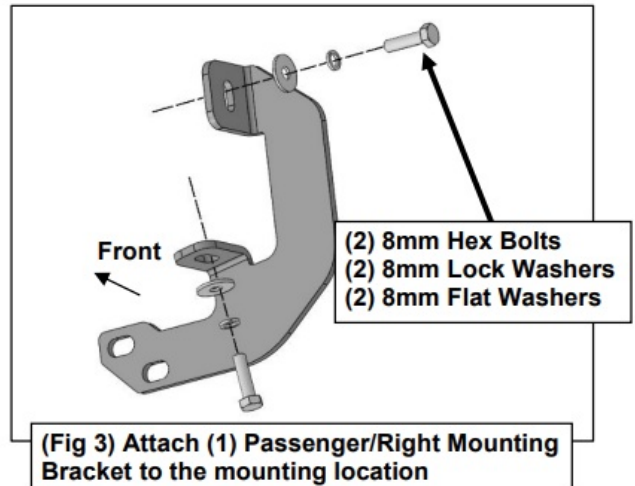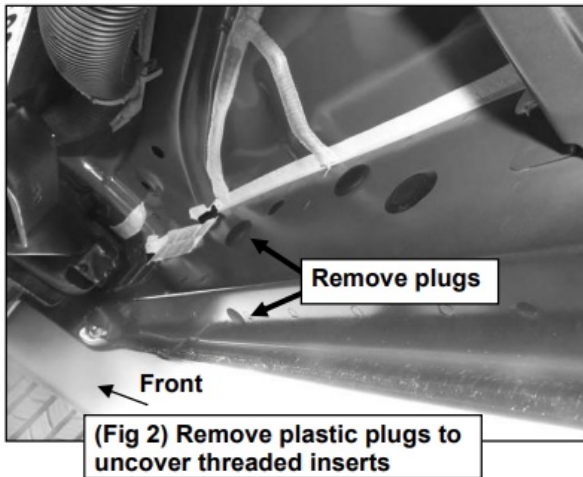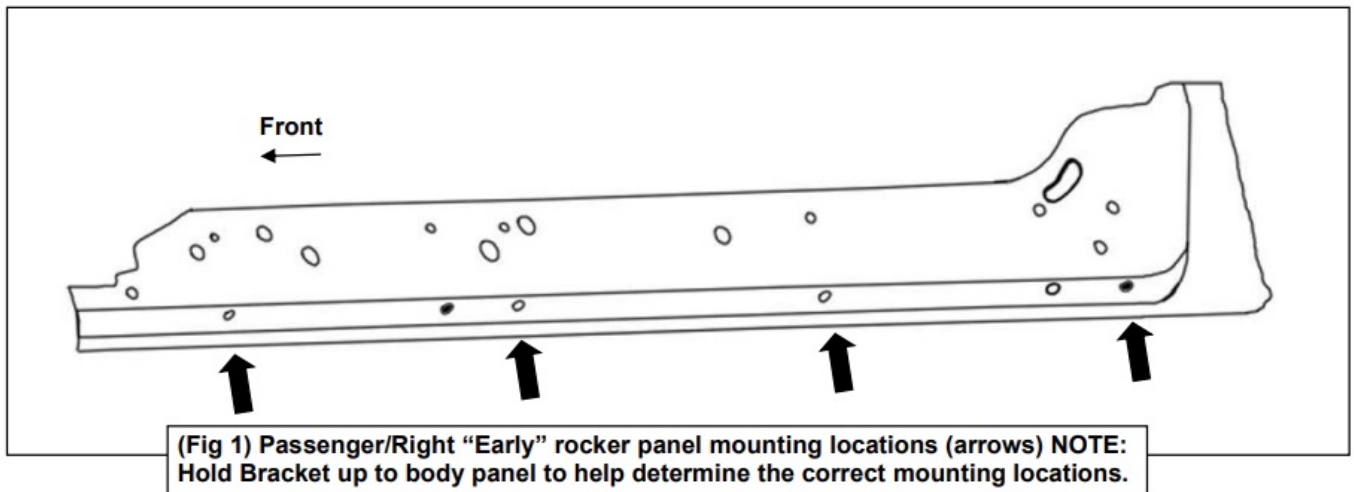

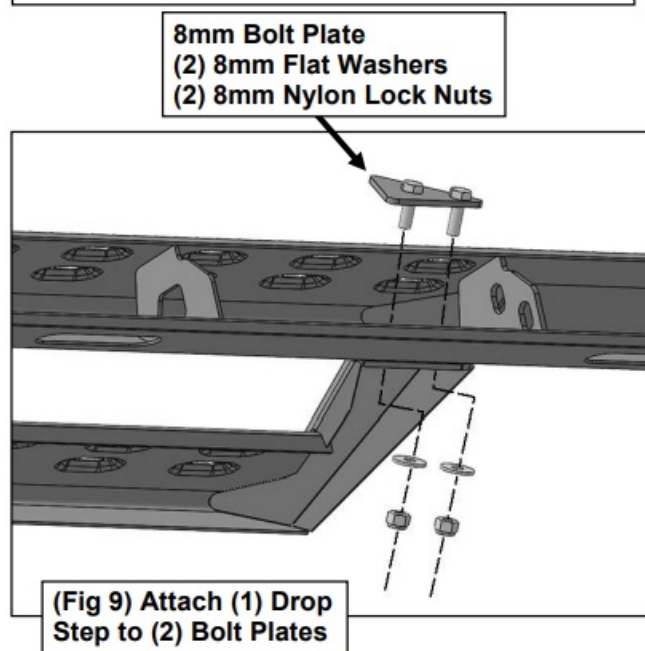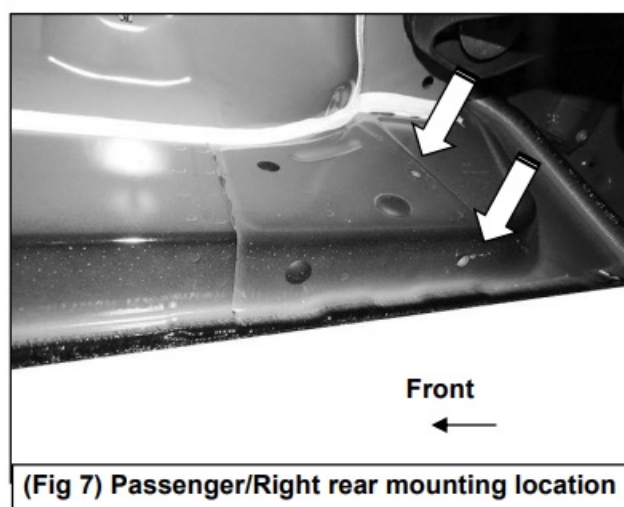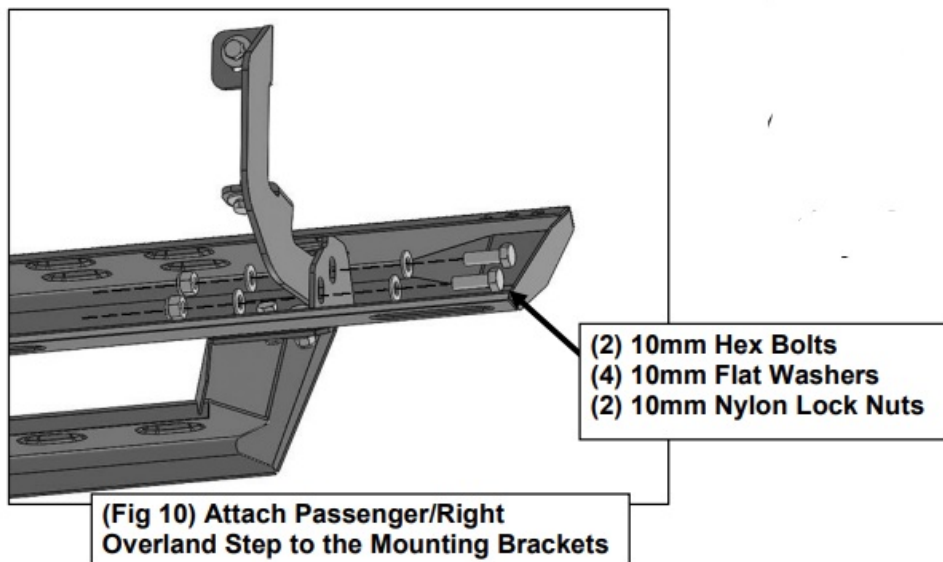


RS6 OVERLAND SLIDER DROP STEPS 2019-24 SILVERADO 1500/ 2019-22 SIERRA 1500 CREW CAB  
INCLUDES DIESEL MODELS W/DEF, 2022 SILVERADO 1500 LTD AND 2022 SIERRA 1500 LIMITED 2020-24  
2500/3500 SILVERADO/SIERRA CREW CAB (INCLUDES DIESEL MODELS W/DEF)

## INSTALLATION INSTRUCTIONS

RS6 OVERLAND SLIDER DROP STEPS 2019-24 SILVERADO 1500/ 2019-22 SIERRA 1500 CREW CAB  
INCLUDES DIESEL MODELS W/DEF, 2022 SILVERADO 1500 LTD AND 2022 SIERRA 1500 LIMITED 2020-24  
2500/3500 SILVERADO/SIERRA CREW CAB (INCLUDES DIESEL MODELS W/DEF) PART#WB-CR171BD

---

Documents / Resources

	<p><a href="#">RIVAL WB-CR171BD Overland Slider Drop Steps</a> [pdf] Instruction Manual WB-CR171BD Overland Slider Drop Steps, WB-CR171BD, Overland Slider Drop Steps, Slider Drop Steps, Drop Steps, Steps</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.