



FIGURE 1

## ROADSAFE STBR Sway Bar Relocation Bracket Front Instruction Manual

[Home](#) » [ROADSAFE](#) » [ROADSAFE STBR Sway Bar Relocation Bracket Front Instruction Manual](#) 

### ROADSAFE STBR Sway Bar Relocation Bracket Front



FIGURE 1

## **Contents**

### **1 NOTE**

### **2 BEFORE FITTING**

### **3 INSTALLATION**

### **4 CUSTOMER SERVICE**

### **5 Documents / Resources**

#### **5.1 References**

## **NOTE**

Ensure vehicle is on level ground.  
Chock front wheels to avoid vehicle rolling.

## **BEFORE FITTING**

- Read instructions fully before commencing fitment.
- Estimated Fitting Time: ½ hr.
- Left-hand and right-hand components.
- Left-hand and right-hand components are determined as seated in the vehicle.

## **INSTALLATION**


1. Ensure handbrake is engaged and rear wheels are chocked.
2. Remove both radiator support brackets.
3. Remove the OE sway bar D-brackets and retain the OE brackets See figure 1.



**FIGURE 1**

Please take note of the arrow on the bracket.

4. Radiator support bracket as shown See figure 2.

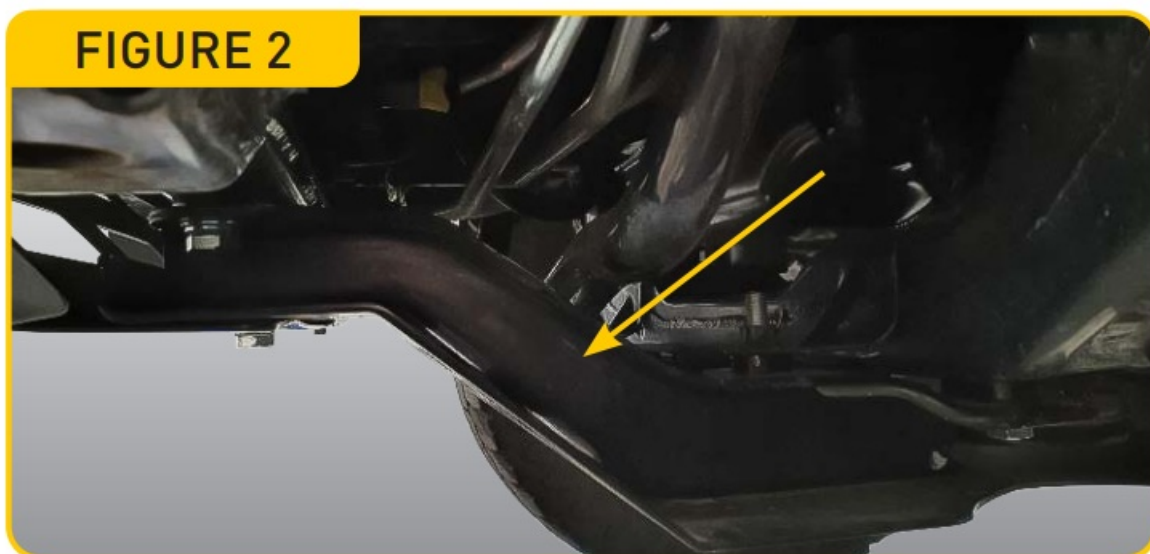

**FIGURE 2**

5. Fit the Blackhawk 4x4 sway bar relocation bracket using the M10 countersunk bolts to the OE sway bar location.

See figure 3.



**FIGURE 3**

Use Loctite on all bolt threads. Tighten bolts to OE torque settings.

6. Fit the retained OE swaybar bracket using the M10 hex head bolts and washers to the Blackhawk 4×4 bracket.
7. Fit the Blackhawk spacer kit to the radiator support brackets using one spacer to each bolt. The spacers sit between the chassis cross member and the support brackets where applicable\*. Refit the support brackets with the new bolts and washers supplied.

\*Spacers not required for all models.

See figure 4. Use Loctite on all bolt threads. Tighten bolts to OE torque settings.



**FIGURE 4**

8. Check the sway bar doesn't foul on any component throughout the suspension travel.

See figure 5.




## CUSTOMER SERVICE

A division of Specialist Wholesalers Pty. Ltd. ABN 64 163 280 279 [roadsafe.com.au](http://roadsafe.com.au) VIC PH: 03 8687 1700 |  
QLD PH: 07 3737 7420 |  
Email: [sales@roadsafe.com.au](mailto:sales@roadsafe.com.au)



## Documents / Resources

	<p><a href="#">ROADSAFE STBR Sway Bar Relocation Bracket Front</a> [pdf] Instruction Manual STBR Sway Bar Relocation Bracket Front, STBR, Sway Bar Relocation Bracket Front, Relocati on Bracket Front, Bracket Front</p>
---	---

## References

- [roadsafe.com.au](http://roadsafe.com.au)