



ROCKBOARD PatchWorks Solderless Patch Cable System Instructions

[Home](#) » [ROCKBOARD](#) » ROCKBOARD PatchWorks Solderless Patch Cable System Instructions 

Contents

- [1 ROCKBOARD PatchWorks Solderless Patch Cable System](#)
- [2 Preparation and Assembly](#)
- [3 Assembling a straight PatchWorks® solderless plug](#)
 - [3.1 Assembling an angled PatchWorks® solderless plug:](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



ROCKBOARD PatchWorks Solderless Patch Cable System



Thank you for choosing the RockBoard® PatchWorks® Solderless Patch Cable System

The RockBoard® PatchWorks® Solderless Patch Cable System is an innovative system that allows you to create varying length, high-quality patch cables quickly and easily without any soldering required. This inventive design, developed in Germany, uses a two-part adjustable connector and saves valuable space on the pedalboard by allowing a straight or angled connection.

Using the high-quality audio cables and compact, gold plated 1/4" plugs guarantees a short, clean signal path and pristine signal quality.

Preparation and Assembly

Step 1

Measure the desired cable length and add approximately 2 3/8" for both connectors. For a patch cable of 6" in length, you need about 8 3/8" of cable.



Step 2

Cut the cable to the required length by using the included PatchWorks® Cable Cutter.



Step 3

Ensure that the cut surface is even and straight for a secure connection between the signal conductor, the braided shielding, and the appropriate contacts in the connector to avoid signal loss.



Step 4

Remove the screws from two PatchWorks® Solderless Plugs using the provided PatchWorks® TX8 wrench. Carefully set the screws in a safe place.




Step 5

Slip the rear part of the PatchWorks® Solderless 2-Piece Plug about 2" over the cable.



The RockBoard® PatchWorks® Solderless Patch Cable System offers you the versatility of a straight or angled patch cable plug. With an adjustable housing system, you can craft the perfect signal route every time, regardless of jack placement on your effects pedals.

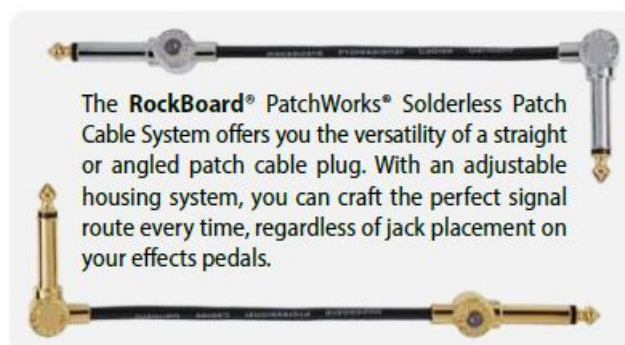

Assembling a straight PatchWorks® solderless plug

Step 1

Fit the cable into the front section of the two-part plug. Then turn the front part of the plug by 180 degrees around its axis while pressing slightly to ensure a good connection between plug and cable. The plug should now stick to the audio cable.



Step 2

Align the small rear unit of the two-part plug with the front unit of the plug. Slide the two components together and position the screw holes over each other.



Step 3

Screw the two parts together using the supplied PatchWorks® TX8 wrench. For a good grip and an optimal connection, the screw must be flush with the connector housing.



Repeat steps 6 through 8 to complete the other end of your PatchWorks® Solderless Patch Cable. Use a cable tester to check the conductivity of your patch cables before using them in your signal chain. Should there be a short or poor conductivity, disassemble the patch cable and check the surface on both sides. Should the connection be compromised, repeat the assembly steps from 1 to 5.

Enjoy your new RockBoard® PatchWorks® Solderless Patch Cable System!

Assembling an angled PatchWorks® solderless plug:

Step 1

Fit the cable into the front section of the two-part plug. Then turn the front part of the plug by 180 degrees around its axis while pressing slightly to ensure a good connection between plug and cable. The plug should now stick to the audio cable.



Step 2

Bend the cable by 90 degrees at the point where it protrudes from the front unit of the two-part plug. Align and fit

the small rear part into the rotated front plug unit. Position both screw holes over each other.



Note: The manufacturer reserves the right to change specifications without notice at any time.

USA DISTRIBUTION: Framus & Warwick Music USA, Inc. | info@rockboard.net | 629.202.6790


CHINESE DISTRIBUTION: Warwick Music Equipment Trading (Shanghai) Co. Ltd. | info@warwick.cn | +862134060110

NORTH EUROPEAN DISTRIBUTION: www.rockboard.de | info@rockboard.de | www.w-distribution.de | www.facebook.com/warwickmusicdistribution

Headquarters: Warwick GmbH & Co. Music Equipment KG | 08258 Markneukirchen / Germany | +49 (0) 37422 / 555 – 0

Family Owned • Solar Powered • Sustainably Manufactured in a Green Environment

Documents / Resources

	<p>ROCKBOARD PatchWorks Solderless Patch Cable System [pdf] Instructions PatchWorks, Solderless Patch Cable System, PatchWorks Solderless Patch Cable System, Patch Cable System, Cable System</p>
---	--