

ROLINE
ROLINE Mini Patchpanel



ROLINE Mini Patchpanel Installation Guide

[Home](#) » [ROLINE](#) » ROLINE Mini Patchpanel Installation Guide 

Contents

- [1 ROLINE Mini Patchpanel](#)
- [2 Product Usage Instructions](#)
- [3 Installation Instruction](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

ROLINE

ROLINE Mini Patchpanel



Product Specifications

- Product: ROLINE Mini Patchpanel
- Category: Cat.6A/Cl.EA
- Size: 0.5U
- Ports: 6x RJ45 ports
- Shielding: Shielded
- Color: Black

Product Usage Instructions

Installation Instructions

1. Cut the cable sheath 45mm from the end.
2. Pull off the front plastic sheath.
3. Cut the braid at 15mm. Push back the braid above the cable sheath.
4. Insert the cable into the cable clamp and tighten it hand-tight without squeezing the cable.
5. Cut the shielding foil to length. IMPORTANT: The LSA contacts are printed with color code 568B.
6. Cut and remove the pair shielding with side cutters. IMPORTANT: Bring the pair shielding up to the contact.
7. Connect the wires starting from clamp 8 using the LSA connection tool.
8. Apply the cable ties for strain relief and snap in the cover.

FAQ (Frequently Asked Questions)

- **Q: How many ports does the ROLINE Mini Patchpanel have?**
 - A: The ROLINE Mini Patchpanel has 6 RJ45 ports.
- **Q: Is the patchpanel shielded?**
 - A: Yes, the patchpanel is shielded.
- **Q: What color is the ROLINE Mini Patchpanel?**
 - A: The ROLINE Mini Patchpanel is black in color.

ROLINE Mini Patchpanel, Cat.6A/Cl.EA, 0.5U, 6x RJ45 ports, shielded, black

26.11.0299

Installation Instruction

1. Cut the cable sheath 45mm from the end.



2. Pull off the front plastic sheath.



3. Cut the braid at 15mm. Push back the braid above the cable sheath.




4. Insert the cable into the cable clamp and tighten it hand-tight without squeezing the cable.



5. Cut the shielding foil to length.

IMPORTANT: The LSA contacts are printed with color code 568B.

IDC(KRONE)

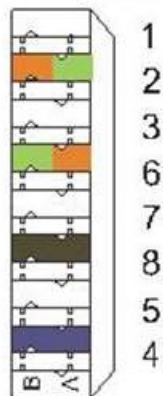

T568A

- Pin 1 White/Green
- Pin 2 Green
- Pin 3 White/Orange
- Pin 6 Orange
- Pin 7 White/Brown
- Pin 8 Brown
- Pin 5 White/Blue
- Pin 4 Blue

T568B

- Pin 1 White/Orange
- Pin 2 Orange

Pin 3 White/Green



Pin 6 Green

Pin 7 White/Brown

Pin 8 Brown

Pin 5 White/Blue

Pin 4 Blue

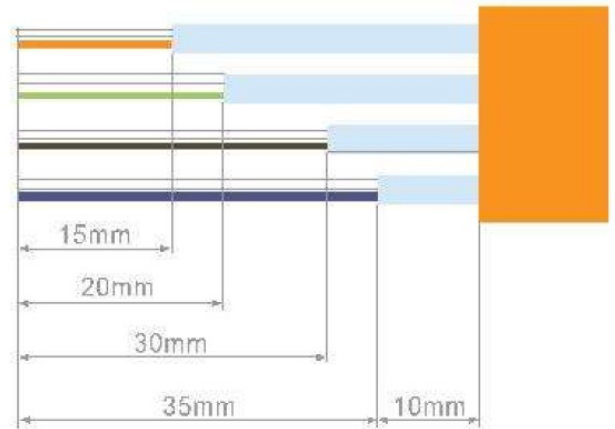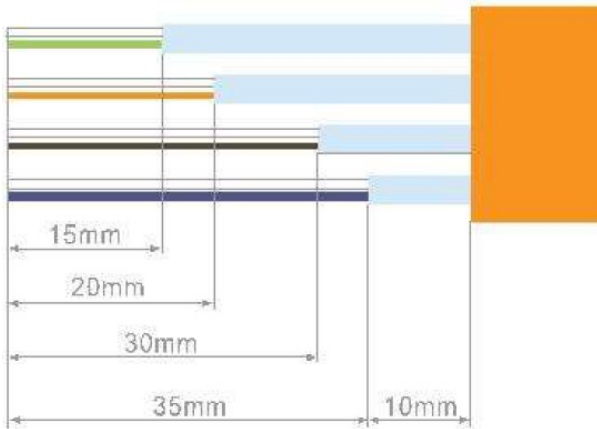


6. Cut and remove the pair shielding with side cutters.

IMPORTANT: Bring the pair shielding up to the contact.



7. Connect the wires starting from clamp 8 using the LSA connection tool.

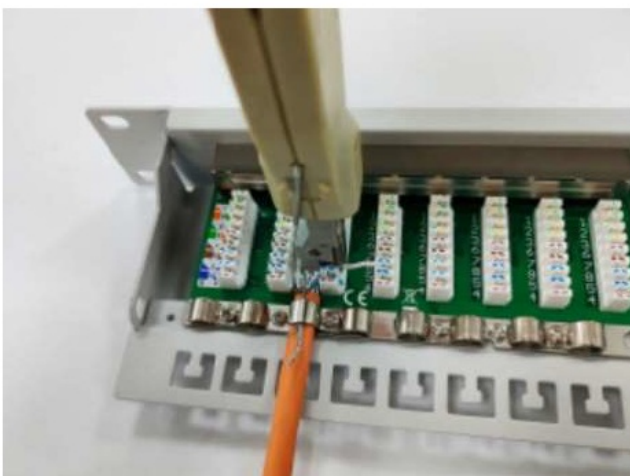

8. Apply the cable ties for strain relief and snap in the cover.

