




## ROLL A SHADE CONTRACT PLUS+ 4 Inch Bottom Fascia Installation Guide

[Home](#) » [ROLL-A-SHADE](#) » ROLL A SHADE CONTRACT PLUS+ 4 Inch Bottom Fascia Installation Guide 

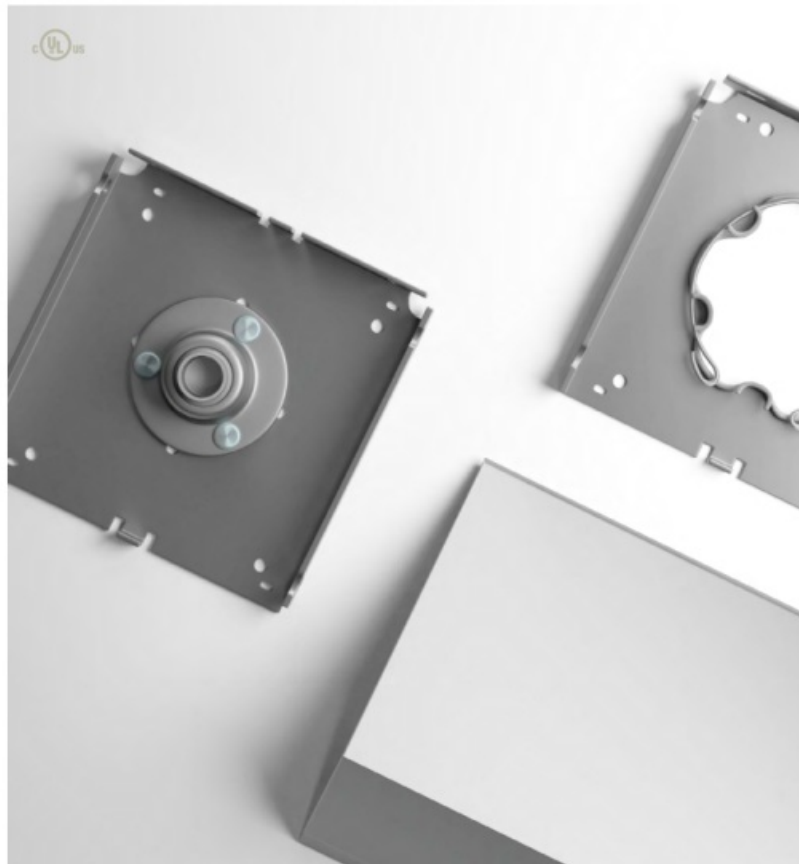


**CONTRACT PLUS+ 4" BOTTOM FASCIA  
INSTALLATION INSTRUCTIONS**

## Contents


- 1 CONTRACT PLUS+ 4 Inch Bottom Fascia
- 2 INSIDE OR OUTSIDE APPLICATION
- 3 MOUNTING LOCATION
- 4 SCREW INSTALLATION
- 5 ALIGNMENT
- 6 SHADE PIN END INSTALLATION
- 7 MOTOR END INSTALLATION
- 8 LOCK RING & FASCIA INSTALLATION
- 9 PLUG IN MOTOR
- 10 SHADE ADJUSTING (IF NECESSARY)
- 11 ADJUSTING LIMITS (IF NECESSARY)
- 12 Documents / Resources
- 12.1 References

## CONTRACT PLUS+ 4 Inch Bottom Fascia

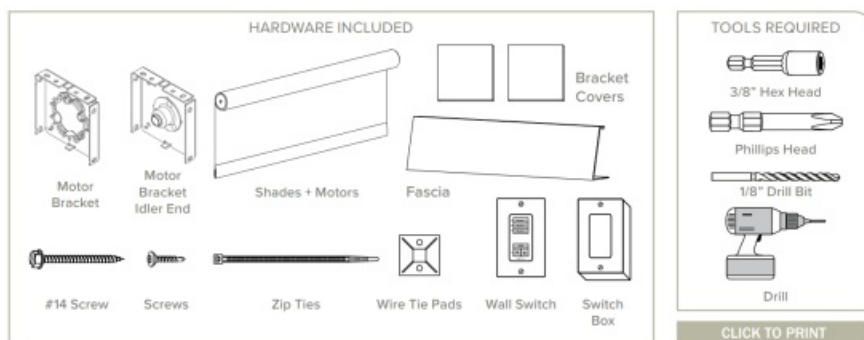

## INSIDE OR OUTSIDE APPLICATION

**\*\*NOTE:** ALL SHADES MAY BE PRE-PROGRAMMED TO SENSORS, REMOTES, AND/OR WALL SWITCHES UPON ARRIVAL \*\*

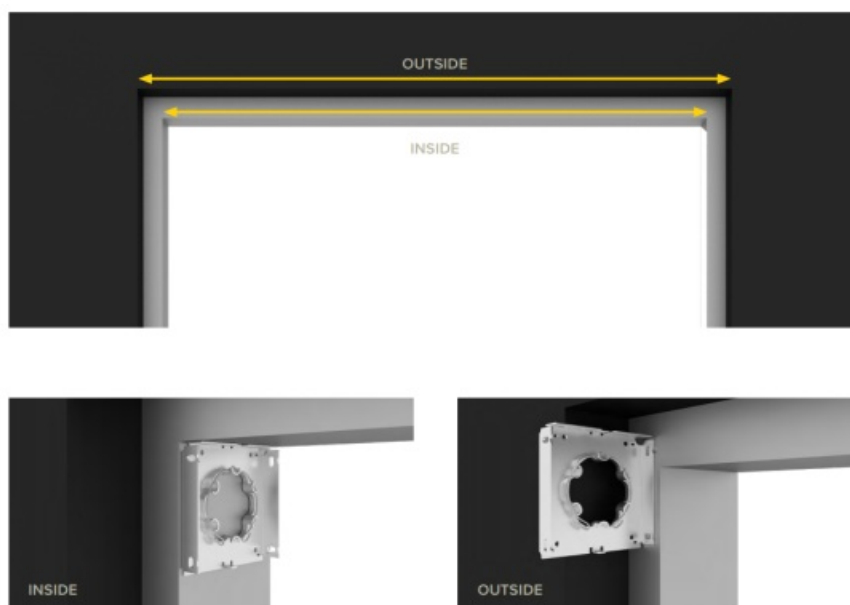

## MOUNTING LOCATION

Place your first bracket in its mounting location and mark the screw holes. Place your second bracket in its mounting location and repeat the process.



## SCREW INSTALLATION

Next, pre-drill your screw holes using a 1/8" drill bit. Install the brackets with the provided screws using the 1/4" hex head driver.




## ALIGNMENT

Check to make sure your brackets are level and aligned.




## SHADE PIN END INSTALLATION

Swivel ball bearing to align with idler shaft for easy installation. Press idler shaft all the way to the bracket.

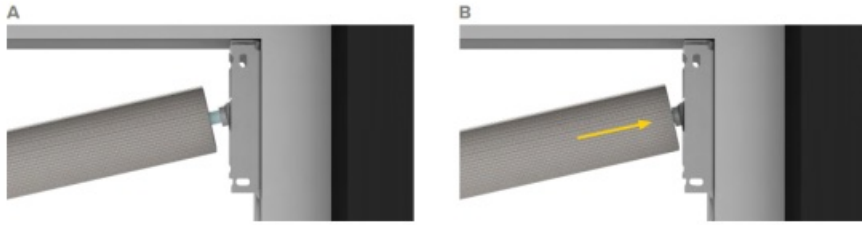


## MOTOR END INSTALLATION

Remove locking ring. Lineup to motor bracket. Push motor into motor bracket.

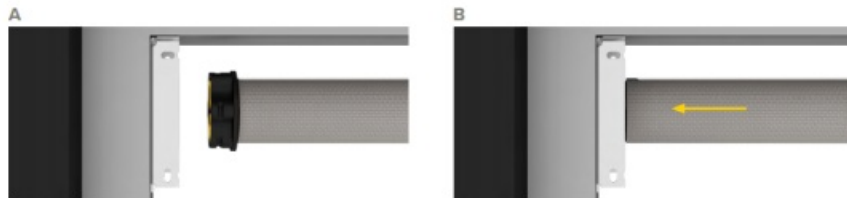

## LOCK RING & FASCIA INSTALLATION

Add locking ring to motor bracket. Check motor is secured correctly. Install bottom fascia.

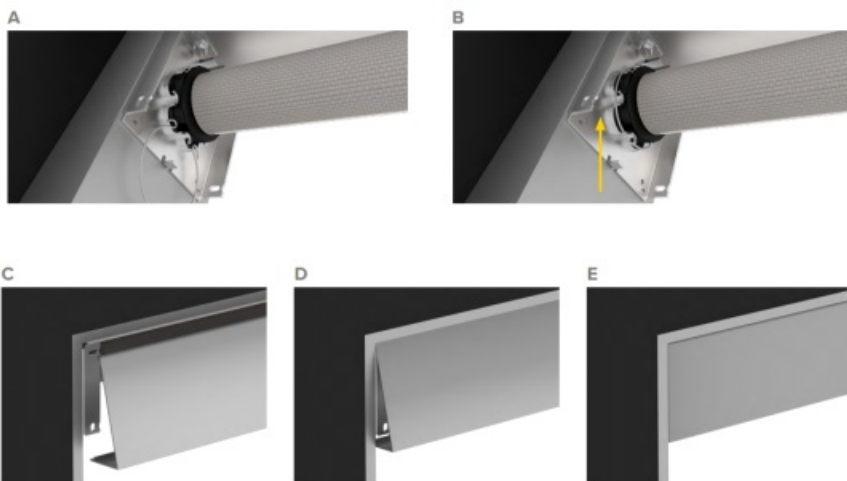


## PLUG IN MOTOR

- Run motor power cord to nearest power outlet.
- Install wire tie pads and secure with zip ties to hold wire down.
- The path of the wire should be parallel with mullions and/or drop ceiling tiles ensuring the cable is neatly organized.
- Any modifications to the power cable should be done by a certified electrician to meet your city/state code requirements.

## SHADE ADJUSTING (IF NECESSARY)

- Roll shade up and down to confirm hembar is level and material rolls up straight on center tube.
- If the hembar is not level, lower shade until you see the metal tube.

- Add layers of masking tape to the metal tube to the end that is too low until hembar is straight.
- If the material tracks to one side, lower shade until you see the metal tube.
- Add layers of masking tape to the metal tube to the end that is opposite the direction of tracking, until shade rolls up straight.

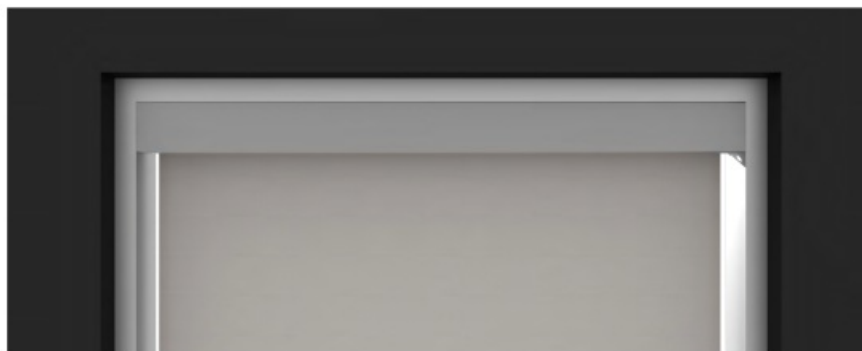


## ADJUSTING LIMITS (IF NECESSARY)


See programming instructions based on the motor used for your application.  
 RASCP4BMVER.3 5 OF 5 | © Copyright Roll A Shade® Inc. All Rights Reserved.



## Documents / Resources

 <p>CONTRACT PLUS® 4" BOTTOM FASCIA</p>	<p><a href="#">ROLL A SHADE CONTRACT PLUS+ 4 Inch Bottom Fascia</a> [pdf] Installation Guide          CONTRACT PLUS 4 Inch Bottom Fascia, CONTRACT PLUS, 4 Inch Bottom Fascia, Bottom Fascia, Fascia</p>
--	--

## References

-  [Roll A Shade - Commercial Window Shade Solutions](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.