

 **ROLL A SHADE**  
**RASCP7DBMVER.2**  
**Contract Plus 7 Dual**  
**Bottom Fascia**



# ROLL-A-SHADE RASCP7DBMVER.2 Contract Plus 7 Dual Bottom Fascia Installation Guide

[Home](#) » [ROLL-A-SHADE](#) » ROLL-A-SHADE RASCP7DBMVER.2 Contract Plus 7 Dual Bottom Fascia Installation Guide 

## Contents

- [1 ROLL-A-SHADE RASCP7DBMVER.2 Contract Plus 7 Dual Bottom Fascia](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 INSTALLATION INSTRUCTIONS](#)
- [5 MOUNTING LOCATION](#)
- [6 FAQs](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)

 **ROLL A SHADE**

**ROLL-A-SHADE RASCP7DBMVER.2 Contract Plus 7 Dual Bottom Fascia**



## Specifications

- **Product Name:** CONTRACT PLUS+ 7 DUAL BOTTOM FASCIA
- **Manufacturer:** [Rollashade.com](http://Rollashade.com)
- **Contact:** [info@rollashade.com](mailto:info@rollashade.com) | 951.245.5077
- **Hardware Included:**
  - Bracket Covers
  - Motor Bracket
  - Motor Bracket Idler End
  - #14 Screw Screws
  - Shades + Motors
  - Fascia
  - Zip Ties
  - Wire Tie Pads
  - Wall Switch
  - Switch Box
- **Tools Required:** 3/8 Hex Head, Phillips Head, 1/8 Drill Bit, Drill

## Product Usage Instructions

### Inside or Outside Application

- **NOTE:**

All shades may be pre-programmed to sensors, remotes, and/or wall switches upon arrival.
- **Outside:**


Determine if you want to install the shades on the outside of the window.
- **Inside:**

Determine if you want to install the shades on the inside of the window.
- **Mounting Location**


Place your first bracket in its mounting location and mark the screw holes. Repeat the process for the second bracket.

## INSTALLATION INSTRUCTIONS

### HARDWARE INCLUDED

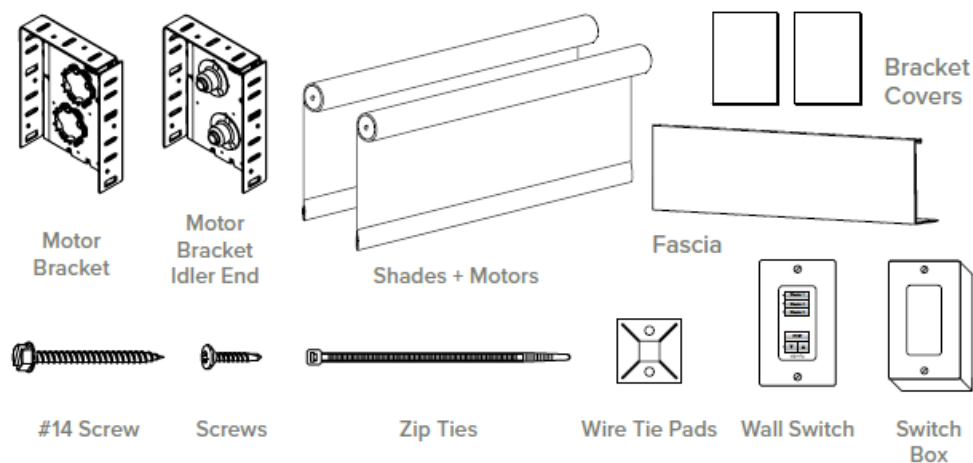



### TOOLS REQUIRED

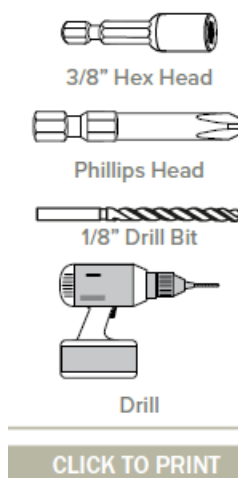




### INSIDE OR OUTSIDE APPLICATION

#### **\*\*NOTE:**

ALL SHADES MAY BE PRE-PROGRAMMED TO SENSORS, REMOTES, AND/OR WALL SWITCHES UPON ARRIVAL \*\*

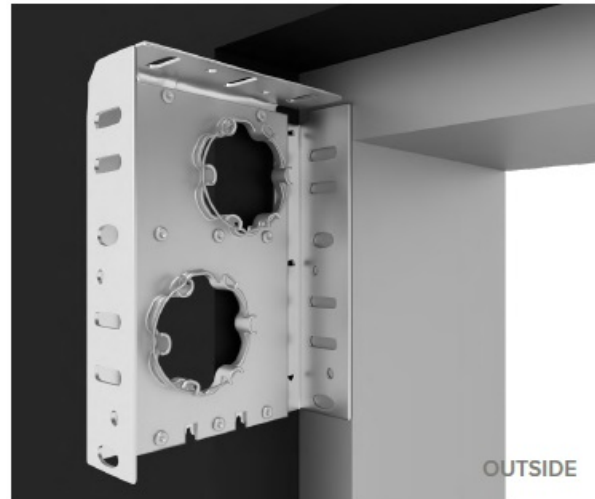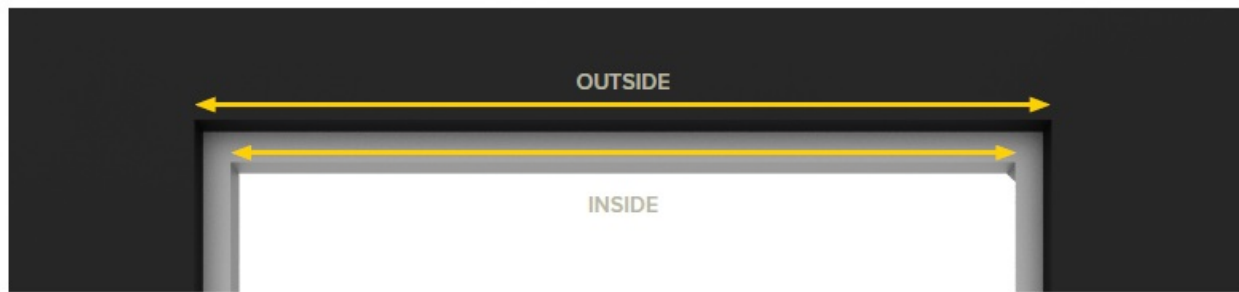


## MOUNTING LOCATION

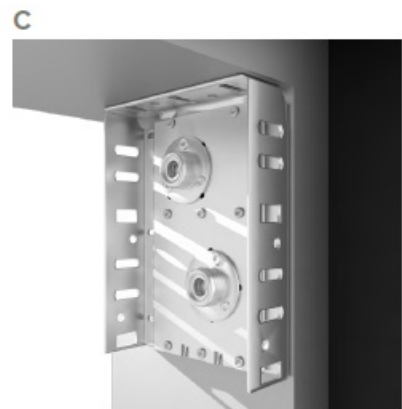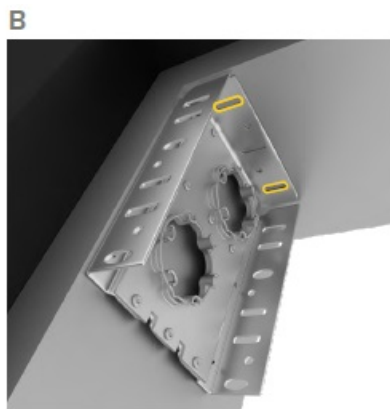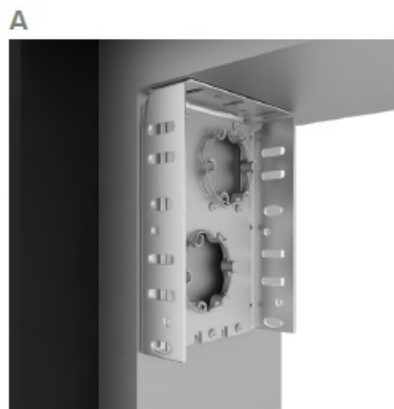

## SCREW INSTALLATION

Next, pre-drill your screw holes using a 1/8" drill bit. Install the brackets with the provided screws using the 1/4" hex head driver.

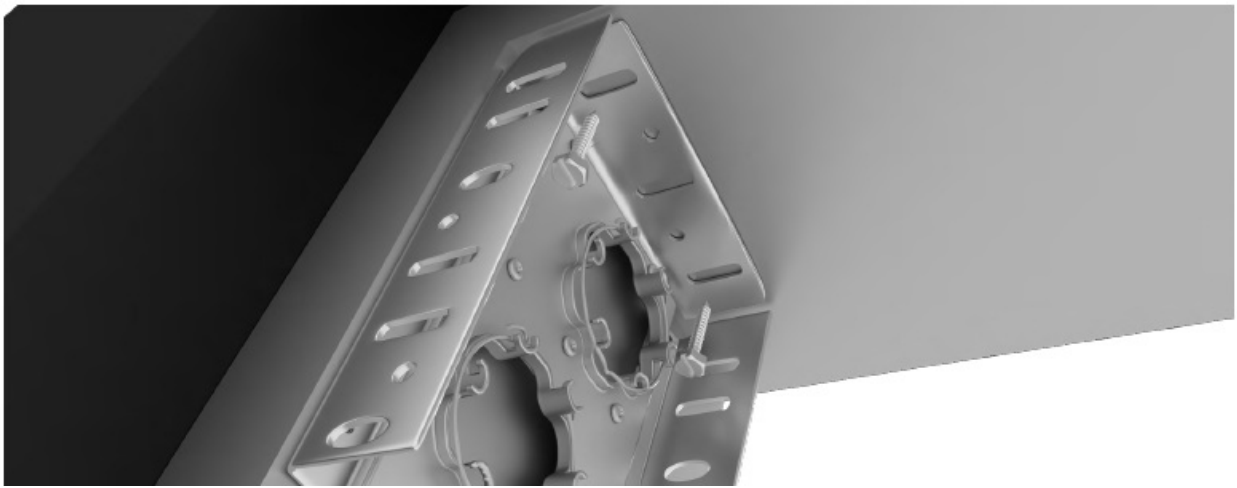

## **ALIGNMENT**

Check to make sure your brackets are level and aligned.



## **TOP SHADE PIN END INSTALLATION**

Swivel ball bearing to align with idler shaft for easy installation. Press the idler shaft to the bracket.




## **TOP MOTOR END INSTALLATION**

Remove the locking ring. Lineup to the motor bracket. Push the motor into the motor bracket.

A




B

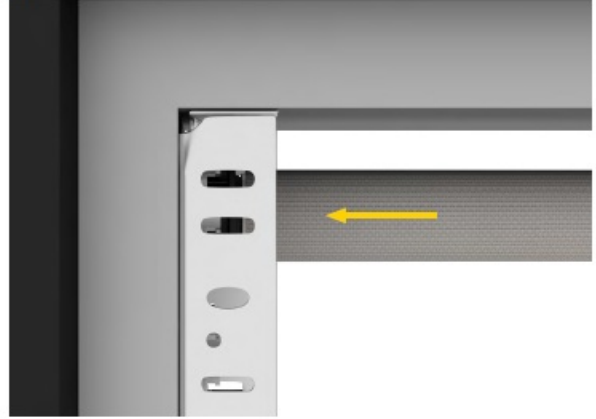


### TOP LOCK RING INSTALLATION

Add a locking ring to the motor bracket. Check the motor is secured correctly.

A

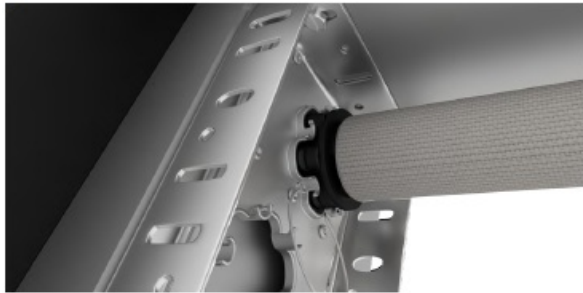

B

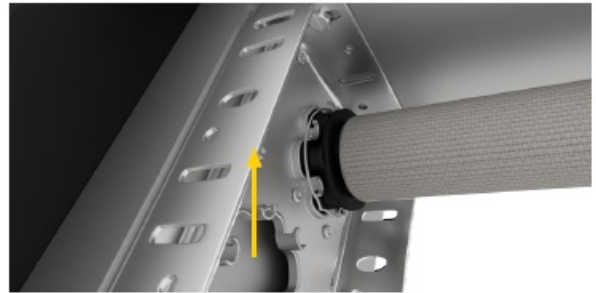

### BOTTOM SHADE PIN END INSTALLATION

Swivel ball bearing to align with idler shaft for easy installation. Press the idler shaft to the bracket.

A



B




### BOTTOM MOTOR END INSTALLATION

Remove the locking ring. Lineup to the motor bracket. Push the motor into the motor bracket.

A




B

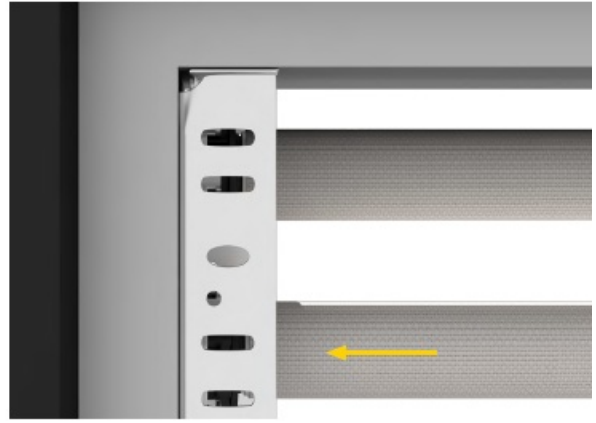


### BOTTOM LOCK RING & FASCIA INSTALLATION

Add a locking ring to the motor bracket. Check the motor is secured correctly. Install bottom fascia.

A

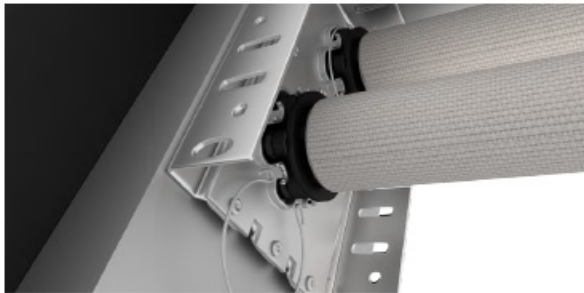

B

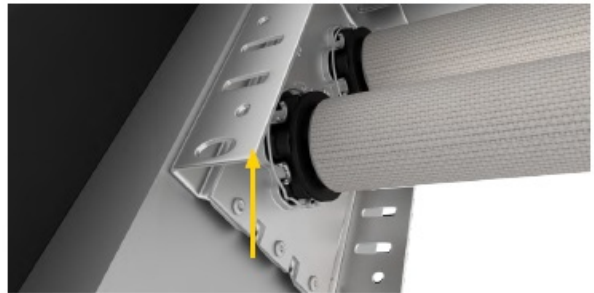


C



D



E

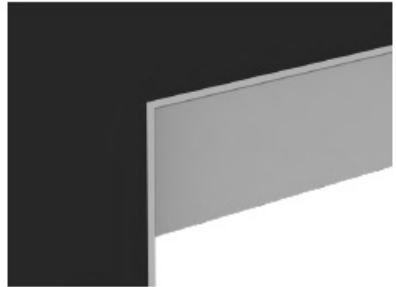


### PLUG IN MOTOR

- Run the motor power cord to the nearest power outlet.
- Install wire tie pads and secure them with zip ties to hold the wire down.
- The path of the wire should be parallel with mullions and/or drop ceiling tiles ensuring the cable is neatly organized.
- Any modifications to the power cable should be done by a certified electrician to meet your city/state code requirements.



### SHADE ADJUSTING (IF NECESSARY)

- Roll shade up and down to confirm the hembar is level and the material rolls up straight on the center tube.
- If the member is not level, lower the shade until you see the metal tube.
- Add layers of masking tape to the metal tube to the end that is too low until the member is straight.
- If the material tracks to one side, lower the shade until you see the metal tube.
- Add layers of masking tape to the metal tube to the end that is opposite the direction of tracking, until the shade rolls up straight.

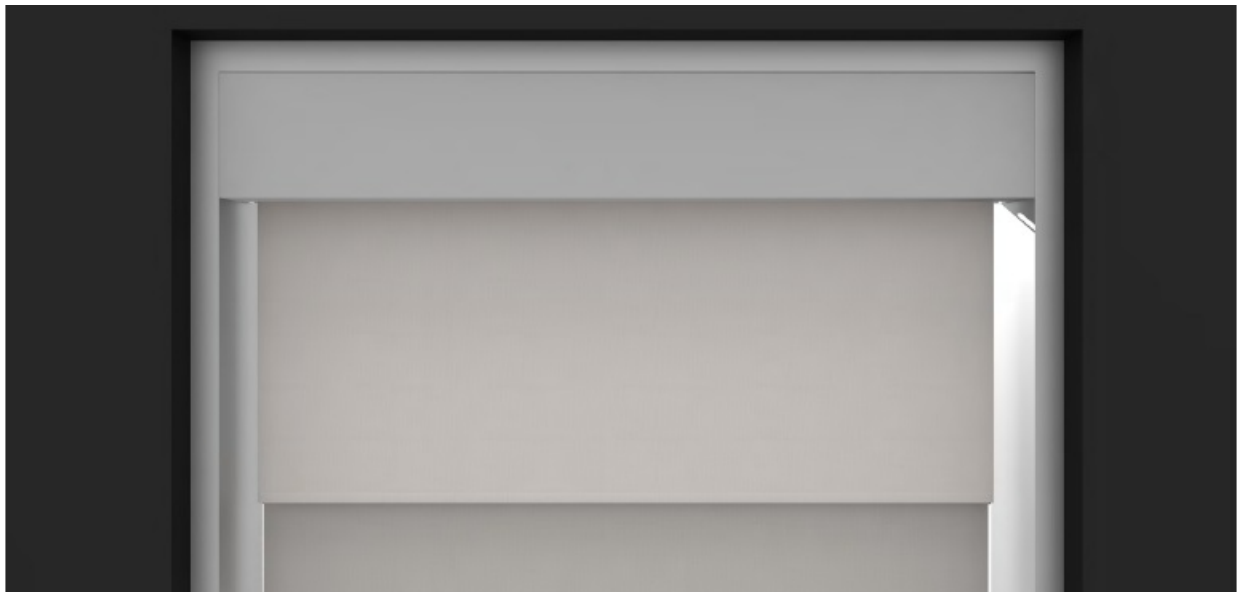

### ADJUSTING LIMITS (IF NECESSARY)

See programming instructions based on the motor used for your application.

- RASCP7DBMVER.2 6 OF 6
- © Copyright Roll A Shade® Inc. All Rights Reserved.
- [Rollashade.com](http://Rollashade.com)
- [info@rollashade.com](mailto:info@rollashade.com)
- 951.245.5077

### FAQS

- **Q: How do I adjust the shade if it doesn't roll up straight?**



**A:** You can adjust the shade by gently guiding it in the direction of tracking until it rolls up straight.

- **Q: What should I do if I need to adjust the limits of the shade?**

**A:** Please refer to the programming instructions specific to the motor used for your application to adjust the limits of the shade.

## Documents / Resources



[ROLL-A-SHADE RASCP7DBMVER.2 Contract Plus 7 Dual Bottom Fascia](#) [pdf] Installation Guide

RASCP7DBMVER.2 Contract Plus 7 Dual Bottom Fascia, RASCP7DBMVER.2, Contract Plus 7 Dual Bottom Fascia, Dual Bottom Fascia, Bottom Fascia, Fascia

## References

- [🔍 Roll A Shade - Commercial Window Shade Solutions](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.