

ROLL-A-SHADE RASPSORMLVER.2 Plus Shade Open Roll Instruction Manual

Home » ROLL-A-SHADE » ROLL-A-SHADE RASPSORMLVER.2 Plus Shade Open Roll Instruction Manual



ROLL-A-SHADE RASPSORMLVER.2 Plus Shade Open Roll




Contents


- **1 HARDWARE INCLUDED**
- **2 TOOLS REQUIRED**
- **3 INSIDE OR OUTSIDE APPLICATION**
- **4 MOUNTING LOCATION**
- **5 SCREW INSTALLATION**
- **6 ALIGNMENT**
- **7 SHADE PIN END INSTALLATION**
- **8 CLUTCH END & TENSION DEVICE INSTALLATION**
- **9 COMPLETED INSTALLATION**
- **10 TENSION DEVICE**
 - 10.1 INSIDE MOUNT & TENSION DEVICE INSTALLATION
 - **10.2 OUTSIDE MOUNT & TENSION DEVICE**
 - **INSTALLATION**
 - **10.3 Customer Support**
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

HARDWARE INCLUDED


• Shade + Clutch + Chain + Tension Device

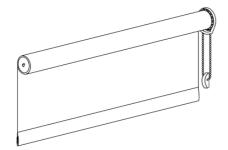

Brackets

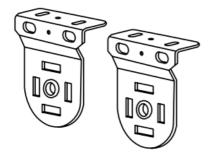


• Bracket Covers

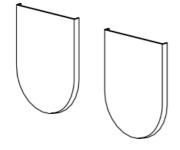

• #14 Screw




• Screws




TOOLS REQUIRED

• 3/8" Hex Head




• Phillips Head



• 1/8" Drill Bit



• Drill

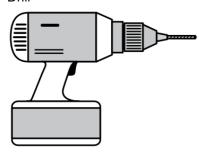


CLICK TO PRINT

INSIDE OR OUTSIDE APPLICATION

NOTE: ALL SHADES MAY BE PRE-PROGRAMMED TO SENSORS, REMOTES, AND/OR WALL SWITCHES UPON ARRIVAL



Place your first bracket in its mounting location and mark the screw holes. Place your second bracket in its mounting location and repeat the process.

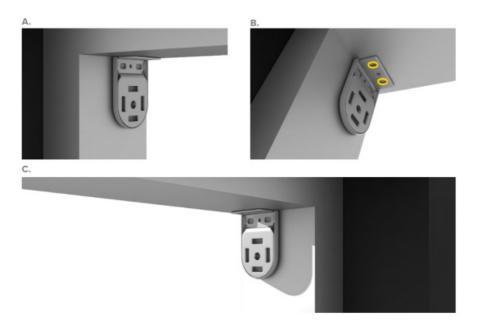

SCREW INSTALLATION

Next, pre-drill your screw holes using a 1/8" drill bit. Install the brackets with the provided screws using the 1/4" hex head driver.




ALIGNMENT

Check to make sure your brackets are level and aligned.



SHADE PIN END INSTALLATION

Depress pin end and slide onto bracket until pin engages in center hole. Press idler shaft all the way to the bracket.

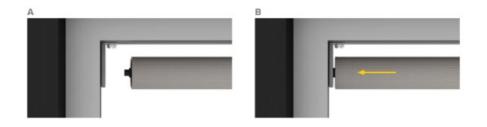

CLUTCH END & TENSION DEVICE INSTALLATION

Lineup to clutch bracket. Push clutch into clutch bracket. Install tension device.



COMPLETED INSTALLATION






TENSION DEVICE


INSTALLATION INSTRUCTIONS

HARDWARE INCLUDED

• Tension Device + Chain



• Tension Device Bracket

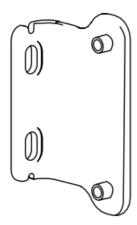

• Short Screws






• Screws






TOOLS REQUIRED

• 3/8" Hex Head




• Phillips Head



• 1/8" Drill Bit



• Drill

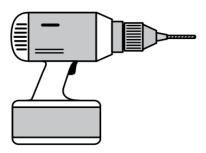

INSIDE OR OUTSIDE APPLICATION



INSIDE



OUTSIDE




INSIDE MOUNT & TENSION DEVICE INSTALLATION

Pull the Chain hold down until the chain is fully tensioned (plunger will be fully raised). Screw device into wall.





В

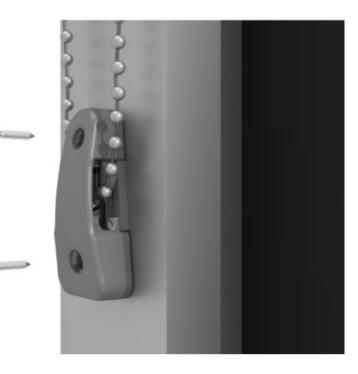






NOTE: Please make sure shade operates smoothly.

OUTSIDE MOUNT & TENSION DEVICE INSTALLATION

With provided screws, install bracket first with large screws (use Chain hold marked screw hole locations as reference). Pull the Chain hold down until the chain is fully tensioned (plunger will be fully raised). Install Chain hold into bracket with small screws.

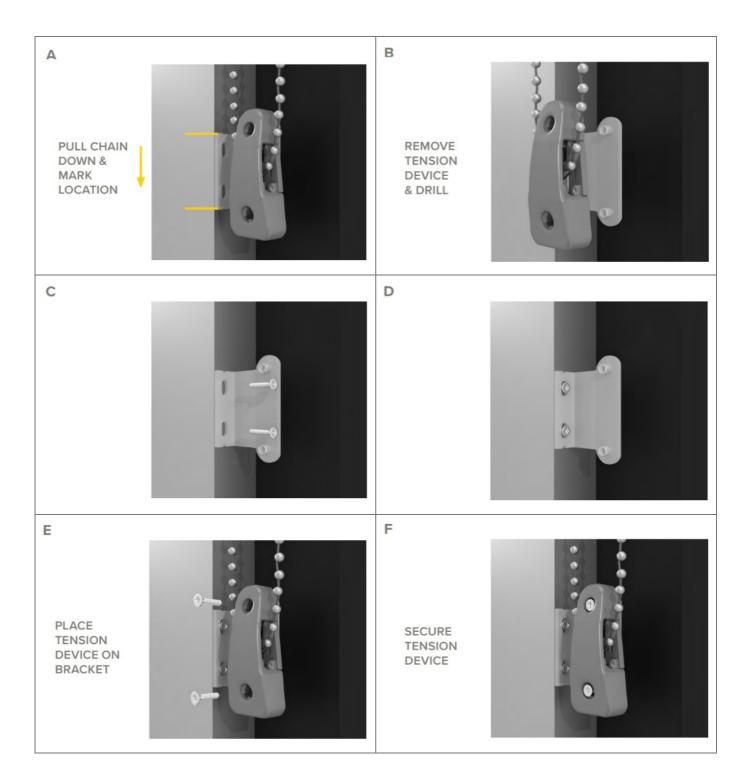

Customer Support

Rollashade.com info@rollashade.com 951.245.5077

© Copyright Roll A Shade® Inc. All Rights Reserved.





ROLL-A-SHADE RASPSORMLVER.2 Plus Shade Open Roll [pdf] Instruction Manual RASPSORMLVER.2 Plus Shade Open Roll, RASPSORMLVER.2 Plus, Shade Open Roll, Open Roll

References

- QRoll A Shade Commercial Window Shade Solutions
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.