











ROLLA SHADE RASCPMLVER.1 Installation Contract Plus Cassette Instruction Manual

[Home](#) » [ROLLA SHADE](#) » ROLLA SHADE RASCPMLVER.1 Installation Contract Plus Cassette Instruction Manual 

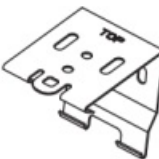

Cassette Installation Instructions


Hardware Included			Tools Required
Self Tapping Screws for Aluminum	Plastic Connectors	Brackets	Drill
			1/4" Hex Head Phillips Head
Self Tapping Phillips Screws for Tension Device	or		
	Metal Stop Ball		
Wood Screws (If Requested)			
			

Contents

- [1 Release Tab and Bottom Hooks](#)
- [2 Install Bracket](#)
- [3 Mount the Headrail](#)
- [4 Shade Adjusting \(If Necessary\)](#)
- [5 Install Plastic Connectors or Metal Stop Ball to Bead Chain](#)
- [6 Install the Chain Anchor](#)
- [7 TENSION DEVICE](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)


Release Tab and Bottom Hooks

Make sure the release tab is always mounted on the top and the bottom hooks are on the bottom.

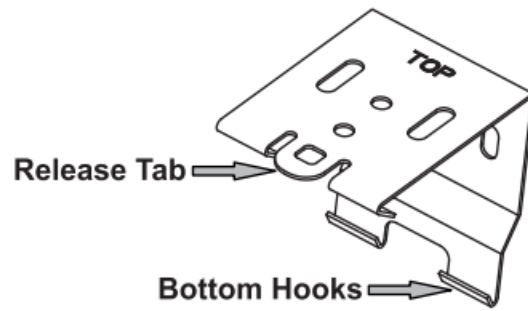


Install Bracket

Attach the brackets to the window frame, window molding, wall or ceiling with @ minimum .25" gap to any perpendicular surface per diagrams. Two screws must be installed in each bracket as shown.

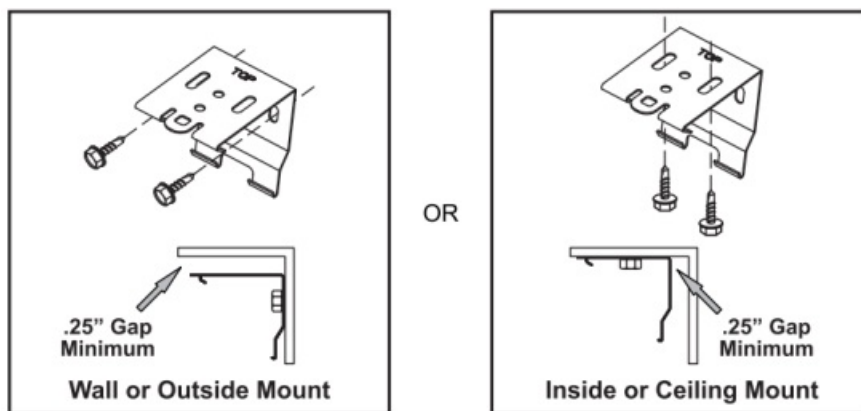


Mount the Headrail

Position the headrail with the back panel (A) resting on both bottom hooks of all brackets. Push the front of the headrail firmly upwards and toward the window until the groove at the top of the headrail snaps into place, (B) as shown.

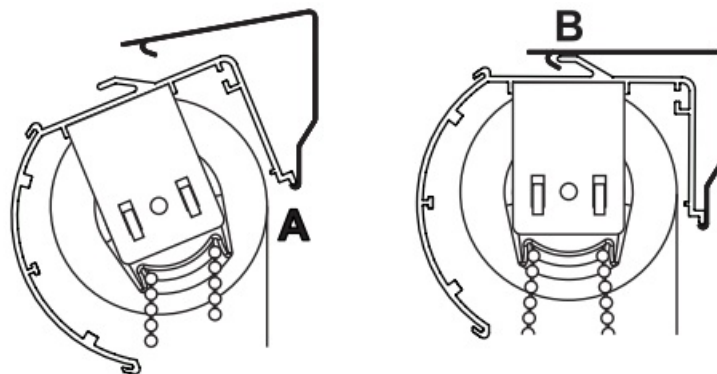


Shade Adjusting (If Necessary)

Roll shade up and down to confirm bottom rail is level and material rolls up straight on center tube. If the bottom rail is not level, lower shade until you see the metal tube. Add layers of masking tape to the metal tube to the end that is too low until bottom rail is straight. If the material tracks to one side, lower shade until you see the metal tube. Add layers of masking tape to the metal tube to the end that is opposite the direction of tracking, until shade rolls up straight.

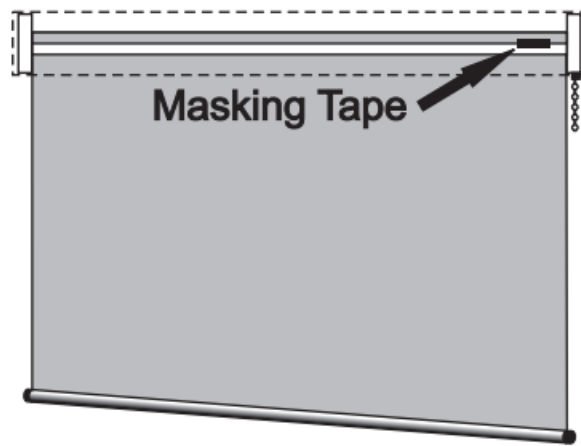

Install Plastic Connectors or Metal Stop Ball to Bead Chain

Pull the rear chain to lower the shade to appropriately 1/4" above sill and attach connector or stop ball to upper most bead on front chain closest to the clutch. By attaching this connector or stop ball you will set how far the shade will lower. Pull the front chain and raise the shade so the bottom rail is 5" below the shade and attach a connector or stop ball on the back chain at upper most bead.


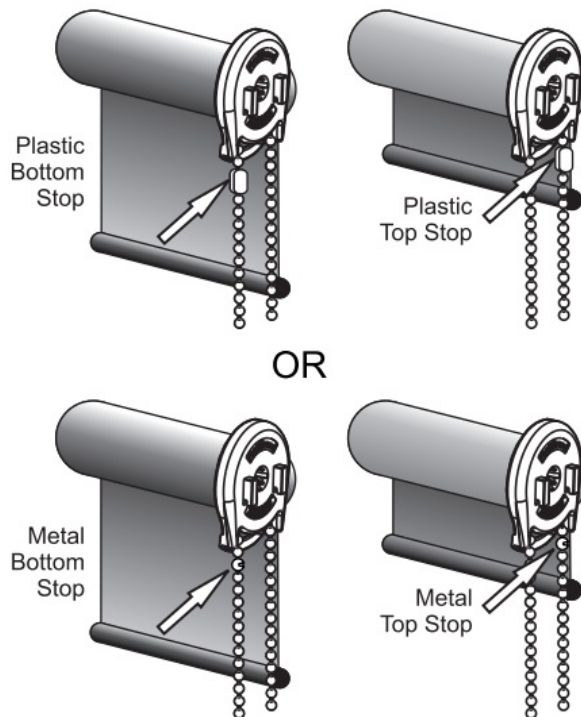


Install the Chain Anchor

The chain anchor is a plastic piece that is attached to the chain to secure it from possible accidents. Position the chain anchor on the window frame so that the chain anchor and chain do not interfere with raising or lowering the shade. The chain anchor should be installed without stretching or pulling down on the chain. Leave a little play through the chain anchor to allow the chain to pass freely. Do not twist or cross the bead chain.

Secure the anchor with Phillips screws in both upper and lower holes.

Warning: Failure to use the tension device may cause injury or death.

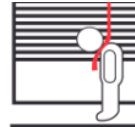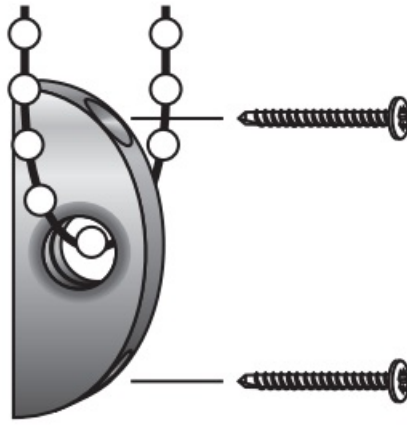

Window Blind Cord Can STRANGLE Your Child

- Children can climb furniture to reach cords
- Move cribs and other furniture away.
- Keep all cords out of children's reach.
- Attach tension device to wall or floor.
- Fasteners provided with the tension device may not be appropriate for all mounting surfaces.
- Use appropriate anchors for the mounting surface conditions.



TENSION DEVICE


INSTALLATION INSTRUCTIONS

Rollashade.com


info@rollashade.com

951.245.5077

Copyright Roll A Shade" Inc. All Rights Reserved

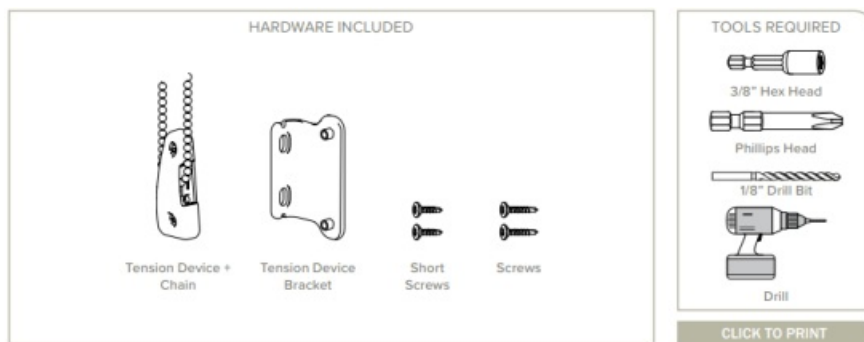


INSIDE OR OUTSIDE APPLICATION

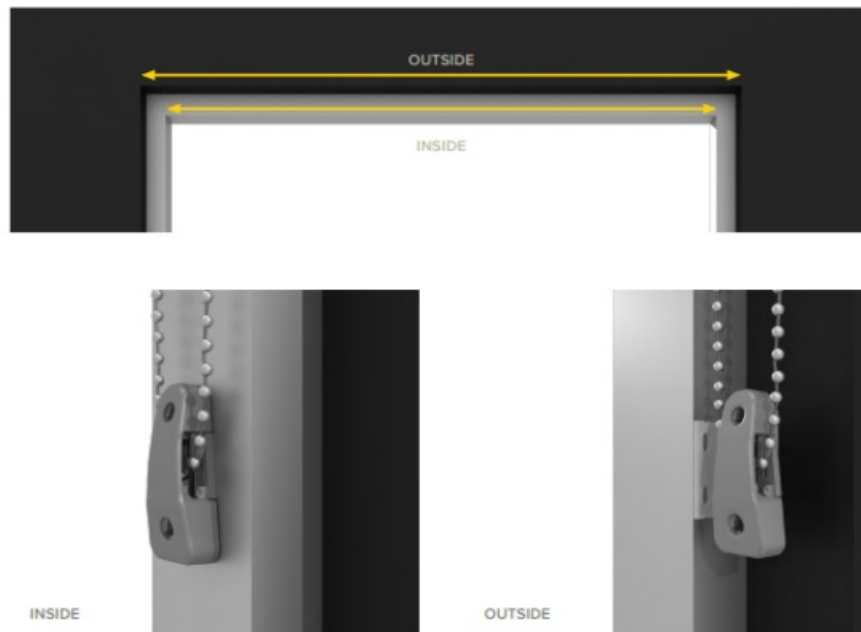

INSIDE MOUNT & TENSION DEVICE INSTALLATION

Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Screw device into wall

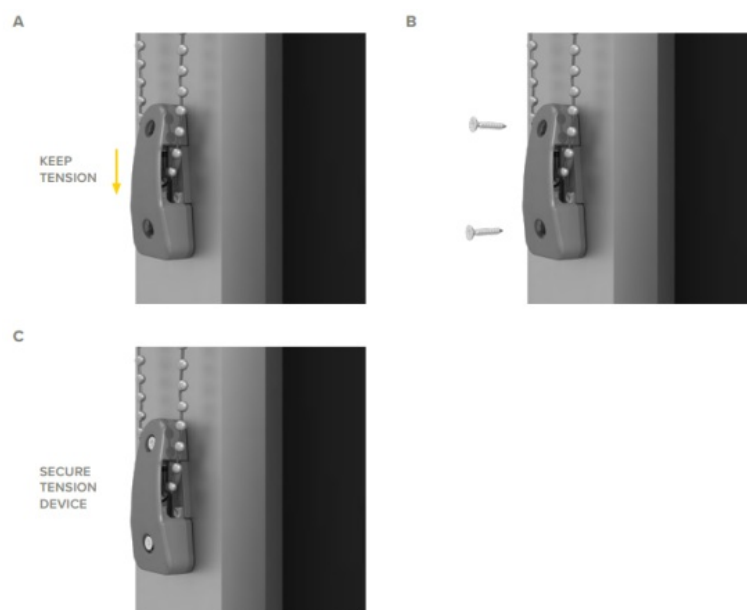


NOTE: Please make sure shade operates smoothly.

OUTSIDE MOUNT & TENSION DEVICE INSTALLATION

With provided screws, install bracket first with large screws (use Chainhold marked screw hole locations as

reference). Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Install Chainhold into bracket with small screws

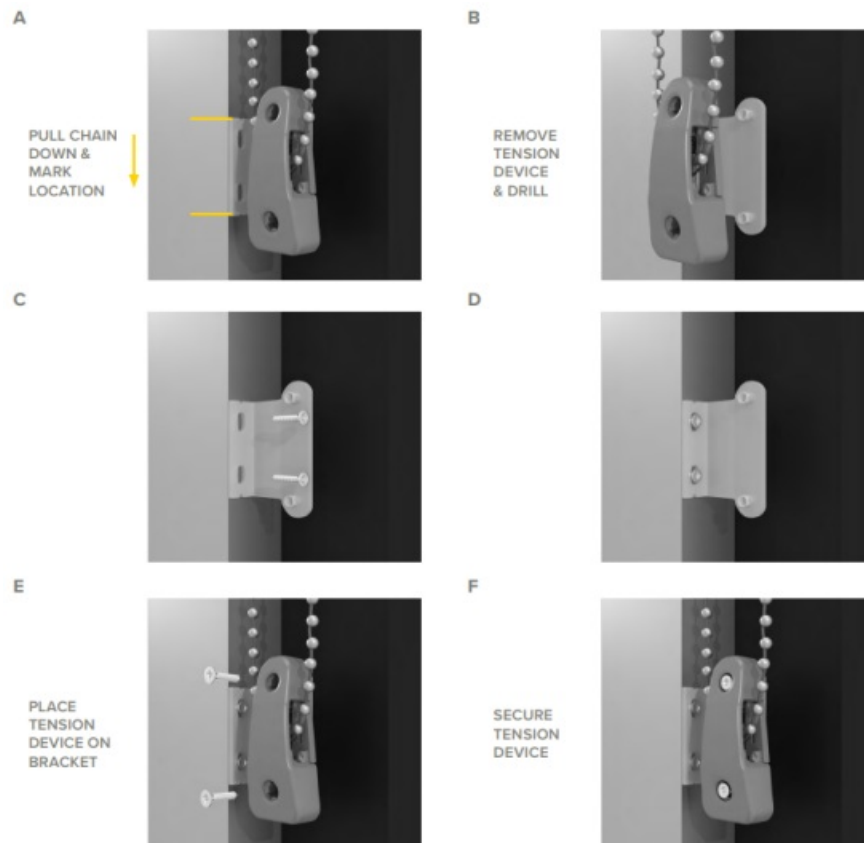

NOTE: Please make sure shade operates smoothly.

RASTDV2VER:2 4 OF 4
© Copyright Roll A Shade" Inc.
All Rights Reserved
12101 Madera Way, Riverside, CA 92503
[951-245-5077](tel:951-245-5077)
Fax: [951-245-5075](tel:951-245-5075)
7240 Woodbine Ave.
Suite 215 Markham, ON. L3R 1A4
[888-245-5077](tel:888-245-5077)
Canadian Sales Office

Documents / Resources

	<p>ROLLA SHADE RASCPMLVER.1 Installation Contract Plus Cassette [pdf] Instruction Manual</p> <p>RASCPMLVER.1 Installation Contract Plus Cassette, RASCPMLVER.1, Installation Contract Plus Cassette, Contract Plus Cassette, Plus Cassette</p>
---	--

References

- [Roll A Shade - Commercial Window Shade Solutions](#)
- [Roll A Shade - Commercial Window Shade Solutions](#)
- [User Manual](#)

Manuals+. Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.