Manuals+ — User Manuals Simplified.

Tension Device
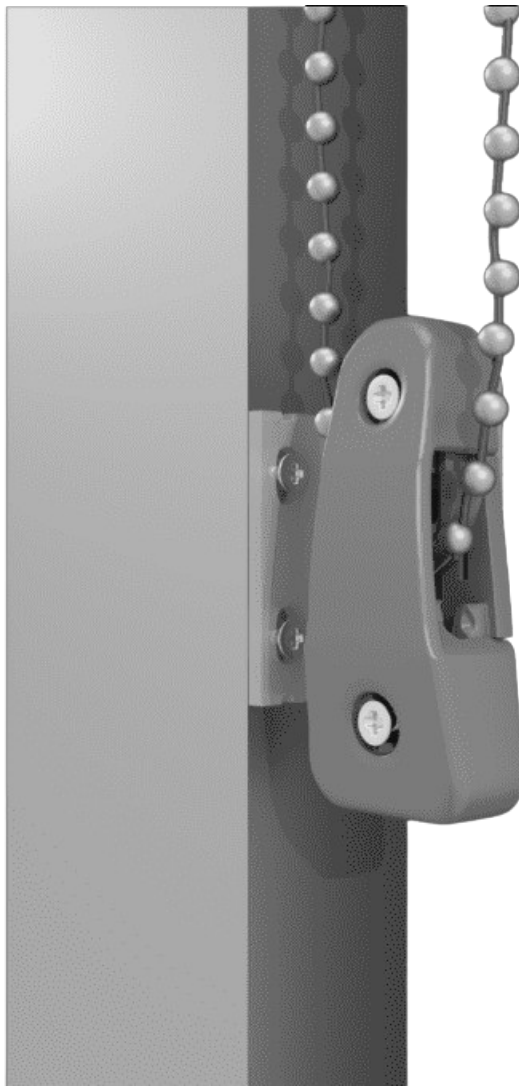
Rollashade Tension Device Instruction Manual

Contents

Rollashade Tension Device

Product Specifications

- **Tension Device:** Included
- **Hardware:** Tension Device + Chain, Tension Device Bracket, Short Screws, Screws
- **Tools Required:** 3/8 Hex Head, Phillips Head, 1/8 Drill Bit, Drill
- **Application:** Inside or Outside

Product Usage Instructions

Inside Mount & Tension Device Installation

1. Pull the chainhold down until the chain is fully tensioned (plunger will be fully raised).
2. Screw the device into the wall.
3. Keep tension and secure the tension device.
4. **NOTE:** Please make sure the shade operates smoothly.

Outside Mount & Tension Device Installation

1. With provided screws, install the bracket first with large screws (use Chainhold marked screw hole locations as reference).

2. Pull the chainhold down until the chain is fully tensioned (plunger will be fully raised).

3. Install Chainhold into the bracket with small screws.

4. Pull chain down & mark location

5. Remove tension device & drill

6. Place tension device on bracket

7. Secure the tension device

8. **NOTE:** Please make sure the shade operates smoothly.

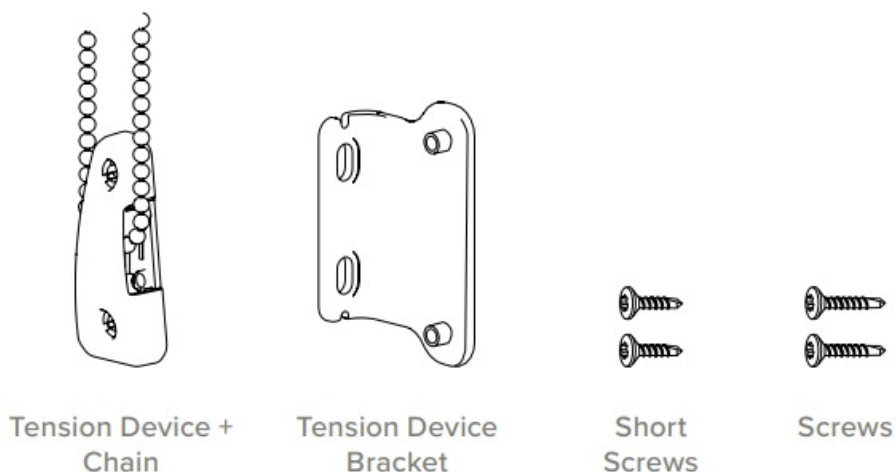## Frequently Asked Questions

- **Q: What tools are required for installation?**
    - A: The tools required for installation are 3/8 Hex Head, Phillips Head, 1/8 Drill Bit, and a Drill.
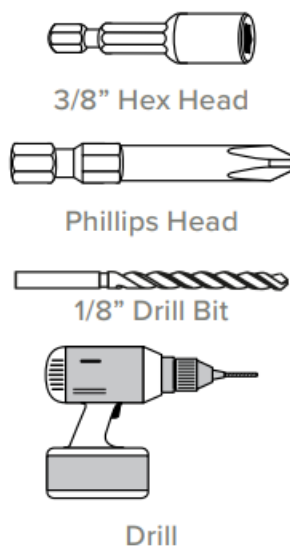- **Q: How do I know if the tension device is securely installed?**
    - A: Ensure that the plunger is fully raised and the chain is fully tensioned. Test the shade to ensure it operates smoothly.
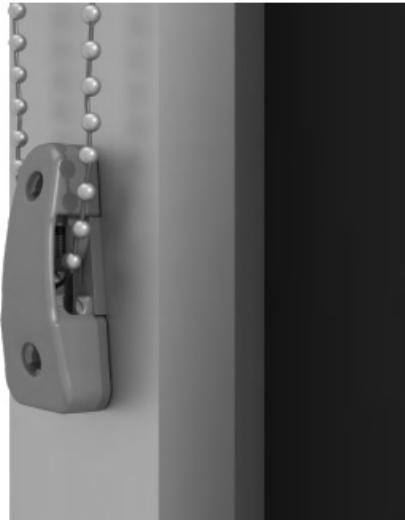
HARDWARE INCLUDED

Tension Device + Chain

Tension Device Bracket

Short Screws

Screws

TOOLS REQUIRED

3/8" Hex Head

Phillips Head

1/8" Drill Bit

Drill

INSIDE OR OUTSIDE APPLICATION

OUTSIDE

INSIDE

INSIDE

OUTSIDE

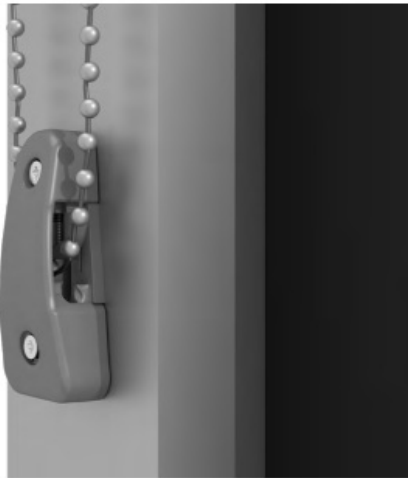## INSIDE MOUNT & TENSION DEVICE INSTALLATION

Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Screw device into wall

A

KEEP
TENSION

B

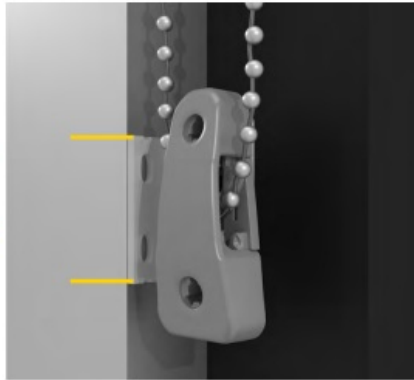
C

SECURE
TENSION
DEVICE

NOTE: Please make sure shade operates smoothly

OUTSIDE MOUNT & TENSION DEVICE INSTALLATION

With provided screws, install bracket first with large screws (use Chainhold marked screw hole locations as reference). Pull the Chainhold down until the chain is fully tensioned (plunger will be fully raised). Install Chainhold into bracket with small screws
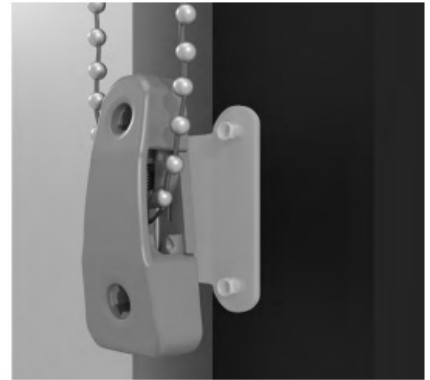
A

PULL CHAIN
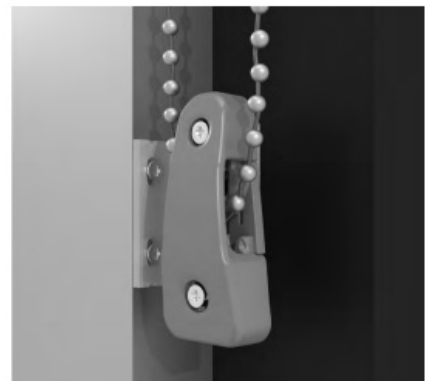DOWN &
MARK
LOCATION

B

REMOVE
TENSION
DEVICE
& DRILL

C

D

E

PLACE
TENSION
DEVICE ON
BRACKET

F

SECURE
TENSION
DEVICE

- **Rollashade.com**
- **info@rollashade.com**
- 951.245.5077

Documents / Resources

	Rollashade Tension Device [pdf] Instruction Manual Tension Device, Tension Device, Device

References

- ⛵ **Roll-A-Shade - Commercial Window Shade Solutions**

- **User Manual**