

RYNOSKIN RSFB-JK0001 Standard Width Front Bumper



RYNOSKIN RSFB-JK0001 Standard Width Front Bumper Instruction Manual


[Home](#) » [RYNOSKIN](#) » RYNOSKIN RSFB-JK0001 Standard Width Front Bumper Instruction Manual 

Contents

- [1 RYNOSKIN RSFB-JK0001 Standard Width Front Bumper](#)
- [2 Product Information](#)
- [3 TOOLS REQUIRED](#)
- [4 PARTS LIST](#)
- [5 PROCEDURE](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)




RYNOSKIN RSFB-JK0001 Standard Width Front Bumper

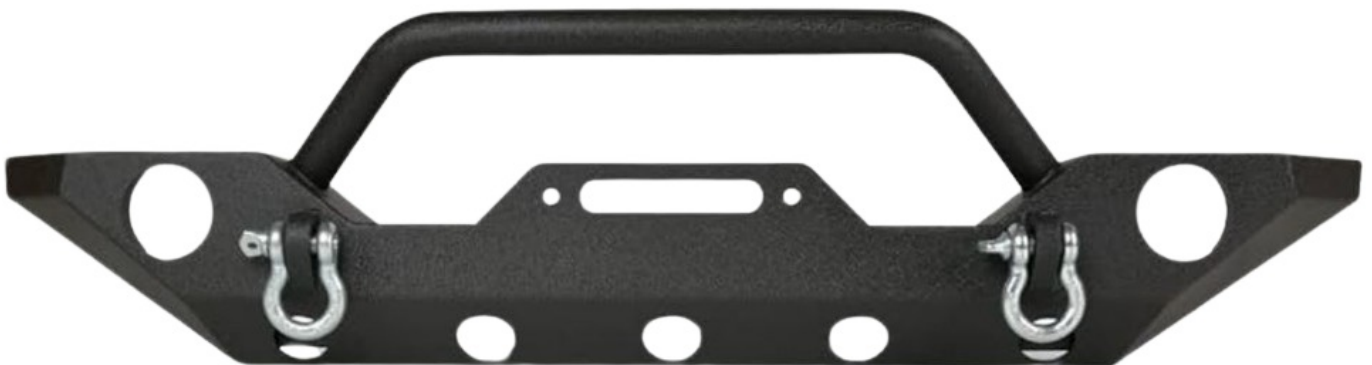

Fits

2007-2018 Wrangler JK/ 2018-2024 Jeep Wrangler JL (Excl. Rubicon/plug-in hybrid models/2021-2024 V8 engine)
/ 2020-2024 Jeep Gladiator(Excl. Mojave trim)

Product Information

-  90-180 min
 - Installation time is different according to individual person.

-  Cutting Not Required

-  Drilling Not Required

TOOLS REQUIRED



- Flat SCREW DRIVER
- RATCHET SOCKET SET
- TORQUE WRENCH
- ALLEN WRENCH (PROVIDED)
- TRIM PANEL REMOVAL TOOL

DO NOT OVER TORQUE. PLEASE FOLLOW THE TIGHTEN OPERATING LOAD STANDARD BELOW:

















- **6mm BOLTS & NUTS:** FROM 7 TO 8.5 FOOT POUND.
- **8mm BOLTS & NUTS:** FROM 18 TO 20 FOOT POUND.
- **10mm BOLTS & NUTS:** FROM 35 TO 40 FOOT POUND.
- **12mm BOLTS & NUTS:** FROM 60 TO 70 FOOT POUND.





TO PROTECT YOUR INVESTMENT, DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES THAT COULD DAMAGE THE FINISH. MILD SOAP MAY BE USED TO CLEAN THE PRODUCT.

PARTS LIST

Description	Qty	Image	Remark
Bumper	1		
3/4"D-Rings	2		
Plastic Retainers	4		
Fog Light Brackets	2		
M12*35 Combo Bolts	4		
M12x35mm Bolts	4		
M12 Nuts	4		
M12 Flat Washers	8		
M12 Lock Washers	8		
M4x15mm Button Head Bolts	12		Use the provided S=2.5 allen wrench to tighten
M4 Flat Washers	20		
M4 Lock Washers	12		
M4 Nuts	8		
S=2.5 Allen Wrench	1		Use for 4mm hardware

Parts

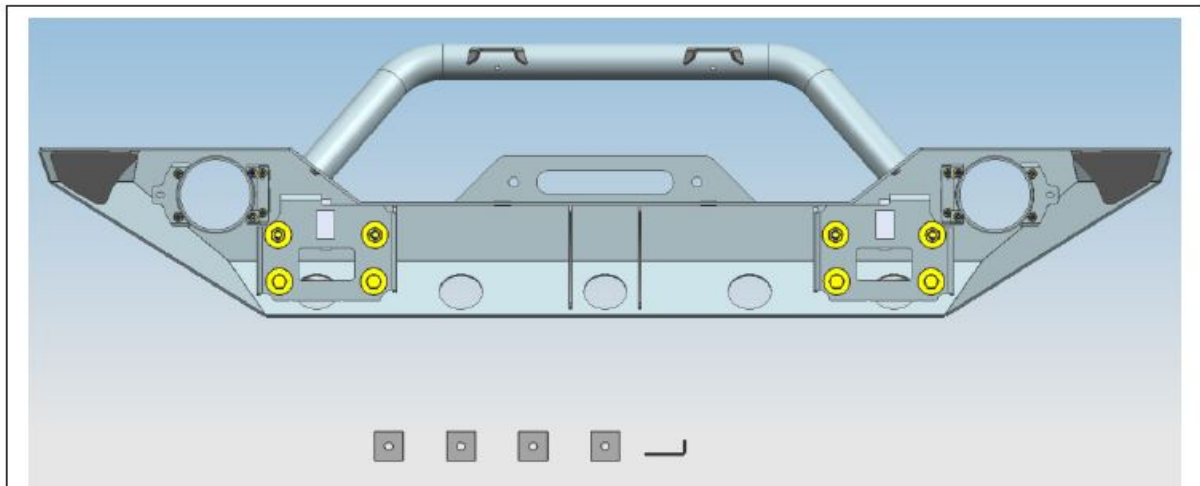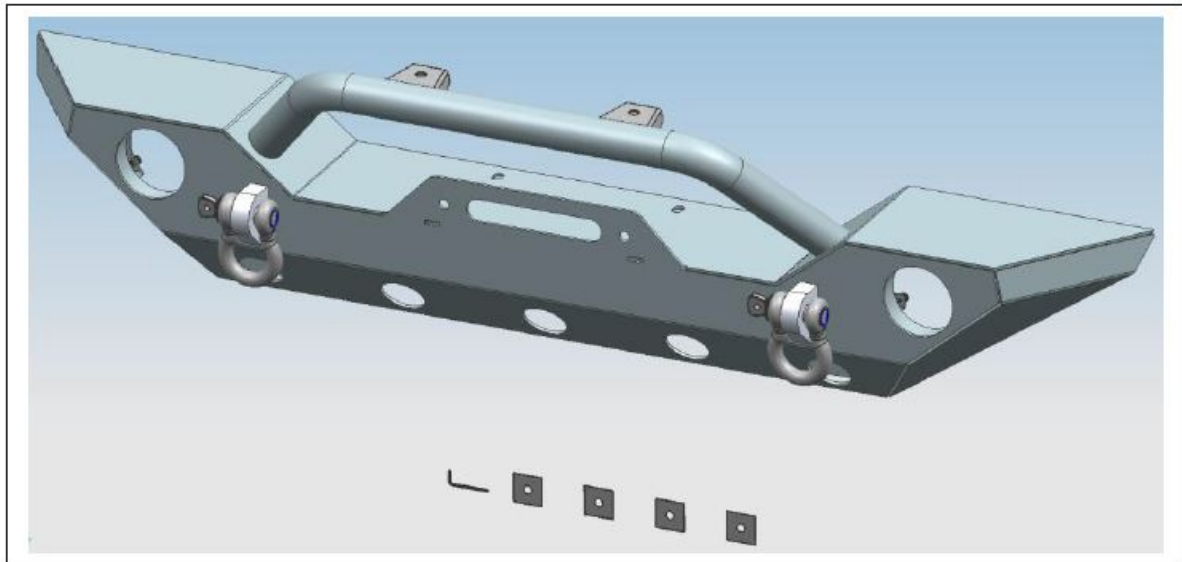

PROCEDURE

1. REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY. FACTORY INSTALLED OR AFTERMARKET FRONT BUMPERS MUST BE REMOVED.



(Fig 1) Remove the (6) plastic push pins securing the factory splash shield to the vehicle



(Fig 2) From under the vehicle, remove the factory fog light connectors and free the fog light wiring loom from the bumper.



(Fig 3) From under the vehicle, access and remove the (8) 18mm nuts securing the factory bumper to the vehicle.





(Fig 4) Remove the 2 push pins holding the top cover onto the vehicle.


2. Remove the (6) plastic push pins securing the factory splash shield to the vehicle: (4) Across the front edge, (2) on the rear edge. (Figures 1)
3. From under the vehicle, remove the factory fog light connectors and free the fog light wiring loom from the bumper. (Figures 2)
4. From under the vehicle, access and remove the (8) 18mm nuts securing the factory bumper to the vehicle. (Figures 3)
5. Remove the 2 push pins holding the top cover onto the vehicle. (Figures 4)



(Fig 5) Remove the (8) 7mm screws securing the fog lights to the factory front bumper.

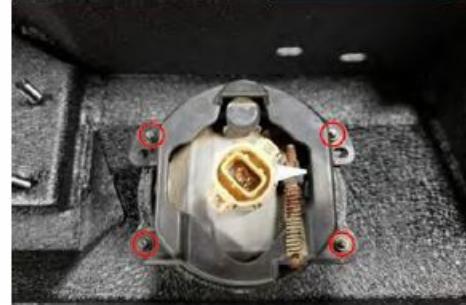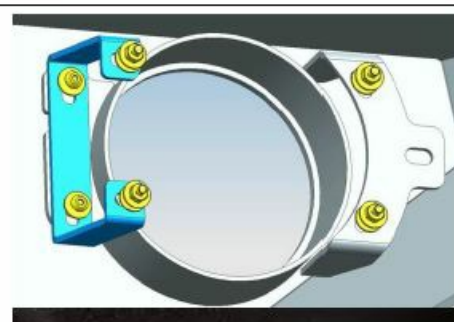


(Fig 6) Install the fog light using (6) M4 Bolts, (10) M4 Flat Washers, (6) M4 Lock Washers, and (4) M4 Nuts. Repeat the process for both fog lights.

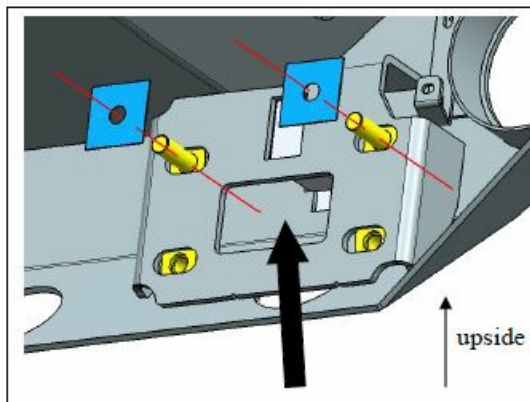


(Fig 7) Slide the (2) M12 combo Bolts in place (shown in picture) through the open square in the Bumper, and hold them with (2) Plastic Retainers. Repeat this process for both bracket parts.

6. Remove the (8) 7mm screws securing the foglights to the factory front bumper. (Figures 5)
7. Install the fog light bracket using 6 M4 Bolts, 10 M4 Flat Washers, 6 M4 Lock Washers, and 4 M4 Nuts. Repeat this process for both fog lights. (Figures 6)
8. Slide the (2) M12 combo Bolts in place (shown in picture) through the open square in the Bumper, and hold them with (2) Plastic Retainers. Repeat this process for both bracket parts. (Figures 7)

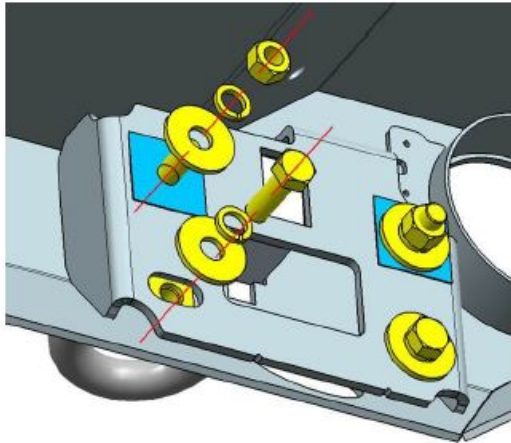


(Fig 8) Slide the bumper in place. Using the supplied M12 hardware, secure each side of the bumper to the vehicle using (4) M12 Nuts, (4) M12 Bo1ts, (8) M12 Lock Washers, (8) M12 Flat Washers. Torque to 40 ft-lbs.

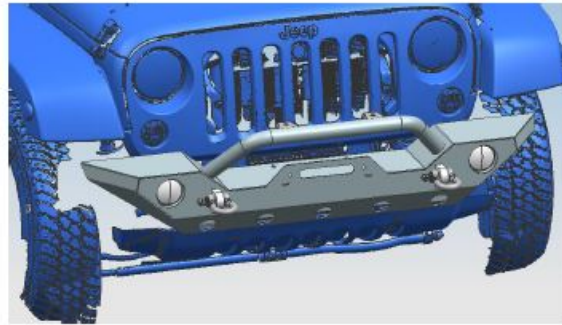

(Fig 9) Install the D-Ring brackets to the bumper. Plug the factory fog light harness into the fog lights. Installation is complete.

9. Slide the bumper in place. Using the supplied M12 hardware, secure each side of the bumper to the vehicle using 4 M12 Nuts, 4 M12 Bo1ts, 8 M12 Lock Washers, 8 M12 Flat Washers.(Figures 8)
10. Install the D-Ring brackets to the bumper. Plug the factory fog light harness into the fog lights. Installation is complete. (Figures 9)

Documents / Resources

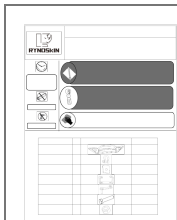

[RYNOSKIN RSFB-JK0001 Standard Width Front Bumper](#) [pdf] Instruction Manual
RSFB-JK0001 Standard Width Front Bumper, RSFB-JK0001, Standard Width Front Bumper, Width Front Bumper, Front Bumper, Bumper

References

- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.