

## S and B Filters

82-1004 Map  
Sensor Spacer Kit



# S and B Filters 82-1004 Map Sensor Spacer Kit Installation Guide

[Home](#) » [S and B FILTERS](#) » S and B Filters 82-1004 Map Sensor Spacer Kit Installation Guide 

### Contents

- [1 S and B Filters 82-1004 Map Sensor Spacer Kit](#)
- [2 BEFORE YOU START](#)
- [3 REQUIRED TOOLS](#)
- [4 INSTALLATION INSTRUCTION](#)
- [5 Documents / Resources](#)
  - [5.1 References](#)
- [6 Related Posts](#)

## S and B Filters

### S and B Filters 82-1004 Map Sensor Spacer Kit




## BEFORE YOU START

Thank you for purchasing your new S&B Filters Map Spacer. If at any time you need additional assistance with installation or have any other questions or comments, feel free to call our customer support team at [909-947-0015](tel:909-947-0015).

## REQUIRED TOOLS

- 7mm Wrench/Socket
- 8mm Wrench/Socket

Approx. Install Time: 15 min

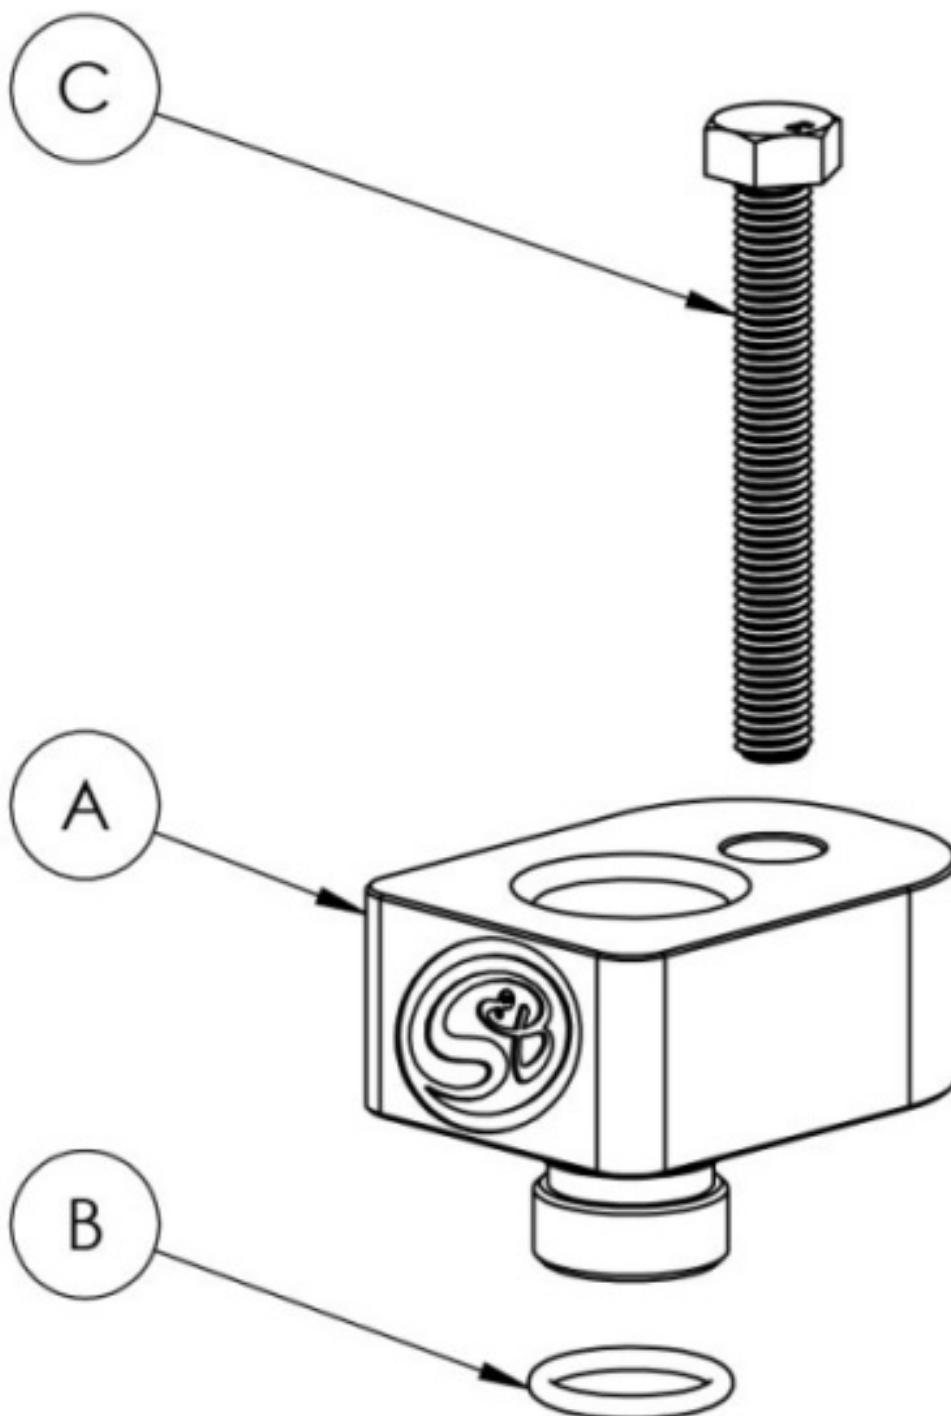

ITEM NO.	QTY.	PART NUMBER	DESCRIPTION
A	1	AI2514-00	AI2514-00,Black Anodize, Finished
B	1	AI2562-00	O-Ring, Buna N,1.5mm x10.5 mm,70A,
C	1	AI2561-00	Flange Bolt Stainless Steel, M5-0.8 x 40mm

## INSTALLATION INSTRUCTION

### STEP 1

Unplug the map sensor harness.



### STEP 2

Remove the map sensor bolt using a 7mm wrench. Be careful not to drop this bolt in your engine bay. Access is limited on the 2017-2019 trucks so the shorter the wrench the better.



### **STEP 3**

Remove the map sensor from the manifold. Pull up and wiggle on the spacer to get it free of the manifold.




### **STEP 4**

Install the provided O-ring onto the S&B Map sensor spacer and install the spacer into the manifold. Make sure the bolt hole is lined up with the threaded insert in the manifold.



### STEP 5

Install the map sensor with the original o ring into the S&B spacer. Again, make sure the bolt hole is lined up with both the hole in the spacer and the threaded insert in the manifold.

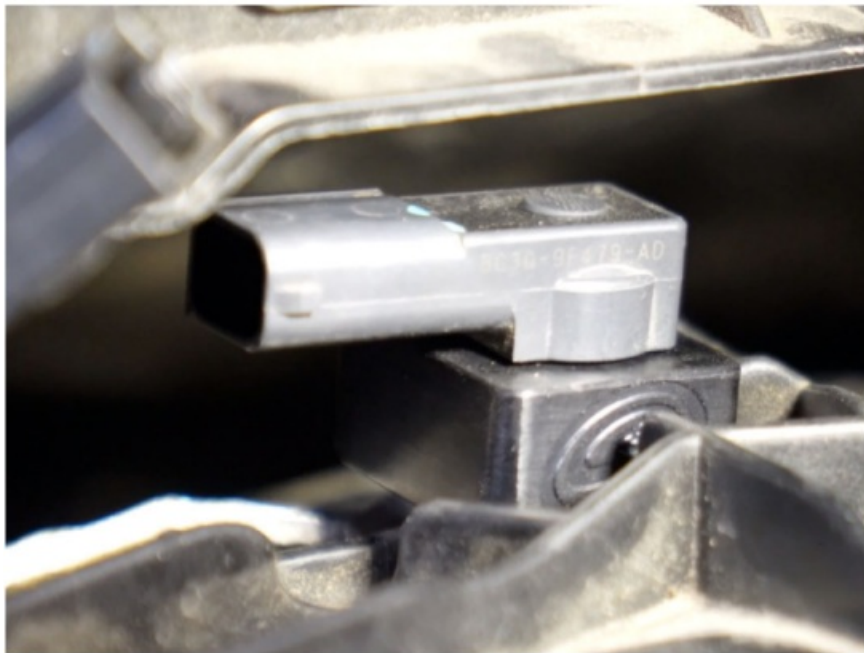

### STEP 6

Apply thread locker to the new bolt included with the S&B kit.





### **STEP 7**

Thread the bolt in as far as possible by hand and then use a 8mm wrench to snug it up and complete the last few rotations. Be careful not to overtighten the bolt.




### **STEP 8**

Reconnect the map sensor harness.



## Documents / Resources

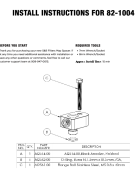	<p><a href="#">S and B Filters 82-1004 Map Sensor Spacer Kit</a> [pdf] Installation Guide 82-1004, 82-1004 Map Sensor Spacer Kit, 82-1004, Map Sensor Spacer Kit, Sensor Spacer Kit, Spacer Kit, Kit</p>
--	--

## References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.