

SAGITINE Shanghai 14-Box Stand



SAGITINE Shanghai 14 Box Stand Instructions

[Home](#) » [SAGITINE](#) » SAGITINE Shanghai 14 Box Stand Instructions 

Contents

- 1 SAGITINE Shanghai 14-Box Stand
- 2 Parts
- 3 INSTALLATION
- 4 Documents / Resources
 - 4.1 References
- 5 Related Posts

SAGITINE

SAGITINE Shanghai 14-Box Stand





Specifications:

- Product Name: SHANGHAI 14 BOX STAND
- Tools Required for Assembly: No 2 Phillips Head Screwdriver, No 4 Allen Key (Hex)


A No 2 Phillips Head Screwdriver



A No 4 Allen Key (Hex)

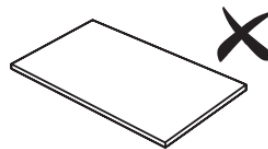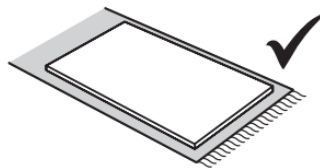


- Parts Included:
 - Vertical Frame – Mid x 1
 - Vertical Frame – Side L x 1
 - Vertical Frame – Side R x 1
 - Timber Top x 1
 - Base Plate x 2
 - Rear Brace Short x 2
 - Rear Brace Long x 1

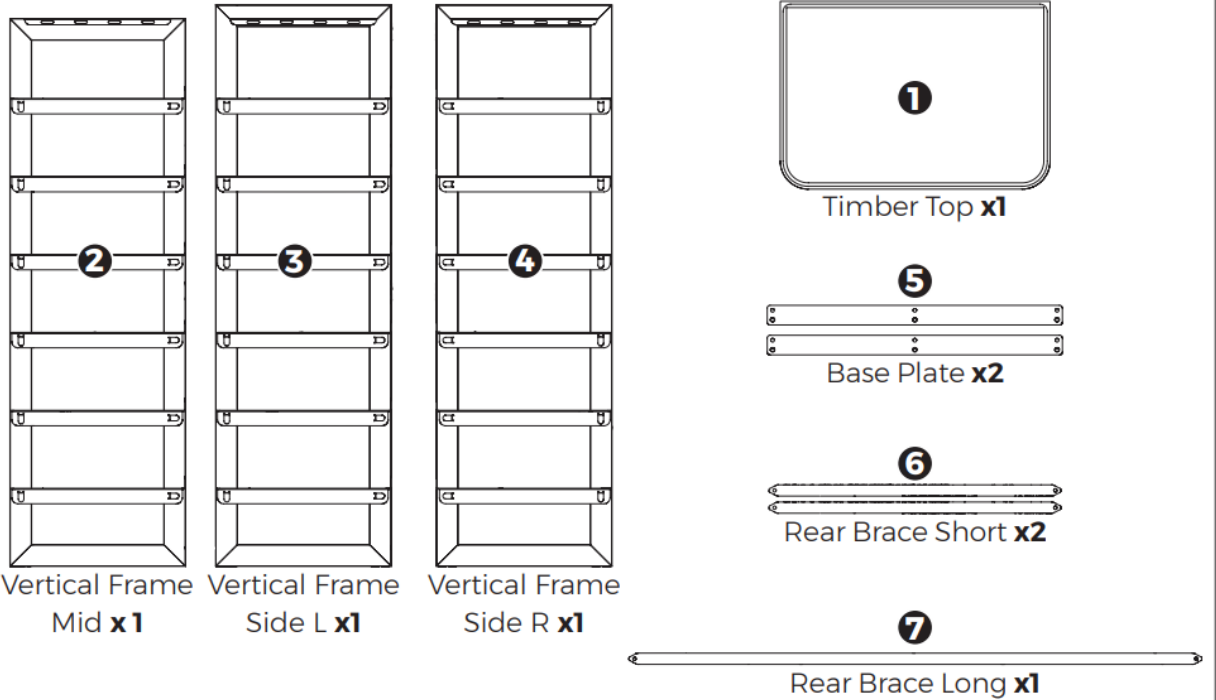Parts:

- **Hardware Included:**

- Self-tapping screws 13mm long x 12
- Machine Screws 20mm long x 13
- Screw-In Feet x 4

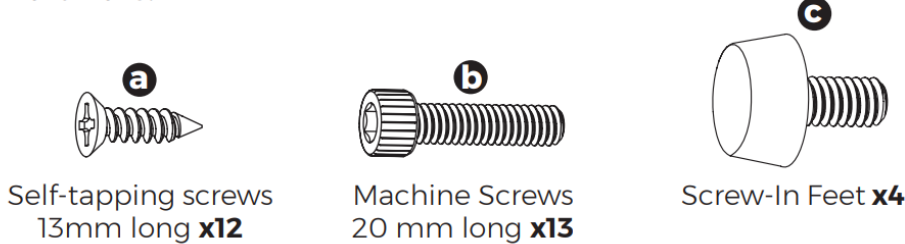Hardware:**Assembly Instructions****Step 1:**

Place a clean towel or blanket on the ground first to place the Timber Top on to avoid scratching or marking the timber.

1. Place the Timber Top upside down on top of the towel or blanket on the ground so that the holes are showing.
2. Place the Vertical Frame – Mid on top of the Timber Top making sure the holes in the timber and the brackets are aligned.
3. Fasten the Frame to the Timber Top with the 6x Self Tapping screws.

Step 2:

Attach both Vertical Frames – Side L and R to the Timber Top as shown using 6x Self Tapping screws.

1. Ensure all Frames are in line with the rear edge of the Timber Top.
2. Fasten the Frame to the Timber Top with the 6x Self Tapping screws.

Step 3:

Place the Base Plates across the three Vertical Frames as shown, aligning the holes with the Threaded Inserts.

1. Fasten the Base Plates to the Vertical Frames with 6x Machine Screws and 4x Screw-In Feet.

Step 4:

Install the Rear Braces by aligning holes in the brace with the Threaded Inserts in the Vertical Frames.

1. Fasten with 7x Machine Screws.

Flip your Shanghai Stand so that the Timber Top is upright, insert your 14 Milan Boxes and enjoy your new Sagittine piece.

FAQ (Frequently Asked Questions):

- Q: Do I need any additional tools for assembly?
A: No, you will only need a No 2 Phillips Head Screwdriver and a No 4 Allen Key (Hex) as provided.
- Q: Can I assemble the stand-alone?
A: It is recommended to have assistance when assembling to ensure stability and ease of assembly.

TOOLS REQUIRED

To complete the assembly of your Shanghai Stand you will need the following tools:

- A No 2 Phillips Head Screwdriver
- A No 4 Allen Key (Hex)


Within your delivery, you'll find the following parts and hardware

Parts

Hardware:

INSTALLATION


- Step 1 Place a clean towel or blanket on the ground first to place the Timber Top on to avoid scratching or marking the timber. Place the Timber Top upside down on top of the towel or blanket on the ground so that the holes are showing.

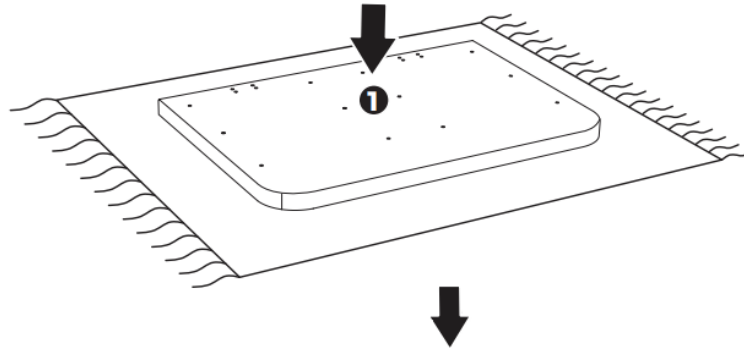

Place the Vertical Frame – Mid on top of the Timber Top making sure the holes in the timber and the brackets are aligned.


Fasten the Frame to the Timber Top with the 6x Self Tapping screws.

Place the Vertical Frame - Mid on top of the Timber Top making sure the holes in the timber and the brackets are aligned.

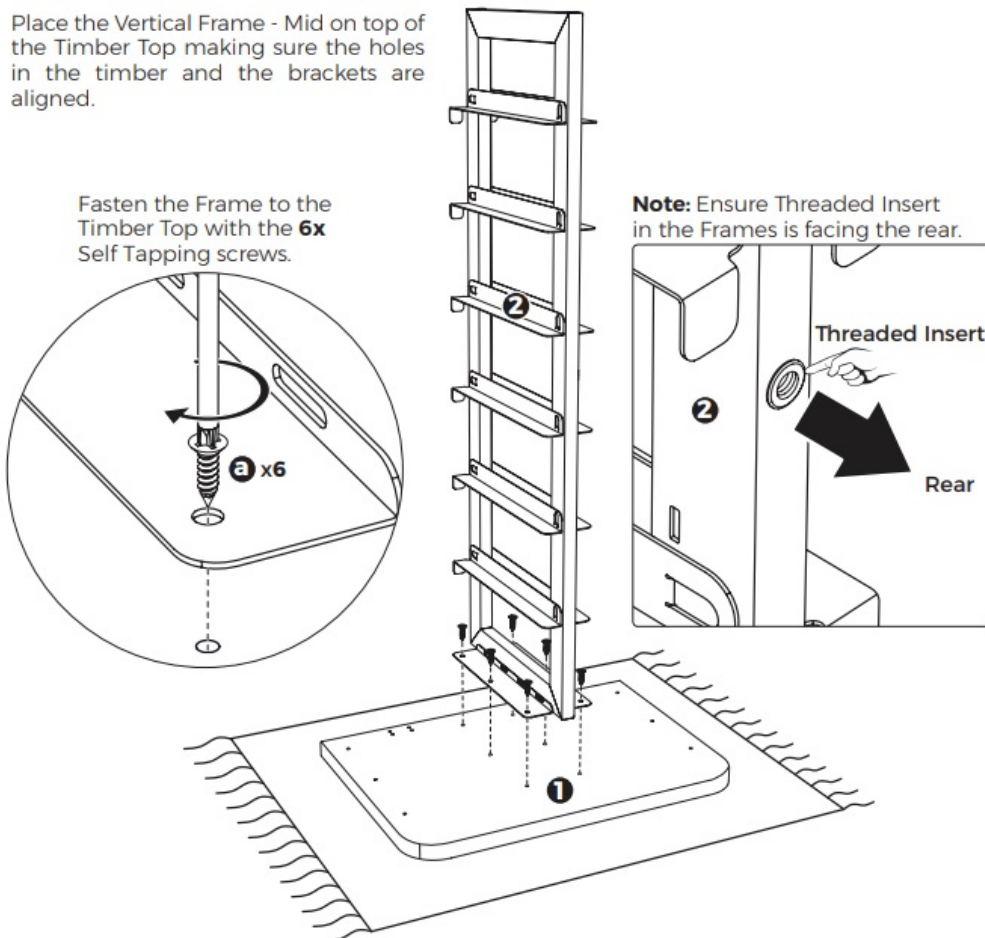


Note: Ensure the Threaded Insert in the Frames is facing the rear.


- Step 2 Attach both Vertical Frames – Side L and R to the Timber Top as shown using 6x Self Tapping screws.

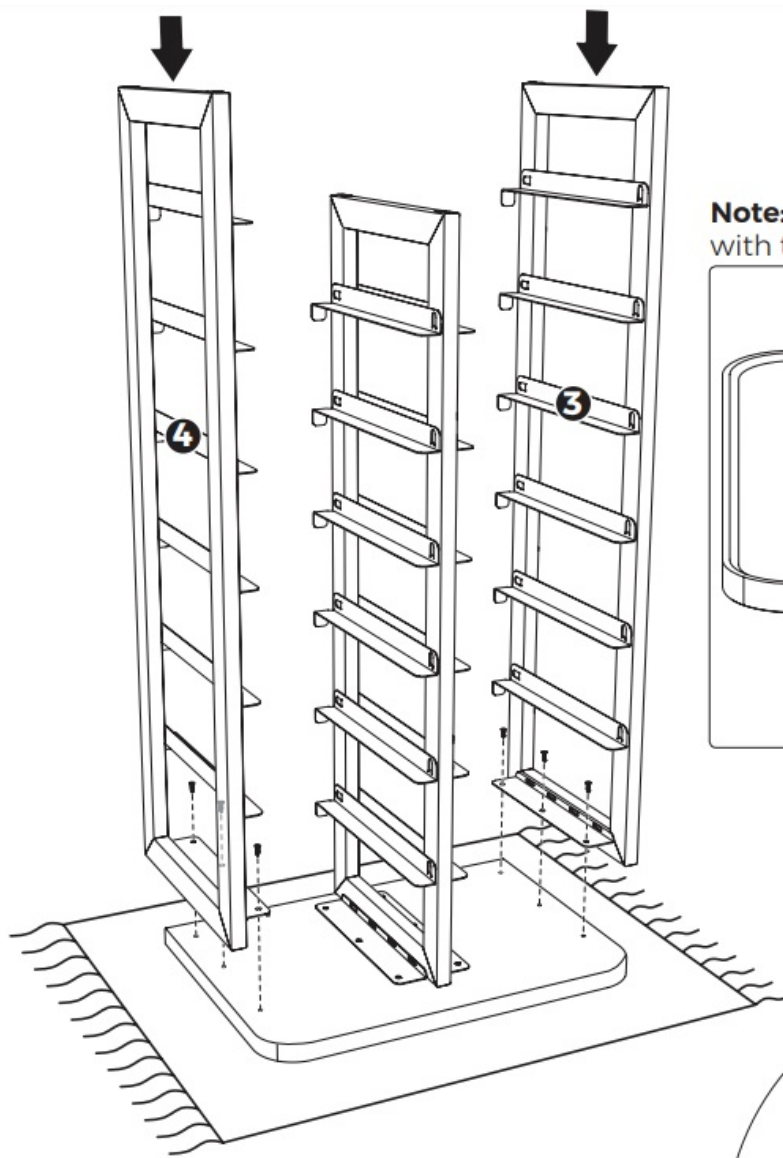


Note: Ensure all Frames are in line with the rear edge of the Timber Top.

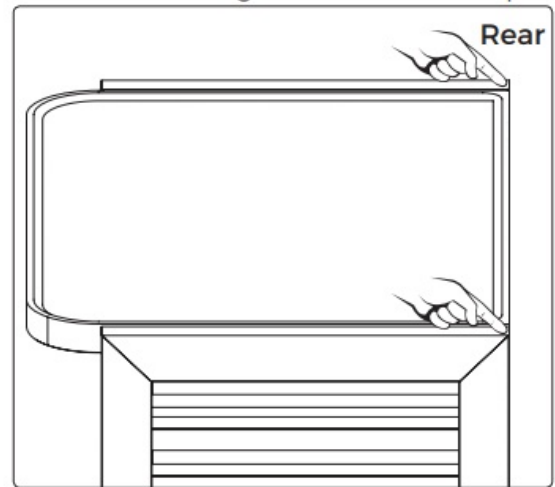

Fasten the Frame to the Timber Top with the **6x** Self Tapping screws.

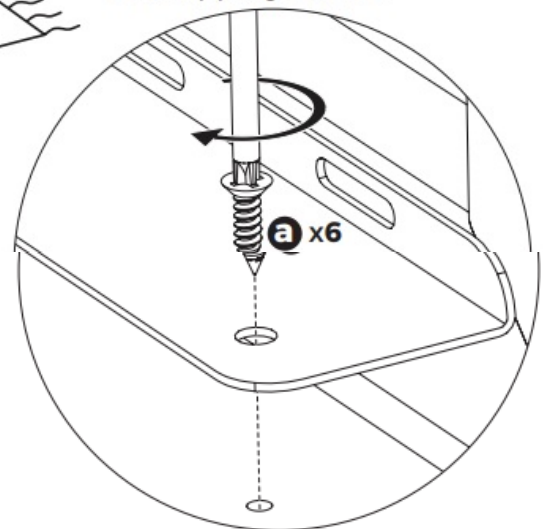

Note: Ensure Threaded Insert in the Frames is facing the rear.

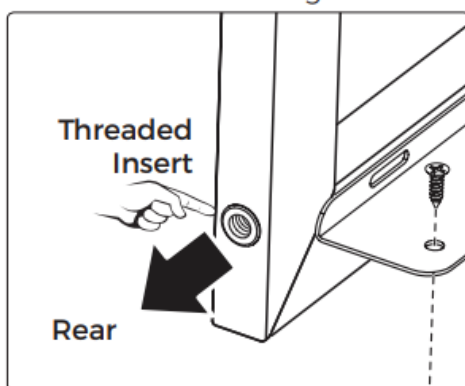


Note: Ensure all Frames are in line with the rear edge of the Timber Top.


Note: Ensure the Threaded Insert in the Frames is facing the rear.

- Step 3 Place the Base Plates across the three Vertical Frames as shown, aligning the holes with the Threaded Inserts.



Fasten the Base Plates to the Vertical Frames with 6x Machine Screws and 4x Screw-In Feet.

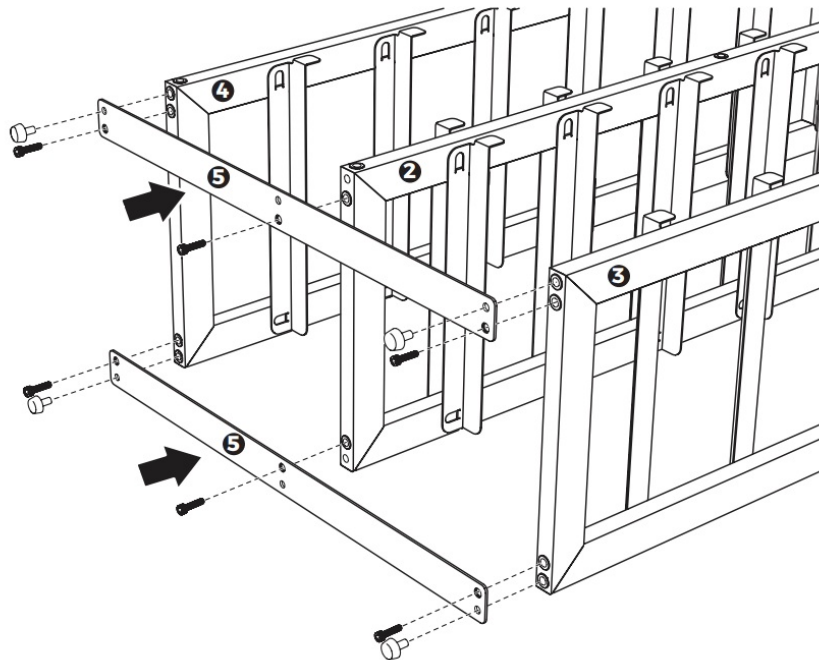

Fasten the Base Plates to the Vertical Frames with **6x** Machine Screws and **4x** Screw-In Feet.

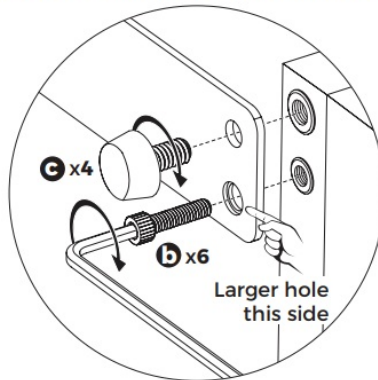


- Step 4 Install the Rear Braces by aligning holes in the brace with the Threaded Inserts in the Vertical Frames. Flip your Shanghai Stand so that the Timber Top is upright, insert your 14 Milan Boxes, and enjoy your new Sagittine piece.

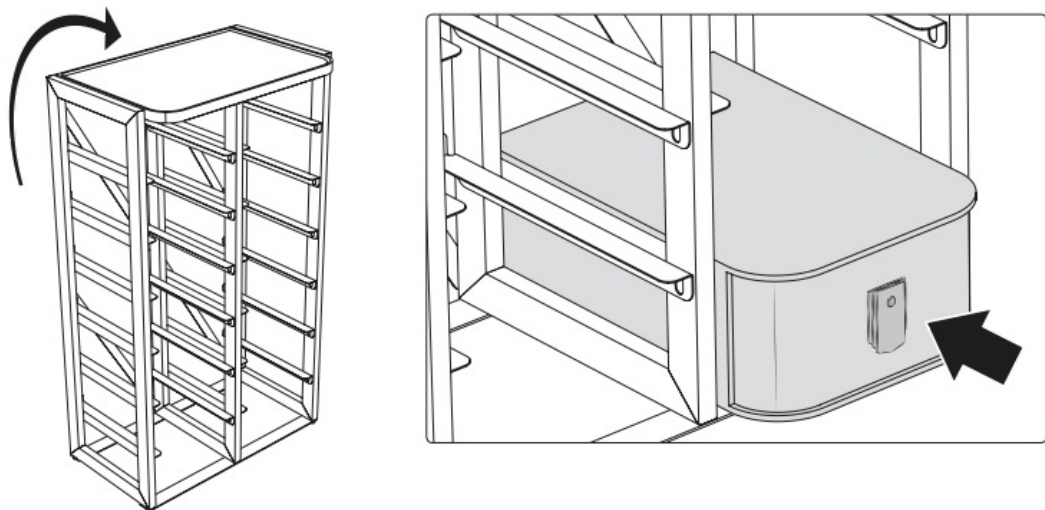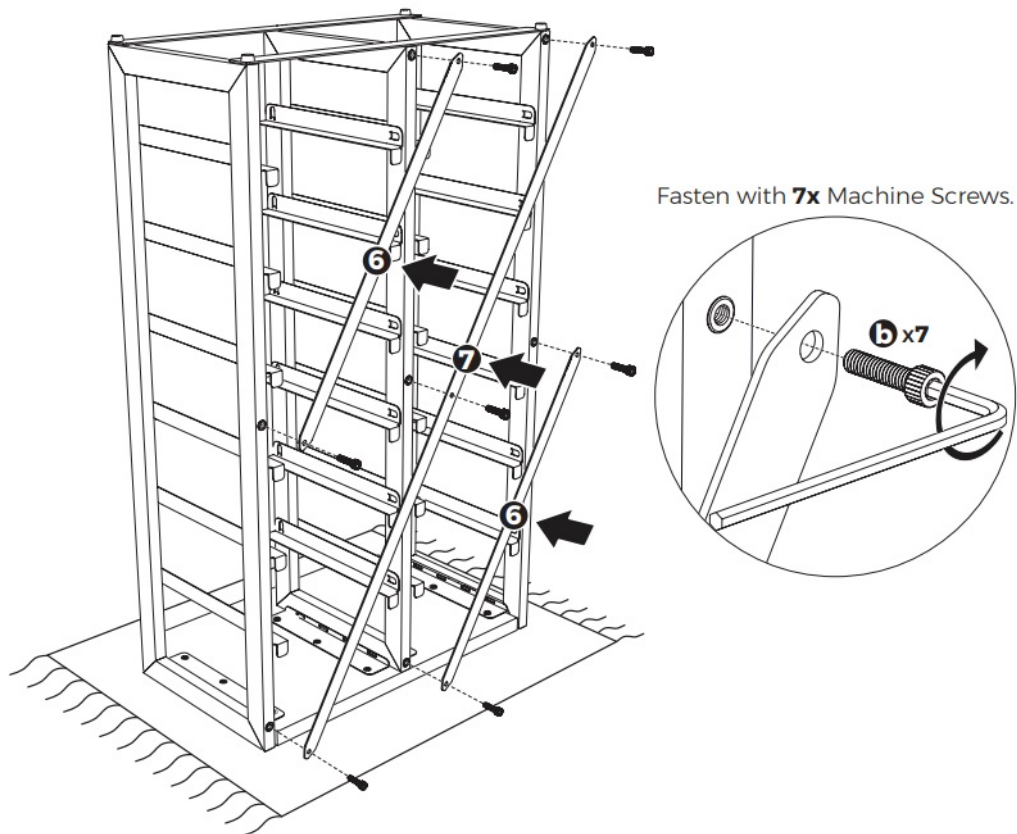

Sagitine – Storage you want to see www.sagitine.com

Documents / Resources

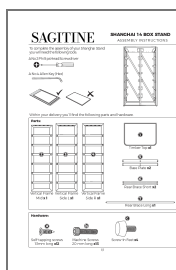

[SAGITINE Shanghai 14 Box Stand](#) [pdf] Instructions
Shanghai 14 Box Stand, Shanghai 14, Box Stand, Stand

References

-  [Sagitine | Stylish Shoe Boxes & Storage Boxes | Shoe Stands & Racks – Sagitine](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.